


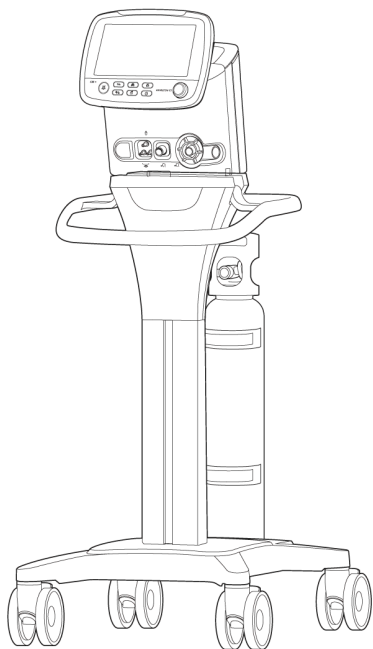

HAMILTON-C3

Operator's Manual

REF 160005

Software version 2.0.x

10103184/00-USA | 2021-02-12

CE 0197

HAMILTON
MEDICAL
Intelligent Ventilation since 1983

Operator's Manual

HAMILTON-C3

2021-02-12

10103184/00

© 2021 Hamilton Medical AG. All rights reserved. Printed in Switzerland.

No part of this publication may be reproduced, stored in a database or retrieval system, or transmitted in any form or by any means, electronic, mechanical, or by photocopying, recording, or otherwise, without prior written permission of Hamilton Medical AG.

This document may be revised, replaced, or made obsolete by other documents by Hamilton Medical AG at any time and without notice. Ensure that you have the most current applicable version of this document; if in doubt, contact the technical support department of Hamilton Medical AG, Switzerland. While the information set forth herein is believed to be accurate, it is not a substitute for the exercise of professional judgment.

Nothing in this document shall limit or restrict in any way Hamilton Medical AG's right to revise or otherwise change or modify the equipment (including its software) described herein, without notice. In the absence of an express, written agreement to the contrary, Hamilton Medical AG has no obligation to furnish any such revisions, changes, or modifications to the owner or user of the equipment (including software) described herein.

The equipment must be operated, serviced, or upgraded only by trained professionals. Hamilton Medical AG's sole responsibility with respect to the equipment and its use is as stated in the limited warranty provided in the device *Operator's Manual*.

Hamilton Medical AG shall not be liable for any loss, cost, expense, inconvenience, or damage that may arise out of misuse of the product, or if non-Hamilton Medical AG parts were used when replacing parts, or if serial numbers were amended, deleted, or removed.

If returning parts to Hamilton Medical AG, be sure to use the standard Hamilton Medical returned goods authorization (RGA) procedure. Disposal of parts shall follow all local, state, and federal regulation with respect to environmental protection.

Hamilton Medical AG will make available, on request, circuit diagrams, component parts lists, descriptions, calibration instructions, or other information that will assist appropriately trained personnel to repair those parts of the equipment designated by Hamilton Medical AG to be repairable.

For all proprietary as well as third-party trademarks used by Hamilton Medical AG, see www.hamilton-medical.com/trademarks. Product and/or company names marked with a [§] symbol may be the trademarks and/or registered trademarks of their respective owners, including but not limited to Aerogen[§], Nihon Kohden[§], Masimo[§], Masimo SET[§], Masimo rainbow SET[§], Capnostat[§], Bluetooth[§], and Wi-Fi[§].

Manufacturer

Hamilton Medical AG
Via Crusch 8, CH-7402 Bonaduz
Switzerland
Phone: (+41) 58 610 10 20
Fax: (+41) 58 610 00 20
info@hamilton-medical.com
www.hamilton-medical.com

Distributor in USA

Hamilton Medical, Inc.
4665 Aircenter Circle
Reno, NV 89502
Phone: (775) 858-3200
Toll-free: (800) 426-6331
Fax: (775) 856-5621
info@hamiltonmedical.com

	Preface	15
Chapter 1	Safety information	19
1.1	Overview.....	20
1.2	Electromagnetic susceptibility.....	20
1.3	Fire and other hazards.....	21
1.4	General operation and setup.....	21
1.4.1	General operation and setup.....	21
1.4.2	Electrical: power and batteries.....	22
1.4.3	Gas supply	23
1.4.4	USB ports.....	24
1.5	Setting up for ventilation.....	25
1.5.1	Patient breathing circuits, components, and accessories	25
1.5.2	Preoperational check and tests	25
1.5.3	Humidifier.....	26
1.5.4	CO2 sensor setup and operation	26
1.5.5	Nebulization.....	28
1.6	Ventilating the patient	28
1.6.1	Specifying patient settings.....	29
1.6.2	Neonatal ventilation.....	29
1.6.3	Apnea backup.....	30
1.6.4	TRC settings.....	30
1.6.5	P/V Tool Pro	30
1.6.6	Noninvasive ventilation.....	30
1.7	Monitoring and alarms	31
1.8	Using the trolley.....	31

1.9	Maintenance	32
1.9.1	General maintenance, cleaning, and disinfection	32
1.9.2	Preventive maintenance	33
1.9.3	O2 cell	33
1.10	Service and testing	34
Chapter 2	System overview	35
2.1	Overview	36
2.1.1	Standard features and options	36
2.2	Physical descriptions	39
2.2.1	About the ventilator	40
2.2.2	About the main display	43
2.2.3	About the patient breathing circuits	44
2.2.4	About the trolley and mounting variations	49
2.3	Navigating the windows and controls	49
2.3.1	Accessing windows	50
2.3.2	Adjusting controls	50
2.3.3	Selecting list items	50
Chapter 3	Preparing the ventilator	51
3.1	Overview	52
3.2	Connecting to a power source	52
3.2.1	Connecting to DC power	52
3.2.2	Using battery power	52
3.3	Connecting the oxygen supply	53
3.3.1	Using a low-pressure oxygen supply	54
3.3.2	Connecting the oxygen supply to the ventilator	54
3.3.3	Selecting the oxygen source type	54

3.4	Setting up the patient breathing circuit	54
3.4.1	Breathing circuit connections on the ventilator	55
3.4.2	Working with the expiratory valve set.....	55
3.4.3	Selecting the breathing circuit components	56
3.4.4	Assembling the patient breathing circuit	57
3.4.5	Positioning the breathing circuit	58
3.5	Turning the ventilator on and off	58
Chapter 4	Setting up external devices and sensors.....	59
4.1	Overview.....	60
4.2	Setting up a humidifier.....	60
4.3	Setting up CO2 monitoring	60
4.3.1	Mainstream CO2 measurement.....	61
4.3.2	Sidestream CO2 measurement	62
4.4	Setting up SpO2 monitoring.....	63
4.5	Enabling sensors	64
4.6	Setting up nebulization	64
4.7	Connecting to external devices.....	65
Chapter 5	Specifying ventilation settings	67
5.1	Process overview	68
5.2	Selecting the patient group	68
5.2.1	About Quick setups: preconfigured settings	69
5.3	Entering patient data	69
5.4	Performing the preoperational check, tests, and calibrations	70
5.4.1	Performing the preoperational check.....	71
5.4.2	Performing the breathing circuit Tightness test.....	72
5.4.3	Calibrating the adult/pediatric flow sensor	73
5.4.4	Calibrating the O2 cell	74
5.4.5	Performing a zero calibration of the CO2 sensor/adaptor.....	75
5.4.6	Testing the alarms.....	77

5.5	Selecting the ventilation mode	77
5.5.1	Reviewing and adjusting ventilation settings.....	78
5.5.2	About the trigger types	79
5.5.3	About Apnea backup ventilation	80
5.5.4	About tube resistance compensation (TRC)	81
5.6	Setting alarm limits	83
5.6.1	About the Oxygen alarm limits	85
5.7	Starting ventilation	85
5.8	Stopping ventilation	85
5.9	About the control parameters	86
Chapter 6	Specifying neonatal settings	91
6.1	Setting up for neonatal ventilation	92
6.1.1	Setting the patient group and weight.....	92
6.1.2	Setting up the patient breathing circuit	93
6.2	Performing the preoperational check, tests, and calibrations	95
6.2.1	Calibrating the neonatal flow sensor	95
6.3	Selecting the ventilation mode	97
6.4	Setting the patient weight for ventilation	97
6.5	Alarms for neonatal ventilation	97
6.6	O2 enrichment for neonates	97
Chapter 7	Ventilation modes	99
7.1	Overview.....	100
7.1.1	Breath types and timing options.....	100
7.1.2	Ventilation modes	100
7.1.3	Ventilation controls and settings	102
7.2	Volume-controlled modes, flow control.....	104
7.2.1	(S)CMV mode	104
7.2.2	SIMV mode	105

7.3	Volume-targeted modes, adaptive pressure control	106
7.3.1	APVcmv / (S)CMV+ mode.....	107
7.3.2	APVsimv / SIMV+ mode.....	108
7.4	Pressure-controlled modes	110
7.4.1	PCV+ mode	110
7.4.2	PSIMV+ mode	111
7.4.3	PSIMV+ mode with PSync	112
7.4.4	DuoPAP mode.....	113
7.4.5	APRV mode.....	114
7.4.6	SPONT mode.....	115
7.5	Intelligent Ventilation	116
7.5.1	ASV mode.....	116
7.6	Noninvasive modes	118
7.6.1	NIV mode.....	119
7.6.2	NIV-ST mode.....	120
7.6.3	nCPAP-PS mode.....	121
7.7	Special conditions	122
7.7.1	Sensor Failure mode.....	122
7.7.2	Safety ventilation	122
7.7.3	Ambient state	123
7.8	Working with noninvasive modes.....	123
7.8.1	Required conditions for use.....	123
7.8.2	Contraindications.....	124
7.8.3	Potential adverse reactions.....	124
7.8.4	Control settings in noninvasive ventilation.....	124
7.8.5	Alarms in noninvasive ventilation.....	125
7.8.6	Monitored parameters in noninvasive ventilation.....	125
7.8.7	Additional notes about using noninvasive ventilation.....	126

7.9	Working with ASV	126
7.9.1	Contraindications.....	126
7.9.2	Setting up ASV on the ventilator	127
7.9.3	Clinical workflow with ASV	127
7.9.4	Maintaining adequate ventilation	129
7.9.5	Reviewing alarm settings.....	129
7.9.6	Monitoring ASV	130
7.9.7	Weaning	131
7.9.8	Functional overview	132
Chapter 8	Monitoring ventilation	139
8.1	Overview.....	140
8.2	Viewing numeric patient data	140
8.2.1	About the main monitoring parameters (MMP)	140
8.2.2	Viewing patient data in the Monitoring window	141
8.3	Viewing graphical patient data.....	142
8.3.1	Selecting a display layout	142
8.3.2	Selecting display options	143
8.3.3	Working with waveforms.....	144
8.3.4	Working with Trend graphs.....	147
8.3.5	Working with loops.....	148
8.4	Working with Intelligent panels.....	149
8.4.1	Dynamic Lung panel: real-time ventilation status	150
8.4.2	Vent Status panel: real-time ventilator dependence status	152
8.4.3	ASV Graph panel: real-time patient condition and targets	154
8.5	About the monitored parameters	154
8.6	Viewing patient ventilation time.....	162
8.7	Viewing device-specific information	162

Chapter 9	Responding to alarms	163
9.1	Overview.....	164
9.1.1	Alarm limit indicators	166
9.1.2	Responding to an alarm	167
9.1.3	Temporarily silencing an alarm	167
9.2	About the alarm buffer	168
9.2.1	Accessing on-screen troubleshooting help.....	169
9.3	Adjusting alarm loudness (volume)	169
9.4	Troubleshooting alarms.....	170
Chapter 10	Ventilation settings and functions	187
10.1	Overview.....	188
10.2	Accessing settings during ventilation	188
10.2.1	Accessing patient data during ventilation	188
10.2.2	Accessing settings during ventilation	189
10.3	Entering/exiting Standby	190
10.4	Oxygen enrichment.....	191
10.4.1	Performing an open-suctioning maneuver	191
10.4.2	About closed-suctioning maneuvers.....	192
10.5	High flow oxygen therapy	192
10.5.1	Working with high flow oxygen therapy.....	193
10.6	Manual breath	193
10.7	Inspiratory and expiratory hold	194
10.7.1	Inspiratory hold.....	194
10.7.2	Expiratory hold.....	194
10.8	Working with a nebulizer	195
10.8.1	Working with a pneumatic nebulizer.....	195
10.9	Locking and unlocking the touch screen.....	195
10.10	Capturing a screenshot	196

10.11	Setting display options	196
10.11.1	Setting date and time.....	196
10.11.2	Day and night display brightness	197
10.12	About the Event log	197
10.12.1	Copying Event log data	198
Chapter 11	Working with P/V Tool	199
11.1	Overview.....	200
11.1.1	Conditions for use.....	200
11.1.2	Indications for use.....	201
11.1.3	Contraindications for use	201
11.2	Using the P/V Tool.....	201
11.3	Opening the P/V Tool	202
11.4	Adjusting the control settings.....	203
11.5	Performing a P/V Tool maneuver	204
11.5.1	Viewing data.....	204
11.5.2	Choosing the data to display.....	205
11.6	Analyzing the data	207
11.7	Using reference curves	207
11.8	Performing a recruitment maneuver	208
Chapter 12	Maintenance.....	209
12.1	Overview.....	210
12.2	Cleaning, disinfection, and sterilization	210
12.3	Preventive maintenance	214
12.4	Performing maintenance tasks	215
12.4.1	Maintaining the filters.....	215
12.4.2	Replacing the galvanic O2 cell	216
12.4.3	Charging and storing batteries.....	216
12.4.4	Replacing batteries.....	217
12.5	Repacking and shipping	218

Chapter 13	Configuration	219
13.1	Overview.....	220
13.2	Accessing Configuration mode.....	220
13.3	Configuring general settings	220
13.3.1	Selecting the default language	220
13.3.2	Selecting the units of measure	220
13.3.3	Enabling the communication interface	220
13.3.4	Setting the minimum alarm loudness (volume)	221
13.4	Selecting mode options.....	221
13.4.1	Setting breath timing options.....	221
13.4.2	Choosing the mode naming convention.....	221
13.4.3	Choosing the ASV version	221
13.5	Configuring MMPs.....	222
13.6	Defining Quick setups	222
13.6.1	Configuring individual setup settings.....	222
13.6.2	Selecting a default Quick setup	223
13.7	Activating SpO2 and CO2 measurement	223
13.8	Copying configuration settings.....	223
13.9	Configuring device options	224
13.9.1	Reviewing installed options	224
13.9.2	Adding software options.....	224
13.9.3	Activating hardware options	224
13.9.4	Removing options	225
Chapter 14	Parts and accessories.....	227
14.1	Overview.....	228

Chapter 15 Specifications.....235

15.1 Physical characteristics..... 236

15.2 Environmental requirements..... 237

15.3 Pneumatic specifications 238

15.4 Electrical specifications 239

15.5 Control settings 241

15.6 Monitored parameters 247

15.7 Alarms 254

15.8 Configuration 257

15.9 ASV technical data 259

15.10 Ventilator breathing system specifications 261

15.11 Technical performance data 262

15.11.1 Accuracy testing..... 266

15.11.2 Essential performance 266

15.12 Functional description of ventilator system 267

15.12.1 Gas supply and delivery..... 267

15.12.2 Gas monitoring with the flow sensor..... 269

15.12.3 Pneumatic diagram 270

15.13 Symbols used on device labels and packaging 271

15.13.1 Symbols used on the trolley..... 273

15.14 Standards and approvals 273

15.15 Disposal and year of manufacture 274

15.16 Warranty..... 275

Glossary.....277

Index285

HAMILTON-C3 Documentation

This guide is part of a documentation suite that includes, among others, the following documents:

Table 1. HAMILTON-C3 documentation suite

Document title	Description
<i>Operator's Manual (this guide)</i>	Provides detailed information about the setup and use of the HAMILTON-C3 ventilator.
<i>Pulse Oximetry Instructions for Use</i>	Provides setup and use information for using SpO2 and related sensors with the ventilator. ¹
<i>Volumetric Capnography User Guide</i>	Provides reference information for CO2 capnography. ¹
<i>Communication Interface User Guide</i>	Provides an overview of the communication interface, including how to connect the ventilator to external devices for data communication and support for nurse call remote alarms.
<i>Service Manual</i>	Provides information about installing and setting up the medical equipment, as well as additional technical and servicing information for the ventilator.
<i>EMC Declarations Guide</i>	Provides emissions and EMC-related safety and use information.

Be sure to read the documentation before using the device or accessories.

To download the latest version of this manual or other documents, free of charge, visit the MyHamilton website. To register, go to: <https://www.hamilton-medical.com/MyHamilton>

Hamilton Medical offers the Hamilton Medical College, which provides a variety of learning modules free of charge. To register, go to: <http://college.hamilton-medical.com>

¹ If option is installed.

Conventions used in this guide

In this manual:

- Button and tab names are shown in a **bold** font.
- The notation **XX > XX** shows the sequence of buttons/tabs to touch to open the associated window.
For example, the text "Touch **System** > **Settings**" means touch the **System** button, then touch the **Settings** tab.
- Window names are shown using the sequence of buttons/tabs used to open them.
For example, "Alarms > Limits 2 window" means the window is accessed by touching the **Alarms** button, then the **Limits 2** tab.
- *Software version*: The software version for the ventilator is displayed in the **System > Info** window and should match the version on the title page of this manual.
- A green check mark  or button  indicates a selected item or feature.
- The graphics shown in this manual may not exactly match what you see in your environment.
- Some figures use callouts in a white circle with a blue border.
 These figures may have an associated legend table, or may provide the legend in the figures title, if a single item. Callouts may be numeric or alphabetic. Callouts are *unrelated* to any nearby procedures and refer only to the figures themselves and their associated legend.

- Some figures use small dark blue callouts.
 These callouts show the sequence of steps. They are *not* directly related to the numbering in the text of any associated procedure.
- Not all features or products are available in all markets.
- Product description and order number may differ depending on region.
- *Units of measure*: Pressure is indicated in cmH₂O, length in cm, and temperature in degrees Celsius (°C). The units of measure for pressure and length are configurable.
- All patient-related pressure, volume, and flow measurements are expressed in BTPS (body temperature and pressure saturated).
- Pneumatic-related pressure, volume, and flow measurements are expressed in STPD (standard temperature and pressure dry).
- The graphics shown in this manual may display either of the product logos: HAMILTON-C3 or HAMILTON-C3S. The HAMILTON-C3S is not available in all markets.

Safety messages are displayed as follows:



WARNING

Alerts the user to the possibility of injury, death, or other serious adverse reactions associated with the use or misuse of the device.



CAUTION

Alerts the user to the possibility of a problem with the device associated with its use or misuse, such as device malfunction, device failure, damage to the device, or damage to other property.

NOTICE

Emphasizes information of particular importance.

In tables, safety messages are indicated as follows:



WARNING!



CAUTION!



NOTICE!

Intended use

The HAMILTON-C3 ventilator is intended to provide positive pressure ventilatory support to adults and pediatrics, and optionally infants and neonates.

Intended areas of use:

- In the intensive care ward, intermediate care ward, emergency ward, long term acute care hospital, or in the recovery room
- During transfer of ventilated patients within the hospital

The HAMILTON-C3 ventilator is a medical device intended for use by qualified, trained personnel under the direction of a physician and within the limits of its stated technical specifications.



CAUTION

Federal law restricts this device to sale by or on the order of a physician.

Safety information

1.1	Overview.....	20
1.2	Electromagnetic susceptibility.....	20
1.3	Fire and other hazards.....	21
1.4	General operation and setup.....	21
1.5	Setting up for ventilation.....	25
1.6	Ventilating the patient	28
1.7	Monitoring and alarms.....	31
1.8	Using the trolley.....	31
1.9	Maintenance.....	32
1.10	Service and testing	34

1.1 Overview

This chapter provides safety information related to setting up and operating the ventilator and trolley, as well as providing service.

Be sure to review this Operator's Manual before using the ventilator and any accessories.

Be sure to read the Instructions for Use provided with any devices and accessories used with the ventilator before use.

Carefully review all sections of this safety chapter before setting up the ventilator and accessories, and ventilating the patient.

If you have questions about any of the information in this manual, contact your Hamilton Medical representative or technical service personnel.

1.2 Electromagnetic susceptibility

WARNING

- **MR UNSAFE.** Keep away from magnetic resonance imaging (MRI) equipment. The ventilator poses unacceptable risks to the patient, medical staff, or other persons within the MR environment.
- Correct function of the device may be impaired by the operation of high-frequency surgical equipment, microwaves, shortwaves, or strong magnetic fields in close proximity.
- Follow precautions for electrostatic discharge (ESD) and electromagnetic interference (EMI) to and from the ventilator and any connected devices and accessories.
- Use of accessories, transducers, and cables other than those specified by Hamilton Medical can result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment, and may result in improper operation.
- Ensure a minimum of 15 cm (6 in) distance between the HAMILTON-C3 and any 134.2 kHz RFID equipment.
- Portable RF communications equipment, including peripherals such as antenna cables and external antennas, should be placed no closer than 30 cm (12 in) to any part of the ventilator, including any specified cables. Otherwise, degradation of the performance of this equipment can occur.
- Certain RF transmitting devices (cellular phones, RFID equipment, walkie-talkies, cordless phones, paging transmitters, etc.) emit radio frequencies that could affect ventilator performance if operated too close to the ventilator. Be aware of possible radio frequency interference if portable devices are operated in close proximity to the ventilator.
- The emissions characteristics of this equipment make it suitable for use in industrial areas and hospitals (CISPR 11, class A). If it is used in a residential environment (for which CISPR 11, class B is normally required) this equipment might not offer adequate protection to radio-frequency communication services. The user might need to take mitigation measures, such as relocating or reorienting the equipment.

The HAMILTON-C3 complies with the IEC 60601-1-2 EMC (Electromagnetic Compatibility) Collateral Standard.

The ventilator requires special precautions regarding electromagnetic compatibility (EMC). It must be installed and put into service according to the EMC information provided in the ventilator *EMC Declarations* (PN 624895).

Portable and mobile RF communications equipment can affect the ventilator and all medical electrical equipment.

1.3 Fire and other hazards

WARNING

- It is *not* permitted to use any of the equipment with flammable gases or anesthetic agents, or in insufficiently ventilated areas. Danger of fire!
- It is *not* permitted to use the ventilator with helium or mixtures of helium.
- Do *not* use the ventilator with any equipment or high-pressure gas hoses that are worn or contaminated with oil or grease.
- Highly compressed oxygen together with flammable sources could lead to spontaneous explosions.
- In case of fire, immediately secure the patient's ventilatory needs, turn off the ventilator, and disconnect it from its gas and electrical sources.
- Do *not* use if primary power source cables are damaged.
- The HAMILTON-C3 can be used in an oxygen-enriched environment. To reduce the risk of fire, use only breathing circuits intended for use in oxygen-enriched environments. Do *not* use antistatic or electrically conductive tubing.

1.4 General operation and setup

This section provides the following safety information:

- General operation and setup
- Electrical: power and batteries
- Gas supply
- USB ports

1.4.1 General operation and setup

WARNING

- Modifications to the device and any accessories are *not* permitted.
- An O2 cell must be installed.
- It is not permitted to use the ventilator with nitric oxide or mixtures of nitric oxide.
- In case of ventilator failure, the lack of immediate access to appropriate alternative means of ventilation can result in patient death.
- An alternative means of ventilation must be available whenever the ventilator is in use. If a fault is detected in the ventilator or its life-support functions are in doubt, disconnect the ventilator from the patient and immediately start ventilation with an alternate device (for example, a resuscitation bag), using PEEP and/or increased oxygen concentration when appropriate. The ventilator *must* be removed from clinical use and serviced by a Hamilton Medical authorized service engineer.

- Use only parts and accessories specified in Chapter 14 and in the product e-catalog, or that are specified as being compatible with this ventilator. Doing so ensures proper ventilation operation, avoids degraded performance, and keeps your warranty in force.
- The use of this equipment is restricted to one patient at a time.
- Only use the ventilator and its components and accessories according to the intended use and as described in the associated *Instructions for Use*.
- Do *not* connect any component or device to the exhaust port of the expiratory valve unless authorized by Hamilton Medical.
- The ventilator must *not* be used in a hyperbaric chamber.
- If there is damage to any part of the ventilator, do *not* use the device. Technical service is required.
- Do *not* simultaneously touch conductive components (for example, the USB port) or conductive parts of the ventilator enclosure and the patient.
- Additional equipment connected to medical electrical equipment must comply with the respective IEC or ISO standards. All configurations must comply with the requirements for medical electrical systems, IEC 60601-1, clause 16.
- Anybody connecting additional equipment to medical electrical equipment configures a medical system and is responsible for ensuring that the system complies with the requirements for medical electrical systems. Local laws take priority over the above-specified requirements.

- To prevent possible personal injury and equipment damage, use two people to lift the device when crossing thresholds and ensure the device is attached securely to the trolley or shelf.

CAUTION

- Do *NOT* cover the ventilator or position it in such a way that the operation or performance of the ventilator is adversely affected.
- To prevent possible patient injury, do *NOT* block the holes at the back and side of the ventilator. These holes are vents for the fresh air intake and the cooling fan.

NOTICE

- Any incident with the device leading to serious patient injury, death, or a potential threat to public health must be reported to the manufacturer and the relevant authorities.
- The ventilator provides automatic barometric pressure compensation.
- Due to the ventilator's base flow, the exhaust gas output is larger than the patient's actual exhaled volume.

1.4.2 Electrical: power and batteries

WARNING

- To ensure grounding reliability, use a special hospital-grade receptacle.
- When connecting the ventilator to primary power, it is not permitted to use any type of extension cable or multi-socket adapter.

- Ventilation stops if the battery or batteries are discharged and no external power supply is connected.
- The HAMILTON-C3 does not require protective earth grounding, because it is a class II device, as classified according to IEC 60601-1.
- Periodically check or replace the battery.
- Check the battery charge level before ventilating a patient and before unplugging the ventilator for transport or other purposes.
- The batteries will *not* charge if the ambient temperature is above 43°C.

CAUTION

To electrically isolate the ventilator electrical circuits from all poles of the primary power supply simultaneously, disconnect the power plug.

NOTICE

- Set up the ventilator in a location where the primary power supply is accessible.
- Only authorized service personnel may replace the power cable.
- Battery life indications are approximate. The actual battery life depends on ventilator settings, battery age, and level of battery charge. To ensure maximum battery life, maintain a full charge and minimize the number of complete discharges.
- After power has been interrupted, the device stores the last settings, including any specified alarm limits. Upon reconnection with the power supply, the device resumes ventilation with these stored settings.

1.4.2.1 Connecting to DC power

WARNING

- Connect the HAMILTON-C3 only to an onboard power circuit of an ambulance that supplies DC power between 12 and 24 V DC.

NOTICE

Use only cables supplied by Hamilton Medical.

1.4.3 Gas supply

CAUTION

Always check the status of the oxygen cylinders or other supply before using the ventilator during transport.

NOTICE

- To prevent damage to the ventilator, connect only clean, dry medical grade oxygen.
- When the ventilator is not in use, disconnect all gases.

1.4.3.1 Low-pressure oxygen supply

CAUTION

- *To reduce the risk of fire:*
 - Do NOT use a low-pressure oxygen source that delivers a flow greater than 15 l/min.
 - Ensure adequate ventilation at the rear of the ventilator.
 - Turn off the oxygen source when the ventilator is not in operation.

- *To prevent possible patient injury when using the ventilator with an oxygen concentrator, do not use a humidifier. Any humidifier system supplied with the concentrator must be removed before using the ventilator.*
- *The **Oxygen** control on the ventilator is not active when low-pressure oxygen is used. It is the operator's responsibility to control the oxygen setting.*
- *To prevent possible patient injury, use low-pressure oxygen only in cases where the low-pressure source can provide an adequate level of oxygenation.*
- *To prevent possible patient injury, ensure that an emergency backup oxygen supply (for example, a cylinder) is available in case the low-pressure oxygen source fails.*
- *To calibrate the O₂ cell, disconnect all O₂ supplies. Calibration is performed at a concentration of 21%.*
- *To protect the oxygen control system, do not supply both high- and low-pressure oxygen to the ventilator simultaneously.*

NOTICE

- Only use low-pressure hoses that comply with EN ISO 5359 to connect the device to the oxygen supply.
- Before starting ventilation, ensure that the selected gas source type, HPO or LPO², matches the connected gas source.

1.4.4 USB ports

WARNING

- During transfer of a ventilated patient, to prevent water intake, the ventilator USB port must be covered.
- Do not use the USB port to make a wireless connection of any kind.

NOTICE

- Before using the USB port, touch the ventilator to discharge any static electricity.
- You can only connect one item to the USB port at a time.
- The memory device must be USB 1.1 compatible.
- If you remove the USB drive before files are completely transferred, you must turn the ventilator off and on again to reset the USB port.
- Only the following components are allowed to be connected to the USB port:
 - USB passive memory drive
 - Hamilton Medical approved accessories, see your authorized representative

² Not available in all markets.

1.5 Setting up for ventilation

This section provides the following safety information:

- Patient breathing circuits, components, and accessories
- Performing preoperational checks and testing
- Humidifier
- CO2 monitoring setup and operation
- Nebulization
- SpO2 monitoring setup and operation
See the *Pulse Oximetry Instructions for use*.

1.5.1 Patient breathing circuits, components, and accessories

In addition to the information provided in this section, carefully review the information in Sections 1.3 and 1.4.

WARNING

- **To prevent patient or ventilator contamination, always use a bacteria filter or HMEF between the patient and the inspiratory port. If no bacteria filter is used, the exhaled gas can contaminate the ventilator.**
- Ensure that all of the components of the breathing circuit set, including but *not* limited to flow sensor, humidifier, and other accessories, match the associated intended use for the target patient group.
- Adding attachments or other components/assemblies to a breathing system can change the pressure gradient across the ventilator, which can adversely affect ventilator performance.

- Make sure a HEPA filter is installed by the air intake. See Figure 12-1.
- For each new patient, always use a new or reprocessed breathing circuit to avoid cross contamination.
- During ventilation, regularly check the breathing circuit filter for increased resistance and blockage.

NOTICE

- Any bacteria filter, HMEF, or additional accessories in the expiratory limb may substantially increase flow resistance and impair ventilation.
- When adding components to the Hamilton Medical breathing circuit configurations, do *not* exceed the inspiratory and expiratory resistance values of the ventilator breathing system as specified in Section 15.10, as required by ISO 80601-2-12.
- Pressure and volume measurement accuracy may be affected by using a breathing circuit with high resistance. Accuracy was tested with Hamilton Medical devices using the breathing circuits PN 260039 for adults, PN 260189 for pediatrics, and PN 151969 for neonates.

1.5.2 Preoperational check and tests

CAUTION

- *To prevent possible patient injury, disconnect the patient from the ventilator before running the preoperational tests, and use another source of ventilatory support.*
- *To ensure the ventilator's safe operation, always run the preoperational check before using the ventilator on a patient.*

- *Do NOT use the ventilator until necessary repairs are completed and all pre-operational tests have passed.*

NOTICE

- To ensure that all breathing circuit connections are leak-tight, perform the **Tightness** test every time you connect a circuit or change a circuit part.
- If there is a mismatch between the selected patient group and the type of flow sensor connected, the calibration fails. Ensure you are using the correct flow sensor for the patient.

1.5.3 Humidifier

WARNING

- Before using a humidifier, review the *Instructions for Use* as well as the *Instructions for Use* provided with its accessories.
- To prevent possible patient injury and equipment damage, do *not* turn the humidifier on until the gas flow has started and is regulated. Turn the humidifier off before stopping gas flow.
- Adding attachments or other components/assemblies to a connected humidifier can change the pressure gradient across the ventilator, which can adversely affect ventilator performance.
- Regularly check the water traps and the breathing circuit limbs for water accumulation. Empty as required.

1.5.4 CO2 sensor setup and operation

WARNING

- Monitor the CO2 waveform (capnogram) on the ventilator display. If it appears abnormal, check the patient, settings, and the breathing circuit components, including the CO2 sensor sampling line. Adjust and replace components as appropriate.
- If the capnogram appears abnormal, inspect the CO2 airway adapter and replace if needed.
- Elevated baseline can be caused by sensor problems or by the patient's condition.
- Do *not* use any CO2 sensor/adapter if it appears to be damaged or if it fails to operate properly. Refer servicing to Hamilton Medical authorized personnel.
- Do *not* use the CO2 components when they are wet or have exterior condensation.
- In NIV and neonatal ventilation with uncuffed tubes, leaks may influence the capnogram and the measured values.
- Always connect all components securely and check for leaks according to standard clinical procedures.
- Positioning of tubes and cables:
 - Do *not* position the cables or tubing in any manner that may cause patient entanglement or strangulation.
 - Support the tubing to avoid stress on the ET tube.
 - Do *not* apply excessive tension to any cable or tubing.

- During use, a system leak, such as that caused by an uncuffed ET tube or damaged CO2 sensor may significantly affect sensor readings, including flow, volume, pressure, and other respiratory parameters.
- Leakages in the breathing or sampling system may cause the displayed CO2 values to be significantly under-reported (too low).
- Keep all cleaning agents away from the CO2 sensor electrical connections.
- For the CO2 sensor/adapter, use only cleaning and disinfection agents that are recommended in Table 12-3.
- Periodically check the sensor and tubing for excessive moisture or secretion build-up, and replace if needed. Excessive moisture can affect measurements.
- **LoFlo sidestream CO2 sensor.**
Do *not* use with patients who cannot tolerate the removal of 50 ml $\pm$ 10 ml/min from their total minute volume. In adaptive modes (such as ASV, APVcmv, and APVsimv), the removal is fully compensated.
- **LoFlo sidestream CO2 sensor.**
Use of devices containing PVC plasticized with DEHP should be limited to the amount of time treatment is medically necessary, especially for neonates and pregnant or nursing mothers.

CAUTION

- *All devices are NOT protected against reanimation with a defibrillator. Disconnect the CO2 sensor before using a defibrillator on the patient.*
- *Always use the correct CO2 adapter. In adult patients, smaller geometrics increase airway resistance and induce low tidal volumes and intrinsic PEEP. In neonatal patients, large geometrics impede effective CO2 removal and add dead space.*
- *Do NOT place the CO2 sensor on the patient. It can burn the skin as the sensor may reach a temperature of 46°C (115°F).*
- *Use during nebulization may influence the CO2 measurements. In addition, the medication can contaminate the sensor windows, causing the sensor to fail prematurely.*
- **LoFlo sidestream CO2 sensor.**
Remove the sampling kit sample cell from the module when not in use.
- **LoFlo sidestream CO2 sensor.**
Do NOT stick finger into the sample cell receptacle.

NOTICE

- Position airway adapters with windows in a vertical, *not* a horizontal, position. This helps keep patient secretions from pooling on the windows.
If pooling occurs, remove the adapter, rinse with water, and reconnect.
- Do *not* combine the neonatal CO2 airway adapter and the adult flow sensor. Doing so can increase resistance, create artifact, or lead to hypoventilation, intrinsic PEEP, or overinflation.

- Do *not* place the CO2 sensor/adapter between the ET tube and the elbow, as this may allow patient secretions to enter the tubing and block the adapter windows.
- The CO2 sensors and accessories that have contact with the patient are not made with natural rubber latex.
- Nitrous oxide, elevated levels of oxygen, helium, and halogenated hydrocarbons can influence the CO2 measurement.

1.5.5 Nebulization

WARNING

- Nebulization of drugs can cause an occlusion and increased resistance of a connected expiratory filter or heat and moisture exchanger (HMEF). Check the filter frequently for increased resistance or blockage.
- Connect the nebulizer in the inspiratory limb per your institution's policy and procedures. Connecting the nebulizer between the flow sensor and the endotracheal tube increases dead space and causes incorrect volume measurements.
- Pneumatic nebulization affects the delivered oxygen concentration.
- Nebulization can affect the accuracy of CO2 measurements.
- The use of a pneumatic nebulizer adds gas to the ventilator breathing system, which can affect the accuracy of volume or flow measurements.

CAUTION

To prevent the expiratory valve from sticking due to nebulized medications, regularly check and clean or replace the expiratory valve membrane and/or the expiratory filter.

NOTICE

- Pneumatic nebulization is disabled:
 - During neonatal ventilation (if needed, use an Aerogen nebulizer³)
 - When using HiFlowO2
 - When using LPO
- Only use approved piezo nebulizers with the HAMILTON-C3.

1.6 Ventilating the patient

This section provides the following safety information:

- Specifying patient settings
- Neonatal ventilation
- Apnea backup
- TRC settings
- P/V Tool Pro
- Noninvasive ventilation

³ Aerogen nebulization is not supported for patients younger than 28 days old in the USA.

1.6.1 Specifying patient settings

WARNING

- It is the clinician's responsibility to ensure that all ventilator settings are appropriate, even when "automatic" features, such as ASV, or default settings are used.
- To prevent possible patient injury:
 - Make sure the ventilator is set up for the appropriate patient group with the appropriate breathing circuit components.
 - For each patient group, make sure you select the correct patient sex and height (**Adult/Ped**) or weight (**Neonatal**). Correct entries help prevent hyper- or hypo-ventilation.
- The ventilator is a high-flow device that can operate with flows above 60 l/min and with a high oxygen concentration.

1.6.2 Neonatal ventilation


In addition to the information provided in this section, carefully review the information in Sections 1.5 and 1.6.

WARNING

Prolonged exposure to high oxygen concentrations may cause irreversible blindness and pulmonary fibrosis in preterm neonates. Be especially careful when performing oxygen enrichment.

CAUTION

- To prevent increased CO₂, do NOT use an adult airway adapter for neonates as it will increase dead space.
- To determine appropriate tidal and minute volumes for neonatal patients, you must consider (anatomic) dead space. Artificial airways (e.g. Y-piece, flow sensor, ET tube, CO₂ airway adapter) increase the dead space.
- When using active humidification, prevent water accumulation in the flow sensor by ensuring that the flow sensor is positioned at a $\geq 45^\circ$ angle relative to the floor. Excess water can affect the flow sensor measurements and lead to inaccurate volume delivery, potentially resulting in hypoventilation.

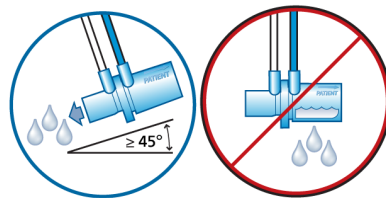

NOTICE

When switching between the **Adult/Ped** to the **Neonatal** patient groups, you must calibrate the flow sensor and perform the Tightness test.

1.6.3 Apnea backup

CAUTION

We recommend you enable Apnea backup ventilation whenever a mode that allows spontaneous breathing is selected. Apnea backup is enabled by default.

1.6.4 TRC settings

WARNING

To ensure patient safety, check that the Pressure alarm limit is set appropriately when using TRC, as real pressure may be higher than the set pressure.

CAUTION

To prevent patient injury, be especially careful when defining TRC settings, as using the incorrect tube type or size setting can endanger the patient.

1.6.5 P/V Tool Pro

WARNING

Do *not* attempt to use the P/V Tool on an active patient as it can cause patient discomfort and erroneous readings.

NOTICE

- During a maneuver and for 30 seconds following the end of the maneuver, all patient alarms are silenced.
- Apnea time begins after the end of the maneuver.
- Use of the P/V Tool provides information that, in conjunction with hemodynamic data and other clinical information, may be used to optimize PEEP and other ventilator settings.
- During the maneuver, the high Pressure alarm is automatically set to **P_{top} + 5 cmH₂O**.
When the maneuver is finished, the high Pressure alarm limit returns to the previous setting.
- A calibrated flow sensor and a tight circuit produce the best results.

1.6.6 Noninvasive ventilation

NOTICE

- As a precaution, you must be prepared to intubate the patient and start invasive ventilation at any time while noninvasive ventilation is in use.
- The use of a mask can increase dead space. Always comply with the mask manufacturer's instructions when using noninvasive ventilation.
- The Inspiratory volume limitation alarm is inactive in noninvasive modes.

1.7 Monitoring and alarms

CAUTION

- To prevent possible patient injury, make sure the alarm limits are appropriately set before you place the patient on the ventilator.
- The HAMILTON-C3 oxygen monitoring function can be disabled. Ensure that an alternative means of oxygen monitoring is always available and enabled.
- To ensure that oxygen monitoring is always fully functional, replace an exhausted or missing O2 cell as soon as possible or use an external monitor that complies with ISO 80601-2-55.

NOTICE

- The HAMILTON-C3 is *not* intended to be a comprehensive vital sign monitor for patients on life-support equipment. Patients on life-support equipment should be appropriately monitored by qualified medical personnel and suitable monitoring devices.
- The use of an alarm monitoring system does *not* give absolute assurance of warning for every type of issue that may arise with the ventilator. Alarm messages may *not* pinpoint a problem exactly; the exercise of clinical judgment is necessary.

- It is recommended that additional independent monitoring devices, including pulse oximeters measuring SpO2, be used during mechanical ventilation. The operator of the ventilator must still maintain full responsibility for proper ventilation and patient safety in all situations.
- Do *not* pause the audible alarm when leaving the patient unattended.
- The alarm limits Auto function is *not* available during neonatal ventilation.

1.8 Using the trolley

WARNING

- To prevent possible personal injury and equipment damage, including tipping:
 - Lock the trolley's wheels when parking the ventilator.
 - Take care when crossing thresholds.
- To prevent accidental extubation, check the patient tubing support arm joints and secure as necessary.

1.9 Maintenance

This section provides the following safety information:

- Maintenance, cleaning, and disinfection
- Preventive maintenance
- O2 cell

1.9.1 General maintenance, cleaning, and disinfection

WARNING

- Reprocessing of Hamilton Medical single-use products can affect the product properties and may cause injury to the patient. For example, a change to the surface structure during reprocessing may lead to a change in the tear strength or cause actual cracking. Furthermore, an altered surface structure may result in a microbial aggregation of spores, allergens, and pyrogens, for example, or cause an increase in the number of particles released as a result of chemical changes in the material properties.
- To reduce the risk of cross-contamination, regularly clean and replace the fan filter. For details, see Table 12-5 and Section 12.4.1.
- To prevent patient exposure to sterilizing agents and to prevent premature deterioration of parts, sterilize parts using only the techniques recommended in Chapter 12 and in any associated *Reprocessing Guide* or *Instructions for Use* provided with each part.

- Hamilton Medical does *not* assume any liability for the proper functioning of single-use items if they are reprocessed and reused by the user.
- Always use caution when handling bacteria filters to minimize the risk of bacterial contamination or physical damage. Dispose of used filters immediately after use. Follow your hospital procedures for disposal.
- Follow the cleaning, disinfection, and sterilization procedures for each component as described in this guide and in the cleaning agent manufacturer's *Instructions for Use*.
- Always disconnect the device and any accessories, including CO2 sensor/adaptor, from electrical power before cleaning and disinfection to reduce the risk of electric shock.

CAUTION

- Do **NOT** sterilize or immerse the CO2 sensor in liquids.
- Do **NOT** attempt to sterilize the interior components of the ventilator.
- Do **NOT** attempt to sterilize the entire device with ETO gas.
- Incorrect concentrations or residence times of sterilization agents may lead to bacterial resistance.
- To prevent premature deterioration of parts, make sure the disinfecting chemical is compatible with the part material. Use only EPA-registered/ approved cleaning and disinfection solutions, as approved by your institution's protocol, after each patient use, according to the cleaning agent manufacturer's recommendations.

- *Intrusion of fluids, or immersing parts in fluids, will damage the device.*
- *Do NOT pour fluids onto the device surfaces.*
- *Do NOT use abrasives materials (for example, steel wool or silver polish), hard brushes, pointed instruments, or rough materials on surfaces.*
- *Thoroughly rinse all patient or airway contact components to ensure removal of residual cleaning/disinfection agents.*
- *Cleaning and disinfection agent residues can cause blemishes or fine cracks, especially on parts exposed to elevated temperatures during sterilization.*

NOTICE

For specific information on cleaning, disinfecting, and sterilizing autoclavable (reusable) accessories and components, refer to the appropriate *Reprocessing Guide* and *Instructions for Use* provided with each part.

1.9.2 Preventive maintenance

NOTICE

- Dispose of all parts removed from the device according to your institution's protocols. Comply with all local, state, and federal regulations with respect to environmental protection, especially when disposing of the electronic device or parts of it (for example, O2 sensor).
- We recommend that you document all maintenance procedures.
- It is *not* allowed to perform service or maintenance on the device while a patient is connected.
- If no bacteria (inspiratory) filter is used, the device must be considered contaminated and must be serviced.

1.9.3 O2 cell

NOTICE

- Replace the O2 cell with a genuine Hamilton Medical O2 cell only; otherwise, oxygen measurement will *not* function and permanent oxygen-related alarms may be generated.
- To prevent leakage within the ventilator, make sure an O2 cell is installed at all times, even if you use an external monitor or disable oxygen monitoring.

1.10 Service and testing

- To ensure proper servicing and to prevent possible physical injury, only Hamilton Medical authorized service personnel may service the ventilator using information provided in the ventilator *Service Manual*.

In addition, all accessories and devices must only be serviced by Hamilton Medical authorized service personnel.

- The manufacturer can only be responsible for the safety, reliability, and performance of the ventilator if all of the following requirements are met:
 - Appropriately trained personnel carry out assembly operations, extensions, readjustments, modifications, maintenance, or repairs.
 - The electrical installation of the relevant room complies with the appropriate requirements.
 - The ventilator system is used in accordance with the ventilator *Operator's Manual*.
 - Do *not* attempt service procedures other than those specified in the ventilator *Service Manual*.
- Any attempt to modify the ventilator hardware or software without the express written approval of Hamilton Medical automatically voids all warranties and liabilities.

2

System overview

2.1	Overview.....	36
2.2	Physical descriptions.....	39
2.3	Navigating the windows and controls.....	49

2.1 Overview

The HAMILTON-C3 ventilator system comprises the following main components:

- Ergonomic design featuring monitor with integrated alarm lamp and touch screen display
- Ventilation unit for gas mixing and control, and patient breathing circuit for gas delivery and exchange
- Oxygen monitoring using a galvanic sensor
- Optional connections to a humidifier, nebulizer, SpO2 and CO2 sensors, and external data interfaces
- Trolley, compact transport solution, and a shelf mount

The ventilator system offers the following main features:

- *Monitoring:* Real-time waveforms, numerical monitoring, trends, loops, and Intelligent panels showing the patient's real-time breathing status, ventilator dependence, and targets, CO2 and SpO2 measurements (when enabled)
- Alarms and on-screen troubleshooting help
- Configurable startup settings for each patient group
- Support for pneumatic or Aerogen nebulization

2.1.1 Standard features and options

The ventilator offers a robust set of standard equipment and features, as well as optional modes and features for the supported patient groups.

Table 2-1 lists the standard software configuration and options.

Table 2-2 lists the standard equipment (hardware) and options.

Table 2-1. Standard software configuration and options

Function	Patient group	
	Adult/Ped	Neonatal
	Standard: X Option: O Not applicable: --	
Patient groups	X	O
Modes		
Intelligent ventilation modes		
ASV®	X	--
Volume-targeted, pressure-controlled modes		
APVcmv / (S)CMV+	X	X
APVsimv / SIMV+	X	X
Volume-controlled, flow-controlled modes		
(S)CMV	X	--
SIMV	X	--
Pressure-controlled modes		
DuoPAP, APRV	X	X
PCV+	X	X
PSIMV+	X	X
SPONT	X	X
Noninvasive modes		
NIV, NIV-ST	X	X
nCPAP-PS	--	O
Other functions		
HiFlowO2	O	O
P/V Tool®	O	O
Flow and pressure triggers	X	X
TRC	X	X
Suctioning tool	O	O
Trends/Loops	X	X
On-screen help	X	X

Table 2-2. Standard equipment (hardware) configuration and options


Functions	HAMILTON-C3
Standard: X Option: O	
Trolley, shelf mount, or bed mount solution	O
Second battery	O
Communication board: CO2/SpO2/Nurse Call	O
Extended communication ports: COM port, USB port, RJ-45 Ethernet port ⁴	X
Communication protocols: Hamilton, Hamilton P2, GALILEO compatible, DrägerTestProtocol, Philips VueLink Open, Hamilton Block protocol	X

⁴ The RJ-45 ethernet port is for internal use only.

2.2 Physical descriptions

This section provides an overview of the ventilator, breathing circuit sets, and trolley.

Figure 2-1. HAMILTON-C3 with accessories

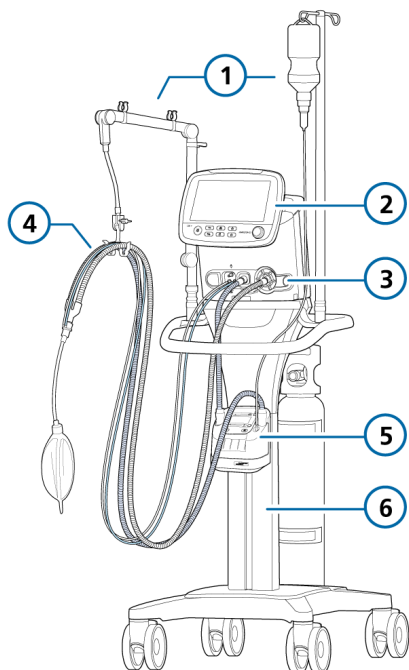


- | | |
|---------------------------------|---------------------|
| 1 Support arm and infusion arm | 4 Breathing circuit |
| 2 Display and controls | 5 Humidifier |
| 3 Breathing circuit connections | 6 Trolley |

2.2.1 About the ventilator


Figures 2-2 through 2-4 provide an over-view of the device.

Figure 2-2. Front view, ventilator

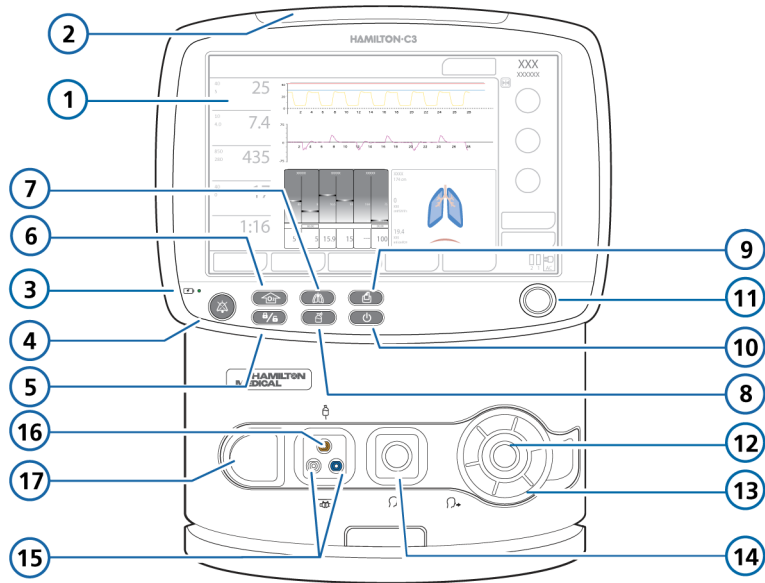


1	Touch screen display	10	Power/Standby key
2	Alarm lamp	11	Press-and-Turn (P&T) knob
3	Battery charge indicator	12	 From patient expiratory port
4	Audio Pause key	13	Expiratory valve set
5	Screen lock/unlock key	14	 To patient inspiratory port
6	O2 enrichment key	15	 Flow sensor connection ports
7	Manual breath key	16	 Pneumatic nebulizer port
8	Nebulizer key	17	O2 cell (under cover)
9	Print screen key		

Figure 2-3. Rear view, ventilator

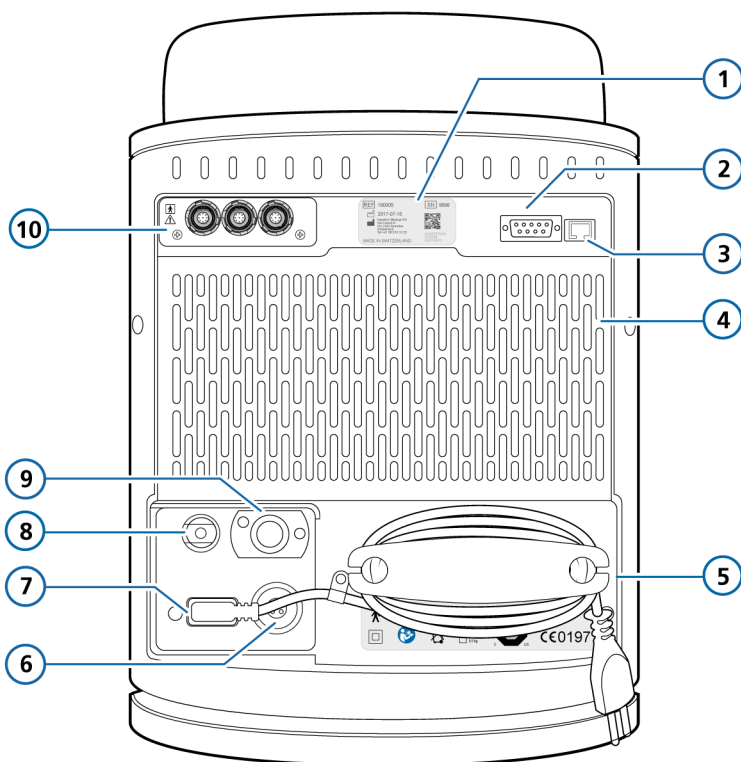

- | | | | |
|---|---|----|--|
| 1 | Serial number label | 6 | DC power connector |
| 2 | COM port | 7 | AC power socket |
| 3 | RJ-45 Ethernet connector | 8 | Low-pressure oxygen connector |
| 4 | Fresh air intake and cooling fan vents, HEPA and dust filters | 9 | High-pressure oxygen DISS or NIST inlet fitting |
| 5 | AC power cord with retaining clip | 10 | Communication board with one or more of the following options: CO ₂ , SpO ₂ , Nurse call |

Figure 2-4. Side view, with exhaust port (left) and battery door (right)

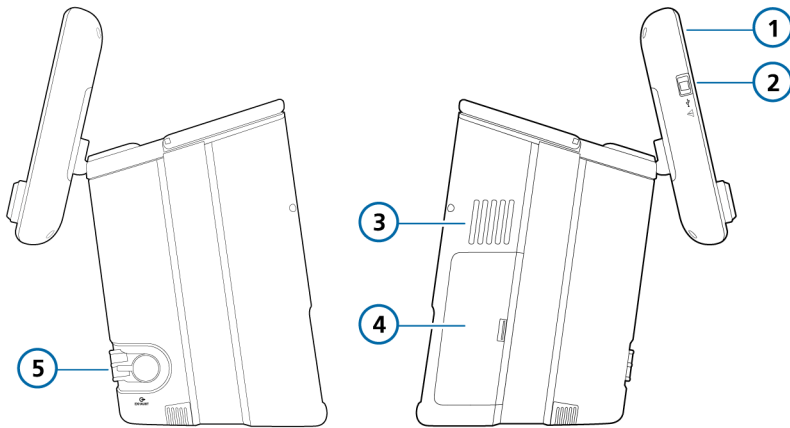

1 Adjustable-tilt monitor

2 USB port

3 Cooling air vent


4 Battery door

5 Expiratory valve exhaust port

2.2.2 About the main display

Directly access all the windows for modes, controls, alarms, and monitoring from the main display during normal ventilation (Figure 2-5).

Figure 2-5. Main display

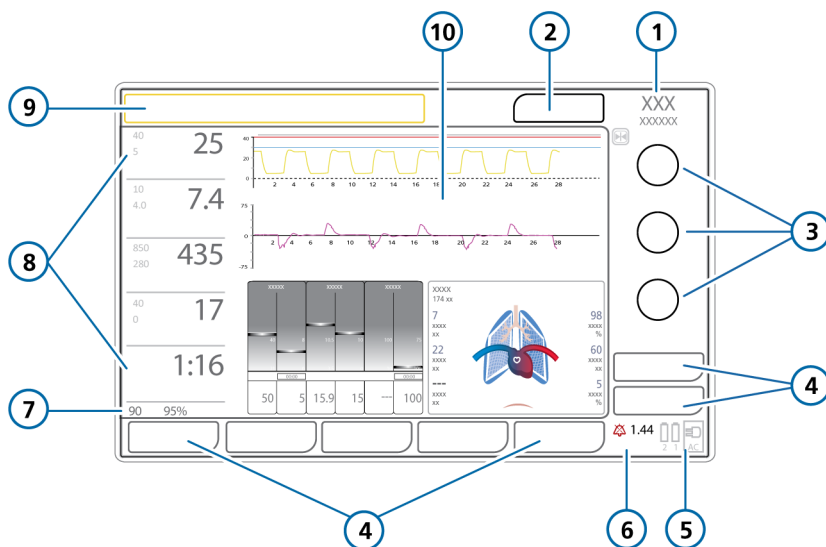

- | | | | |
|---|---|----|---|
| 1 | Active mode and patient group | 6 | Audio pause indicator and countdown timer |
| 2 | Modes button | 7 | SpO2 low alarm limit and current value* |
| 3 | Main controls for the active mode | 8 | Main monitoring parameters (MMP) |
| 4 | Window buttons: Alarms, Controls, Monitoring, Graphics, Tools, Events, System | 9 | Message bar (color coded) |
| 5 | Power source | 10 | Configurable graphic display |

* When SpO2 monitoring is enabled.


2.2.3 About the patient breathing circuits

Before proceeding, review the safety information in Chapter 1.


For details about connecting and setting up the breathing circuit, see Section 3.4.

Figure 2-6. Adult/pediatric breathing circuits

Adult/Ped: Dual limb with humidifier

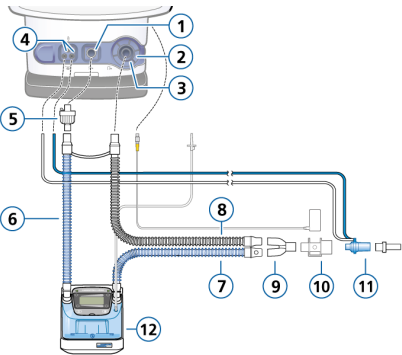


Adult/Ped: Coaxial with HMEF

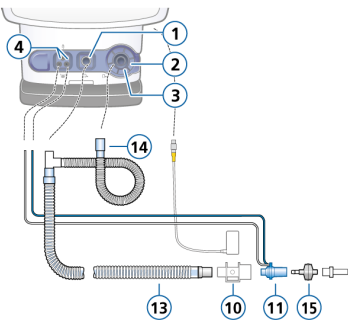


- | | | | |
|---|---|----|-------------------------------------|
| 1 | To patient inspiratory port | 9 | Y-piece |
| 2 | From patient expiratory port | 10 | CO2 sensor/adaptor |
| 3 | Expiratory valve set | 11 | Flow sensor |
| 4 | Flow sensor connection ports | 12 | Humidifier |
| 5 | Bacteria filter | 13 | Coaxial inspiratory/expiratory limb |
| 6 | Inspiratory limb to humidifier | 14 | Expiratory limb extension |
| 7 | Heated inspiratory limb with temperature sensor, to patient | 15 | HMEF |
| 8 | Heated expiratory limb | | |

Figure 2-7. Adult/pediatric breathing circuits: high flow oxygen therapy

Adult/Ped: Dual limb, high flow oxygen therapy

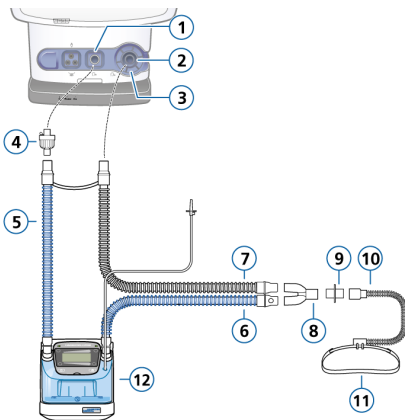

Adult/Ped: Single limb, high flow oxygen therapy

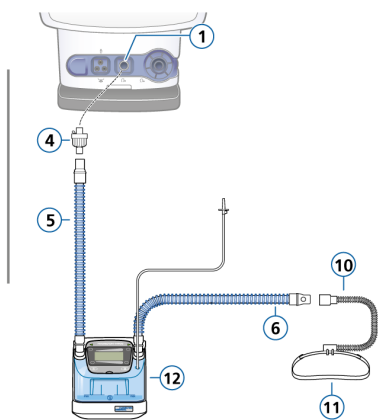


- 1 To patient inspiratory port
- 2 From patient expiratory port
- 3 Expiratory valve set
- 4 Bacteria filter
- 5 Inspiratory limb to humidifier
- 6 Heated inspiratory limb with temperature sensor, to patient


- 7 Heated expiratory limb
- 8 Y-piece
- 9 Adapters (various)
- 10 Nasal cannula
- 11 Attachment strap
- 12 Humidifier

Figure 2-8. Neonatal breathing circuits

Neonatal/pediatric: Dual limb with humidifier

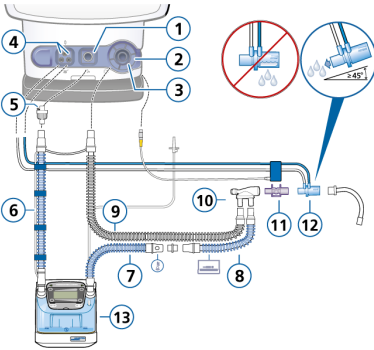


Neonatal/pediatric: Dual limb with HMEF

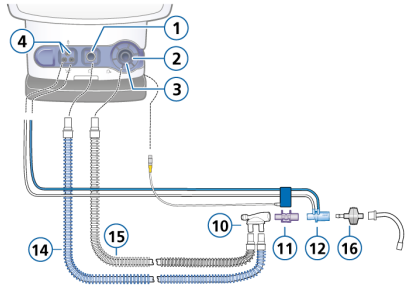


- | | | | |
|---|---|----|------------------------|
| 1 | To patient inspiratory port | 9 | Heated expiratory limb |
| 2 | From patient expiratory port | 10 | Y-piece |
| 3 | Expiratory valve set | 11 | CO2 sensor/adaptor |
| 4 | Flow sensor connection ports | 12 | Flow sensor |
| 5 | Bacteria filter | 13 | Humidifier |
| 6 | Inspiratory limb to humidifier | 14 | Inspiratory limb |
| 7 | Heated inspiratory limb with temperature sensor, to patient | 15 | Expiratory limb |
| 8 | Unheated inspiratory limb extension, for use in incubator | 16 | HMEF |

Figure 2-9. Neonatal breathing circuits: high flow oxygen therapy

Neonatal/pediatric: Dual limb, high flow oxygen therapy

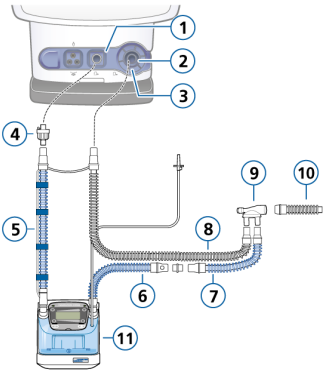


Neonatal/pediatric: Single limb, high flow oxygen therapy

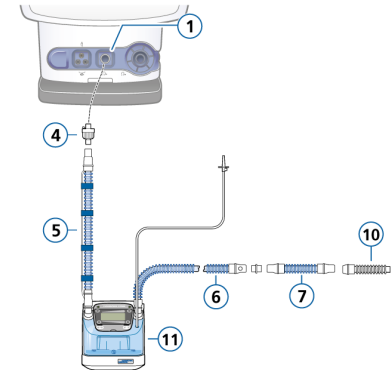

- | | | | |
|---|---|----|---|
| 1 | To patient inspiratory port | 7 | Unheated inspiratory limb extension, for use in incubator |
| 2 | From patient expiratory port | 8 | Heated expiratory limb |
| 3 | Expiratory valve set | 9 | Y-piece |
| 4 | Bacteria filter | 10 | Connection to patient interface (options not shown) |
| 5 | Inspiratory limb to humidifier | 11 | Humidifier |
| 6 | Heated inspiratory limb with temperature sensor, to patient | | |

Figure 2-10. Neonatal breathing circuit: nCPAP-PS

Neonatal: nCPAP-PS

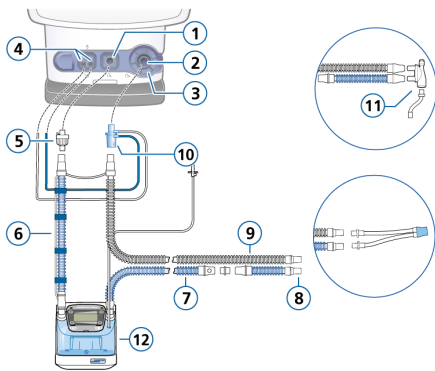

1	To patient inspiratory port	7	Heated inspiratory limb with temperature sensor, to patient
2	From patient expiratory port	8	Unheated inspiratory limb extension, for use in incubator
3	Expiratory valve set	9	Heated expiratory limb
4	Flow sensor connection ports	10	Flow sensor (connected to expiratory port)
5	Bacteria filter	11	Y-piece
6	Inspiratory limb to humidifier	12	Humidifier

2.2.4 About the trolley and mounting variations

The HAMILTON-C3 can optionally be ordered with a standard trolley, shelf mount, or bed mount solution. The trolley has space for oxygen cylinders. With an adapter plate, the device can be mounted to a standard transport trolley.

2.2.4.1 Preparing the trolley for intra-hospital transport

Before proceeding, review the safety information in Chapter 1.

WARNING

- Only the components listed in this section are approved for intrahospital transport.
- Use of additional items, such as a patient support arm, can result in the trolley tipping over.
- The ventilator must be attached to the trolley using the locking bolt. Ensure the device is securely attached to the trolley before use.

If using a HAMILTON-C3 trolley, the ventilator and its components, as well as the trolley, **must be** configured and positioned as follows during transport within the hospital:

- The ventilator and oxygen cylinders must be securely attached to the trolley.

- Only the following components are allowed to be connected during transport:
 - Breathing circuit
 - Tubing support arm
 - Flow sensor
 - CO2 sensor (mainstream or side-stream)
 - O2 cylinder
 - SpO2 sensor, including Masimo adapter
 - IntelliCuff
 - Humidifier
 - Water bottle
 - Water bottle holder

2.3 Navigating the windows and controls

Use the touch screen and the Press-and-turn knob (referred to as the *P&T knob*) to access data and specify settings.

You interact with the HAMILTON-C3 user interface as follows:

- Touch elements on the display to open windows and make and confirm selections.
- Use the P&T knob to select, specify, and confirm selections. A selected item is highlighted in yellow.

This section describes how to navigate the interface.

2.3.1 Accessing windows

To open a window

- ▶ Do any of the following to open a window:
 - Touch the button and any needed tabs.
 - Turn the P&T knob to move the cursor to the button or tab, then press the P&T knob.

To close a window

- ▶ Do any of the following to close a window:
 - Touch the window button again.
 - Touch the **X** button.
 - Turn the P&T knob to move the cursor to the **X** button, then press the P&T knob.


2.3.2 Adjusting controls

Specifying settings involves *activating* a control, *adjusting* a value, and *confirming* the setting.

To adjust a control setting

1. **Activate** the control by doing any of the following:
 - Touch the control to select and activate it; the selected control has a yellow outline.
 - Turn the P&T knob to move the cursor to the control; the selected control has a yellow outline. Press the P&T knob to activate it.

The activated control is orange.

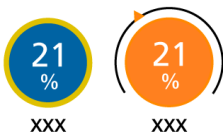

2. **Adjust** the value by turning the P&T knob to increase or decrease the value. The orange dot indicates the dynamic limit.
3. **Confirm** the setting by doing any of the following:
 - Touch the control again.
 - Press the P&T knob.

The new setting is immediately applied.

2.3.3 Selecting list items

Some selections are presented in a scrollable list.

To select a list item

1. In a list, touch the scroll bar to select and activate it.
2. Turn the P&T knob to scroll through the list, and when the desired selection is highlighted, press the knob to select it.

3

Preparing the ventilator

3.1	Overview.....	52
3.2	Connecting to a power source	52
3.3	Connecting the oxygen supply	53
3.4	Setting up the patient breathing circuit	54
3.5	Turning the ventilator on and off	58

3.1 Overview

Preparing the ventilator for use comprises the following steps:

To ...	See ...
Connect to a power source.	Section 3.2
Connect the oxygen supply.	Section 3.3
Set up the patient breathing circuit, including performing the preoperational check.	Section 3.4
Connect external devices and sensors.	Chapter 4
Turn on the ventilator.	Section 3.5
Select the patient group, mode, and alarm limits, and enter patient data.	Chapter 5

3.2 Connecting to a power source

Before proceeding, review the safety information in Chapter 1.

Always check the reliability of the primary power outlet before plugging in the ventilator. When connected to primary power, the associated power symbol (AC or DC) in the bottom right corner of the display shows a frame around it.

To connect the ventilator to a primary power supply

- ▶ Connect the ventilator to an outlet that supplies AC or DC power.
Make sure the power cord is well seated into the ventilator socket and secured with the power cord retaining clip to prevent unintentional disconnection.

3.2.1 Connecting to DC power

Before proceeding, review the safety information in Chapter 1.

The ventilator can be connected to a DC power source using the Hamilton Medical car adapter. The car adapter charges the batteries by transferring input voltage to 24 V.

3.2.2 Using battery power

A mandatory backup battery protects the ventilator from low power or failure of the primary power source.

When the primary power source fails, the ventilator automatically switches to operation on backup battery with no interruption in ventilation. An alarm sounds to signal the switch-over. Silence the alarm to confirm notification of the power system change and reset the alarm.

If battery power is completely lost, a buzzer sounds continuously for at least two minutes.

Batteries are charged whenever the ventilator is connected to the primary power supply, whether or not it is turned on. The battery indicator on the device shows the charge status of the batteries.

The battery and power source symbols in the bottom right corner of the display show the power source in use. See Table 3-1. A frame around a power symbol indicates the current ventilator power source.

An optional second battery is available. It is labeled 2 on the display, and is only shown when installed. When the ventilator is running on battery power, a blue frame indicates which battery is currently in use.

Figure 3-1. Power source indicators on display



Table 3-1. Battery/power state

Power icon on display	Battery status
	Device is plugged into primary power and the battery is charging.
	Device is running on battery power.
	Battery is fully charged.
	Battery is partially charged.
	Battery has less than 10% charge left.
	Battery is either defective or not installed.

Table 3-2. Battery charge indicator on ventilator, overview

Indicator on ventilator	Battery status
	<i>Solid green:</i> The battery is fully charged or charging, and the device is connected to primary power, even when the ventilator is turned off.

Indicator on ventilator	Battery status
	<i>Not lit:</i> Dark to show the battery is not charging (the device is running on battery power and is not connected to a primary power source or the battery is overheated).

If a battery is not fully charged, recharge it by connecting the ventilator to the primary power source. For details, see Section 15.4.

Chapter 12 describes how to replace the battery.

3.3 Connecting the oxygen supply

Before proceeding, review the safety information in Chapter 1.

Oxygen for the HAMILTON-C3 can be provided by a high- or low-pressure source.

High-pressure oxygen, provided by a central gas supply or a gas cylinder, is supplied through DISS or NIST male gas fittings. With the optional cylinder holder, you can mount oxygen cylinders to the trolley. If you use gases from cylinders, secure the cylinders to the trolley with the accompanying straps.

Low-pressure oxygen is provided by a concentrator or liquid cylinder.

The selected setting is active until manually changed or the ventilator is restarted.

3.3.1 Using a low-pressure oxygen supply

Using the low-pressure oxygen supply⁵ involves two steps:

- Connecting the supply to the ventilator (Section 3.3.2)
- Selecting the source type on the ventilator (Section 3.3.3)

3.3.2 Connecting the oxygen supply to the ventilator

To connect the oxygen supply to the ventilator

- ▶ Connect the oxygen hose to the HAMILTON-C3's high-pressure or low-pressure oxygen inlet fitting (Figure 2-3).

See Section 3.3.3 for details on selecting the oxygen source on the device.

3.3.3 Selecting the oxygen source type

Before starting ventilation, be sure to select the appropriate oxygen source. By default, the ventilator is set to high-pressure oxygen (HPO).


You set the source in Standby.

To select the oxygen source

1. In **Standby** mode, touch **Tools** > **Utilities**.
2. Touch the appropriate button for the desired oxygen source.
 - Select **HPO mode** for high-pressure oxygen (default).
 - Select **LPO mode** for low-pressure oxygen (see Section 3.3.1).
3. Close the window.

⁵ Not available in all markets.

Figure 3-2. Selecting the oxygen source

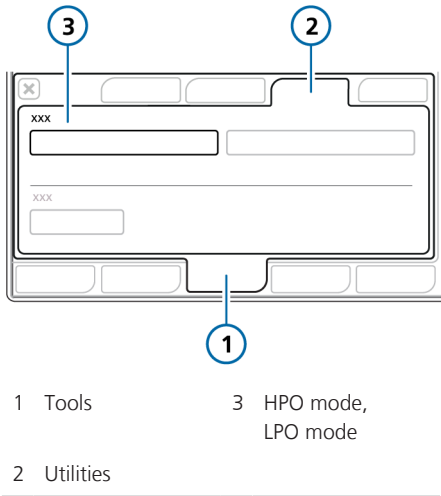

3.4 Setting up the patient breathing circuit

Before proceeding, review the safety information in Chapter 1.

Connecting the breathing circuit comprises the following steps.

For neonatal ventilation, see Chapter 6.

To ...	See ...
Install the expiratory valve.	Section 3.4.2
Select the appropriate breathing circuit and components.	Section 3.4.3
Assemble the breathing circuit.	Section 3.4.4
Adjust the position of the breathing circuit.	Section 3.4.5


To ...	See ...
Connect external devices and sensors.	Chapter 4
Perform any required tests, calibrations, and the preoperational check.	Chapter 5

3.4.1 Breathing circuit connections on the ventilator

Figure 3-3 illustrates the key ports on the ventilator for connecting the breathing circuit set.

For breathing circuit diagrams, see Section 2.2.3.

Figure 3-3. Key connection ports, front of ventilator

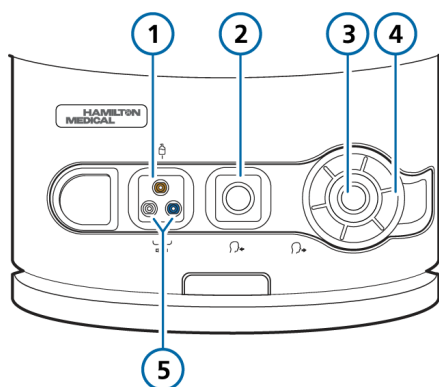

- | | |
|---------------------------------------|--------------------------------|
| 1 Nebulizer port | 4 Expiratory valve set |
| 2 <i>To patient</i> inspiratory port | 5 Flow sensor connection ports |
| 3 <i>From patient</i> expiratory port | |

3.4.2 Working with the expiratory valve set


This section describes how to assemble/install, and remove/disassemble the expiratory valve set.

To assemble/install the expiratory valve set

Refer to Figure 3-4.

1. Remove the safety cover.
2. Ensure the membrane is properly aligned with the expiratory valve housing and the metal plate faces up (A).
3. Position the expiratory valve set in the expiratory port (B) and twist the locking ring clockwise until it locks into place (C).

Figure 3-4. Installing the expiratory valve set

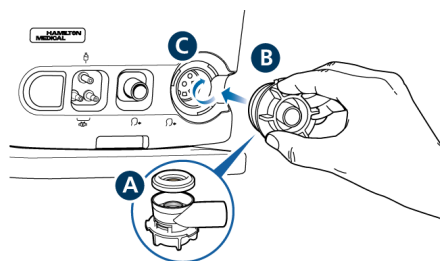

To remove and disassemble the expiratory valve set

1. Remove the expiratory valve set from the expiratory port on the ventilator.
2. Holding the expiratory valve housing, remove the silicone membrane (A in Figure 3-4) by lifting it up.

3.4.3 Selecting the breathing circuit components

Select the correct breathing circuit parts for your patient.

For neonatal ventilation, see Chapter 6.

Table 3-3. Breathing circuit component specifications

Patient data/ Component	Adult	Pediatric
Patient height (cm)	> 130	30 to 150
IBW (kg)	> 30	3 to 48
Breathing circuit limb ID (mm) ⁶	15 to 22	10 to 22
Flow sensor	Adult/Ped	Adult/Ped
CO2 airway adapter	Adult/Ped ⁷	Adult/Ped ⁷

3.4.3.1 Using a filter in the breathing circuit

NOTICE

When connecting a filter to the inspiratory or expiratory port, pay special attention to the fit and seal of the filter to the port, in particular with filters that offer additional connectors (such as a luer connector).

For proper function, it is important that all components in the breathing circuit set are properly positioned and securely connected.

Before proceeding, review the safety information in Chapter 1.

Inspiratory bacteria filter

To prevent patient or ventilator contamination, be sure to connect a bacteria (inspiratory) filter or HMEF between the patient and the inspiratory port.

For neonatal patients, use a neonatal-pediatric bacteria (inspiratory) filter or HMEF.

If no inspiratory filter is used, the exhaled gas can contaminate the ventilator. If you are not using an inspiratory filter, and an exhalation obstructed alarm is generated, the ventilator may be contaminated. Have the ventilator serviced.

Expiratory bacteria filter

Before using an expiratory filter with nebulization, review the safety information in Section 1.5.5.

An expiratory filter is not required on the HAMILTON-C3, but you may use one according to your institution's protocol. It is not required because the expiratory valve design prevents internal ventilator components from coming into contact with the patient's exhaled gas.

If you use an expiratory filter, place it on the patient side of the expiratory valve set. Monitor closely for increased expiratory circuit resistance.

An **Exhalation obstructed** alarm may also indicate excessive expiratory circuit resistance. If the **Exhalation obstructed** alarm occurs repeatedly, remove the expiratory filter immediately. If you otherwise suspect increased expiratory circuit resistance, remove the expiratory filter or replace the filter to eliminate it as a potential cause.

⁶ When using coaxial breathing sets, follow the manufacturer's recommendations for each patient group.
⁷ When tracheal tube ID > 4 mm.

Heat and moisture exchanging filter (HMEF)

The HMEF is a passive humidification component used together with a bacteria filter. Use an HMEF when ventilating with a coaxial breathing system.

3.4.4 Assembling the patient breathing circuit

Assemble the appropriate breathing circuit for your patient. Commonly used standard breathing circuit configurations are illustrated in Section 2.2.3.

For neonatal ventilation, see Chapter 6.

3.4.4.1 Connecting the flow sensor

NOTICE

To prevent inaccurate flow sensor readings, make sure the flow sensor is correctly connected.

 
Before proceeding, review the safety information in Chapter 1.

To connect a flow sensor to the breathing circuit


1. Insert a flow sensor into the breathing circuit in front of the patient connection.

See also the breathing circuit diagrams in Section 2.2.3.


Adult/Ped, flow sensor connection – dual limb circuit, Y-piece



 Adult/Ped, flow sensor connection – coaxial circuit



 Neonatal, flow sensor connection – dual limb circuit, Y-piece



2. Attach the blue and clear tubes to the flow sensor connection ports on the ventilator (Figure 3-3).

The blue tube attaches to the blue connection port. The clear tube attaches to the silver connection port.

3. Calibrate the flow sensor and perform the Tightness test. See Section 5.4.

3.4.5 Positioning the breathing circuit

NOTICE

- To prevent water accumulation in the flow sensor and tubing, position the flow sensor tubing on top of the flow sensor.
- Ensure there is no undue stress placed on any tubing or cables.

After assembly, position the breathing circuit so that the hoses will *not* be pushed, pulled, or kinked as a result of a patient's movement, transport, or other activities, including scanner bed operation and nebulization.

The next step is to perform all required tests, calibrations, and the preoperational check. See Chapter 5.

3.5 Turning the ventilator on and off


To turn on the ventilator

- ▶ Press  (Power/Standby).

The ventilator runs a self-test. After a short time, the **Standby** window is displayed.

Proceed with setting up the ventilator and patient, as appropriate.

Figure 3-5. Power/Standby key (1)

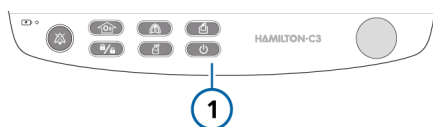

To turn off the ventilator

1. Press  (Power/Standby) to open the **Activate Standby** window during active ventilation.
2. Touch **Activate standby** to confirm. The ventilator enters **Standby**.
3. Press and hold  for about 3 seconds to turn off the ventilator.

The ventilator turns off.

In the event of a technical fault or the device will not turn off

- ▶ Press and hold  for about 10 seconds to turn off the ventilator.

4

Setting up external devices and sensors

4.1	Overview.....	60
4.2	Setting up a humidifier.....	60
4.3	Setting up CO2 monitoring.....	60
4.4	Setting up SpO2 monitoring.....	63
4.5	Enabling sensors	64
4.6	Setting up nebulization	64
4.7	Connecting to external devices.....	65

4.1 Overview

The HAMILTON-C3 supports a variety of external devices and sensors for ventilation, including:

- Humidifier
- CO2 monitoring sensors
- Pulse oximetry (SpO2 monitoring) sensors
- Nebulizers

This chapter describes how to set them up for ventilation.

4.2 Setting up a humidifier

Before proceeding, review the safety information in Chapter 1.

To set up the humidifier

1. Attach the humidifier to the trolley, if appropriate.
2. Connect a potential equalization cable to the humidifier and to a grounding socket at your facility.
3. Plug the humidifier into primary power.

For additional details about:

- Connecting the humidifier to the breathing circuit, see Section 2.2.3.
- Working with the HAMILTON-H900 humidifier, see the *HAMILTON-H900 Instructions for use*.

4.3 Setting up CO2 monitoring

Before proceeding, review the safety information in Chapter 1.

CO2 monitoring data is helpful for the assessment of the patient’s airway integrity or ensuring proper endotracheal tube placement, among other applications.

Two CO2 measurement options are available: mainstream and sidestream. Which option you use depends on the clinical setting.⁸

Enabling CO2 measurement on the ventilator requires enabling the CO2 hardware (in Configuration) and enabling the sensor.

Table 4-1. CO2 measurement overview

For details about ...	See ...
Mainstream CO2 measurement, connection, and use	Section 4.3.1
Sidestream CO2 measurement, connection, and use	Section 4.3.2
Enabling the CO2 hardware	Section 13.9.3
Enabling the CO2 sensor	Section 4.5

⁸ The volumetric capnogram is only available when using a mainstream CO2 sensor.

4.3.1 Mainstream CO2 measurement


The **CO2 monitoring** option comprises the following components (shown in Figure 4-1): communication board, airway adapter, and CO2 sensor.

The sensor generates infrared light and beams it through the airway adapter to a detector on the opposite side. CO2 from the patient, flowing through the mainstream airway adapter, absorbs some of this infrared energy.

The system determines the CO2 concentration in the breathing gases by measuring the amount of light absorbed.

The ventilator displays CO2 measurements as numeric values, waveforms, trends, and loops.

Figure 4-1. Mainstream CO2 monitoring components and assembly

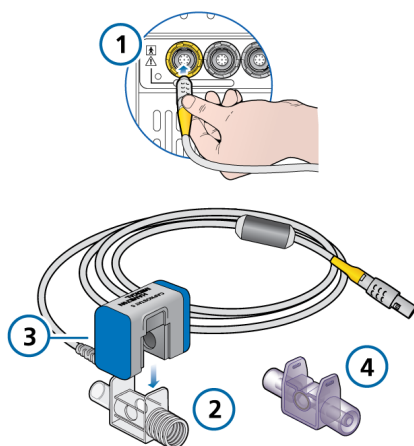

- | | |
|--|-----------------------------|
| 1 Communication board with CO2 connection port | 3 CO2 sensor |
| 2 Airway adapter (Adult/Ped.) | 4 Airway adapter (Neonatal) |

4.3.1.1 Connecting the mainstream CO2 sensor

Before proceeding, review the safety information in Chapter 1.

CAUTION

When using active humidification, prevent water accumulation in the CO2 adapter/sensor by ensuring that they are positioned at a $\geq 45^\circ$ angle relative to the floor. Excess water can affect the sensor measurements.

NOTICE

You must use an appropriate adapter to connect the mainstream CO2 sensor to a neonatal flow sensor.

Ensure the CO2 sensor and adapter are clean and dry before connection.


To set up mainstream CO2 monitoring

Refer to Figure 4-1.

1. Connect the sensor cable to the CO2 connection port (1) on the ventilator.
2. Attach the CO2 sensor (3) to the airway adapter (2), aligning the arrows on both components.
Press the components together until they click.
3. When connecting a CO2 sensor for the first time, perform the zero calibration of the sensor/adapter, if needed, as described in Section 5.4.5.

4. Connect the sensor/adaptor to the breathing circuit proximal to the patient, in a vertical position. See Figure 4-2.
- Do *not* place the airway adapter between the ET tube and the elbow, as this may allow patient secretions to accumulate in the adapter.⁹
- The sensor cable should face away from the patient.
5. Secure the cable safely out of the way.

Figure 4-2. Connecting CO2 sensor/adaptor (1) to breathing circuit

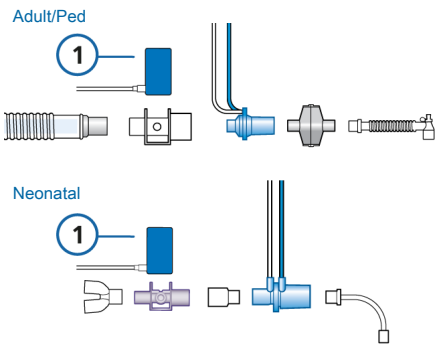

To verify the quality of the connection

- ▶ Check the capnogram (CO2 waveform) on the ventilator display.
- If CO2 levels are higher than expected, check the patient condition. If you determine that the patient's condition is not contributing, calibrate the sensor (Section 5.4.5).

To disconnect the sensor cable from the ventilator

- ▶ Pull back on the connector sheath and disengage from the connection port on the ventilator.

4.3.2 Sidestream CO2 measurement


The LoFlo CO2 module is a sidestream CO2 monitoring system comprising the following components (shown in Figure 4-3): communication board, airway sampling adapter, and CO2 module.

The module generates infrared light and beams it through the sample cell to a detector on the opposite side. CO2 from the patient that is aspirated into the sample cell absorbs some of this energy. The system uses a sampling rate of 50 ml/min.

The system determines CO2 concentration in the breathing gases by measuring the amount of light absorbed.

The ventilator displays CO2 measurements as numeric values, waveforms, trends, and loops.

Figure 4-3. Sidestream CO2 monitoring components and assembly

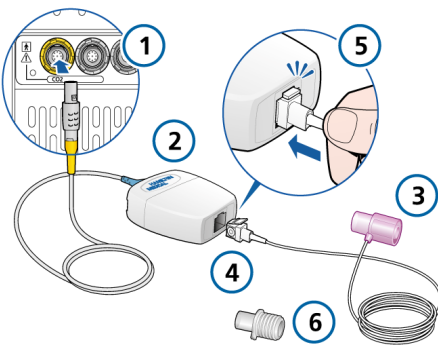

- | | |
|--|--------------------------------------|
| 1 Communication board with CO2 connection port | 4 Sampling cell |
| 2 CO2 module | 5 Connecting sampling cell to module |
| 3 Airway adapter (Neonatal) | 6 Airway adapter (Adult/Ped.) |

⁹ You can connect the CO2 sensor in front of or behind the flow sensor according to your institution's protocol.

4.3.2.1 Connecting the sidestream CO2 sensor

Before proceeding, review the safety information in Chapter 1.

To set up CO2 sidestream monitoring


Refer to Figure 4-3.

- 1. Connect the CO2 module cable to the CO2 connection port (1) on the ventilator.
- 2. Insert the sample cell (4) into the CO2 module (2). The sample cell clicks into place.

Inserting the sample cell into the module automatically starts the sampling pump. Removing the cell turns the pump off.

- 3. Perform the zero calibration of the adapter, if necessary, as described in Section 5.4.5 before connecting it to the breathing circuit.
- 4. Connect the adapter between the inspiratory limb and the flow sensor (or between the inspiratory limb and HMEF, if used). See Figure 4-4.
The sampling line should face away from the patient.
- 5. Secure the sampling line safely out of the way.

Figure 4-4. Connecting CO2 adapter (1) to the breathing circuit

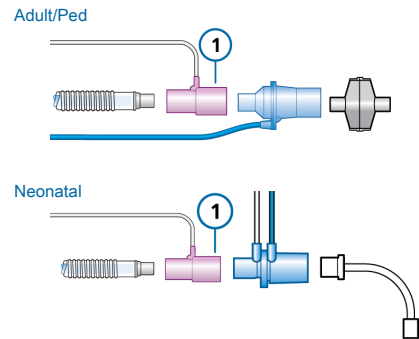

To remove the sample cell

- 1. Remove the airway adapter from the breathing circuit.
- 2. Press down on the locking tab and remove the sample cell from the CO2 module.

4.4 Setting up SpO2 monitoring

The HAMILTON-C3 supports input of SpO2 and related pulse oximetry data, and provides integrated monitoring and data display.

Enabling SpO2 measurement on the ventilator requires enabling the SpO2 hardware (in Configuration) and enabling the SpO2 sensor.

Table 4-2. SpO2 measurement overview

For details about ...	See ...
Activating the SpO2 hardware	Section 13.9.3
Enabling the SpO2 sensor	Section 4.5
Working with SpO2 data	Pulse Oximetry Instructions for Use

4.5 Enabling sensors

Before proceeding, review the safety information in Chapter 1.


In addition to hardware activation for CO2 and SpO2 measurement (Section 13.9.3), the O2, CO2, and/or SpO2 sensors must be individually enabled for monitoring data to be available.

To enable sensor monitoring

- 1. Touch **System > Sensors > On/Off**.
- 2. Select the appropriate checkboxes (O2 cell, CO2 sensor, SpO2 sensor) to enable/disable the monitoring functions, as desired.

The ventilator always enables O2 monitoring upon restart.

Figure 4-5. System > Sensors > On/Off window

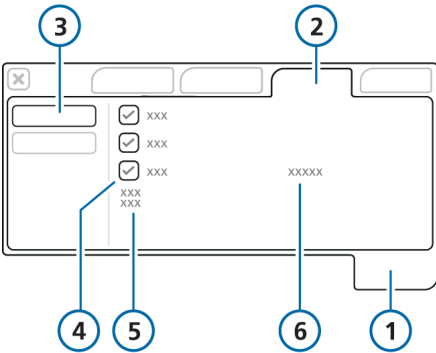

- | | |
|-----------|--|
| 1 System | 4 O2 cell, CO2 sensor ¹⁰ ,
SpO2 sensor ¹⁰ |
| 2 Sensors | 5 SpO2 sensor and cable
status ¹⁰ |
| 3 On/Off | 6 SpO2 sensor type ¹⁰ |

¹⁰ If the option is installed and activated.

¹¹ See the Hamilton Medical e-catalog for compatible devices.

¹² Aerogen nebulization is not supported for patients younger than 28 days old in the USA.

4.6 Setting up nebulization


The HAMILTON-C3 supports the use of Aerogen and pneumatic nebulizers for adult and pediatric patients.¹¹

For neonatal patients, use an Aerogen nebulizer system.¹² For Aerogen connection and device details, refer to the manufacturer's *Instructions for use*.

To connect a pneumatic nebulizer to the breathing circuit set

- 1. Connect the nebulizer to the breathing circuit as shown in Figure 4-6.
- 2. Connect the nebulizer tubing to the **Nebulizer** port on the ventilator (Figure 2-2).


Figure 4-6. Connecting a pneumatic nebulizer

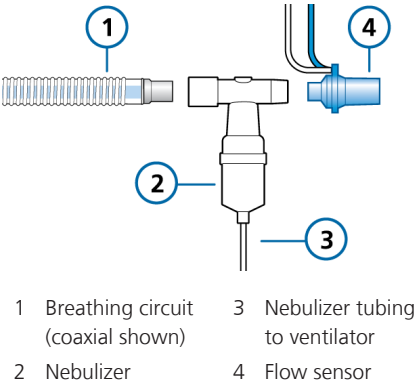

For additional details, refer to the manufacturer's *Instructions for use*.

For nebulizer details and operation, see Section 10.8.

Figure 4-7. Connecting an Aerogen nebulizer

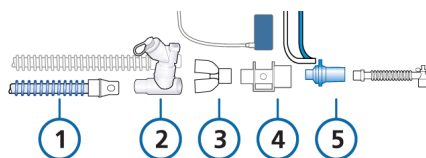

- | | |
|------------------------|-------------------------------------|
| 1 Inspiratory limb | 4 CO2 adapter/
sensor (optional) |
| 2 Aerogen
nebulizer | 5 Flow sensor |
| 3 Y-piece | |

For additional information, refer to the manufacturer's Instructions for use.

4.7 Connecting to external devices

You can connect the ventilator to a patient monitor, PDMS, or computer using the communication ports on the ventilator. For details, see the *Communication Interface User Guide*, available on MyHamilton.

5

Specifying ventilation settings

5.1	Process overview	68
5.2	Selecting the patient group	68
5.3	Entering patient data	69
5.4	Performing the preoperational check, tests, and calibrations	70
5.5	Selecting the ventilation mode	77
5.6	Setting alarm limits	83
5.7	Starting ventilation	85
5.8	Stopping ventilation	85
5.9	About the control parameters	86

5.1 Process overview

This section explains how to set up the HAMILTON-C3 for ventilation on an individual patient.

Setting up ventilation generally comprises the following steps, each of which is described in this chapter:

- Selecting the patient group
- Selecting the desired preconfigured settings (**Quick setup**)
- Specifying patient data
- Performing the preoperational check, including:
 - Performing a breathing circuit **Tightness test**
 - Calibrating the flow sensor, O2 sensor, and zero calibration of the CO2 sensor
- Testing alarms
- Selecting the ventilation mode
- Reviewing and adjusting control settings
- Reviewing and adjusting alarm limits

5.2 Selecting the patient group

Before proceeding, review the safety information in Chapter 1.

The HAMILTON-C3 supports the following patient groups: **Adult/Ped** (adult and pediatric patients) and **Neonatal**.

Table 5-1. Patient groups


Adult/Ped	Neonatal
Sex: M, F	Weight: 0.2 to 30 kg
Height: 30 to 250 cm	Minimum delivered tidal volume: 2 ml
IBW: 3 to 139 kg	
Minimum delivered tidal volume: 20 ml	

To select the patient group and initial settings

1. In the **Standby** window (Figure 5-1), touch the desired patient group tab:
 - **Adult/Ped**
 - **Neonatal**
 - **Last patient.** Reuse the last active ventilator parameters.The selected patient group appears under the mode name. (Figure 2-5).
2. For a new patient, touch the desired **Quick setup** button (Section 5.2.1).

The settings saved with the selected **Quick setup** are loaded and displayed, in addition to the default patient sex/height/IBW (**Adult/Ped**) or weight (**Neonatal**).

Figure 5-1. Patient group options in Standby window

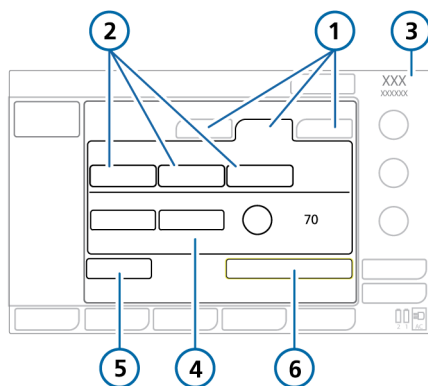

- | | |
|-----------------------------------|--|
| 1 Patient group tabs | 4 Sex/height/IBW (or Weight for Neonatal) for selected Quick setup |
| 2 Quick setups | 5 Preop check |
| 3 Selected mode and patient group | 6 Start ventilation (when HiFlowO2 is selected: Start therapy) |

5.2.1 About Quick setups: preconfigured settings

For each of the patient groups, you can define up to three different default configurations, referred to as **Quick setups**.

During patient setup, you can then quickly pre-configure the ventilator per your standard protocols, and modify settings as needed.

Each **Quick setup** defines a ventilation mode, mode control settings, graphic display selections, alarm limit settings, Vent Status panel settings, and **Vt/IBW** (**Adult/Ped**) or **Vt/kg** (**Neonatal**).

The **Quick setups** are defined in Configuration (Chapter 13).

5.3 Entering patient data

⚠ CAUTION

Entering the correct patient data ensures safe ventilation settings for start up, Apnea backup, and safety ventilation.

Before proceeding, review the safety information in Chapter 1.

Specifying the correct patient data is particularly important, as the ventilator uses this data as a basis for some calculations and initial mode control settings.

- For the **Adult/Ped** patient group, the ventilator uses sex and patient height to calculate the ideal body weight (IBW).

The following control settings are based on IBW: **Vt**, **Rate**, **T low**, **T high**, and **TI**, and **Apnea backup** and safety settings.

- For **Neonatal** patients, the ventilator uses the patient body weight.

The following parameters are set based on **Weight**: **Vt**, **Rate**, **T low**, **T high**, **TI**, and **TI max**, and **Apnea backup** and safety settings.

To enter patient data

- In the **Standby** window:
 - **Adult/Ped**. Specify the patient sex and height. The device calculates the patient IBW.
 - **Neonatal**. Specify the patient weight.

5.4 Performing the preoperational check, tests, and calibrations

The tests and calibrations described in this section help verify the safety and reliability of the ventilator.

If a test fails, troubleshoot the ventilator as indicated or have the ventilator serviced. Make sure the tests pass before you return the ventilator to clinical use.

The test results are stored in memory, including when the ventilator is turned off. This allows the ventilator to be checked and kept in storage, ready for use.

The time and date of the last test is displayed in the **System > Tests & calib.** window. Ensure the last performed preoperational test is valid for your patient.

The audible alarm is paused during calibration, and for 30 seconds thereafter.

Table 5-2. When to perform tests and calibrations


Test or calibration	When to perform
Preoperational check	Before connecting a new patient to the ventilator.
Flow sensor calibration and tightness test	After connecting a new breathing circuit or component (including a flow sensor).
O2 cell calibration, if needed	After installing a new O2 cell or when a related alarm occurs.

Test or calibration	When to perform
CO2 sensor/ adapter zero calibration (mainstream/ sidestream)	Required after connecting a CO2 sensor or when a related alarm occurs. Recommended after switching between different airway adapter types.
Alarm tests	As desired

To access tests and calibration functions

- Do either of the following:
 - Touch **System > Tests & calib.**
 - In the **Standby** window, touch **Preop check.**
- Touch the button for the desired operation.

Figure 5-2. System > Tests & calib window

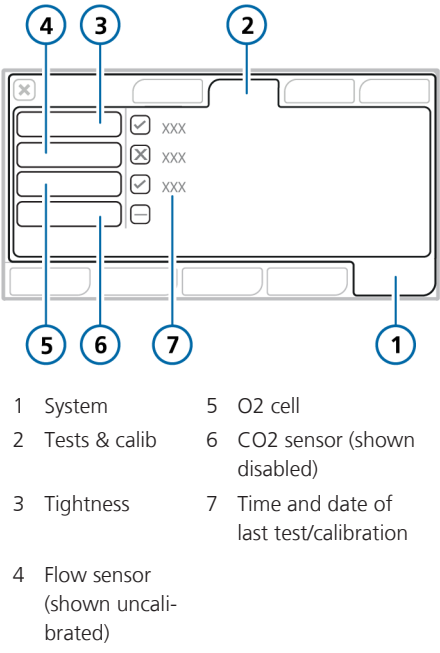

A checkmark indicates the component is calibrated and ready. A red **X** indicates the calibration was unsuccessful. A box with no marks indicates the test/calibration has not been performed. A grayed-out box indicates the CO2 sensor is not enabled.

5.4.1 Performing the preoperational check

Before proceeding, review the safety information in Chapter 1.

For details about performing the preoperational check with neonatal ventilation, see Section 6.2.

When to perform

Before connecting a new patient to the ventilator.

To perform the preoperational check

1. Use a setup as described in Table 5-3.
2. Perform all of the steps in Table 5-4.

To ensure that the ventilator functions according to specifications on your patient, perform the preoperational check using the breathing circuit that will be used on the patient.

Table 5-3. Test breathing circuit setup

Component	Specification
Breathing circuit	Adult/pediatric, ID10 to ID22
Flow sensor	Adult/pediatric, with calibration adapter
Test lung	Demonstration lung, 2 liter, with adult ET tube between flow sensor and lung

Table 5-4. Preoperational check, overview

Do or observe...	Verify ...
1 Connect ventilator to primary power and an oxygen supply.	
2 Assemble the patient breathing circuit.	The breathing circuit is assembled correctly.
3 Turn on the ventilator.	During the self test, the alarm lamp flashes yellow and red in sequence and the buzzer sounds briefly. When complete, the alarm lamp flashes yellow again.
4 With the ventilator in Standby , touch Preop check in the Standby window.	The System > Tests & calib window opens.
5 Perform the Tightness test.	The test passes. See Section 5.4.2.
6 Calibrate the flow sensor.	The calibration is successful. See Section 5.4.3.
7 If necessary, run the O2 cell calibration.	The calibration is successful. See Section 5.4.4.
8 If necessary, run the CO2 sensor zero calibration.	The zero calibration is successful. See Section 5.4.5.

Do or observe...	Verify ...
9 Generate test alarms.	The corresponding alarm message is displayed in the message bar. See Section 5.4.6. Note that patient alarms are suppressed in Standby.

Corrective action

A green checkmark indicates the component is calibrated and ready. A red **X** indicates the calibration was unsuccessful.

If the ventilator does not pass the preoperational check, have it serviced.

5.4.2 Performing the breathing circuit Tightness test

Before proceeding, review the safety information in Chapter 1.

This test checks for leakage in the patient breathing circuit.

When to perform

After installing a new or decontaminated breathing circuit or component (including a flow sensor).

To perform the Tightness test

1. Set up the ventilator for ventilation, complete with breathing circuit and flow sensor.
2. Touch **System > Tests & calib.**
3. Touch **Tightness**.



The text **Disconnect patient** is now displayed.

4. Disconnect the breathing circuit at the patient side of the flow sensor. Do not block the open end of the flow sensor.

The text **Tighten patient system** is now displayed.

5. Block the opening (wearing a glove is recommended).

Ensure the opening is fully blocked. Failure to do so may result in test failure.

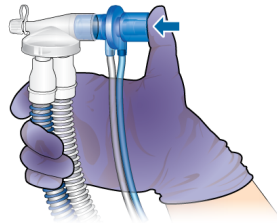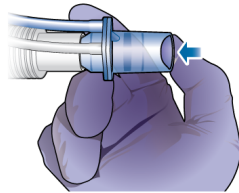

The text **Connect patient** is now displayed.

6. Connect the patient.
7. When the test is complete, verify that there is a checkmark in the **Tightness** checkbox.

To cancel the test while it is in progress

- Touch **Tightness** again.

In case of test failure

If the test fails, a red **X** is displayed in the **Tightness** checkbox.

Ensure that you have performed all steps of the test correctly. If so, perform the following checks, repeating the **Tightness** test after each one, until the test is successful:

- Check the breathing circuit for a disconnection between the ventilator and the flow sensor, or for other large leaks (for example, breathing circuit, humidifier).
- Check that the flow sensor and expiratory valve set are properly seated.
- If the calibration still fails, replace the flow sensor.
- If the calibration still fails, replace the expiratory valve membrane.
- If the calibration still fails, replace the expiratory valve set.
- If the calibration still fails, replace the breathing circuit.

If the problem still persists, have the ventilator serviced.

5.4.3 Calibrating the adult/pediatric flow sensor

This calibration checks and resets the calibration points specific to the flow sensor in use, and measures circuit resistance compensation.

Ensure you are using the correct flow sensor for the selected patient group. If there is a mismatch, calibration fails.

 
For details about calibrating a neonatal flow sensor, see Section 6.2.1.

When to perform


After connecting a breathing circuit or component.

To calibrate an adult/pediatric flow sensor


1. Set up the ventilator for ventilation, complete with breathing circuit and flow sensor.
2. Touch **System > Tests & calib.**
3. Touch **Flow sensor.**
If you have not already disconnected the patient, the message line displays **Disconnect patient.**
4. Disconnect the patient now.



5. When prompted, attach the calibration adapter to the flow sensor and flip them 180° so the adapter is directly connected to the limb (as shown below).

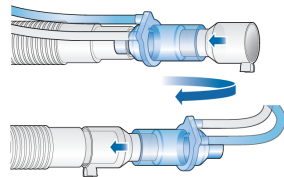

 6. When prompted, flip the flow sensor/ adapter 180° again, so the flow sensor is directly connected to the limb, and remove the calibration adapter.



7. When calibration is complete, verify that there is a checkmark in the **Flow sensor** checkbox.
8. When successful, continue with other tests or ventilation.

To cancel an ongoing calibration

- ▶ Touch **Flow sensor** again.

In case of calibration failure

If the calibration fails, a red **X** is displayed in the **Flow sensor** checkbox.

Ensure that you have performed all steps of the test correctly. If so, perform the following checks, repeating the calibration after each one, until calibration is successful:

- Ensure that the flow sensor is appropriate for the selected patient group.
- Check the breathing circuit for a disconnection between the ventilator and the flow sensor, or for other large leaks (for example, breathing circuit, humidifier).
- Check that the flow sensor and expiratory valve set are properly seated.
- If the calibration still fails, replace the flow sensor.
- If the calibration still fails, replace the expiratory valve membrane.
- If the calibration still fails, replace the expiratory valve set.

If the problem persists, have the ventilator serviced.

5.4.4 Calibrating the O2 cell

NOTICE

When using LPO, be sure to disconnect the oxygen supply during calibration.

Calibrate the O2 cell if either of the following occur:

- A red **X** is displayed in the O2 cell checkbox (Figure 5-2)
- The **O2 cell calibration needed** alarm is generated.

To perform O2 cell calibration

1. Using the information in Table 5-5, set the **Oxygen** control as appropriate to calibrate the cell using either 21% or 100% oxygen.
For example, to calibrate during active ventilation with 100% oxygen, ensure the **Oxygen** control is set to 22% or higher.
2. Touch **System > Tests & calib.**
3. Touch **O2 cell**.
4. When calibration is complete, verify that there is a checkmark in the **O2 cell** checkbox.

Table 5-5. Oxygen concentration during O2 cell calibration

Standby or active ventilation	Gas source connection status	Set Oxygen to ...
100% oxygen calibration¹³		
Standby	HPO Connected	> 21 %
Active ventilation	HPO Connected	> 21 %
21% oxygen calibration		
Standby	HPO Disconnected	any
Standby	HPO Connected	21 %
Standby	LPO Disconnected	21 %
Active ventilation	HPO Connected	21 %
Active ventilation	LPO Disconnected	21 %

In case of calibration failure

If the calibration fails, a red **X** is displayed in the O2 cell checkbox.

Perform the following checks, repeating the calibration after each one, until calibration is successful:

- Ensure a Hamilton Medical O2 cell is installed.
- If the second calibration attempt fails, replace the O2 cell.

If the problem persists, have the ventilator serviced.

5.4.5 Performing a zero calibration of the CO2 sensor/adaptor

Before proceeding, review the safety information in Chapter 1.

CAUTION

- *Always perform zero calibration with the CO2 sensor (mainstream) or CO2 module (sidestream) connected to the airway adapter.*
- *Be sure NOT to cover both ends of the airway adapter with your fingers.*

The CO2 adapter zero calibration compensates for optical differences between airway adapters and for sensor drift.

Note that the CO2 sensors are calibrated at the factory; you only need to zero the adapters as described next.

Zero calibration requirements for mainstream CO2 sensors

Perform a zero calibration in the following cases:

- With the first use of the sensor
- When changing between airway adapter types (for example, from single use to reusable)
- When the CO2 calibration needed alarm is generated

¹³ Calibrating at 100% improves the stability of measurements at higher oxygen concentrations during use.


Zero calibration requirements for side-stream CO2 sensors

You only need to perform a zero calibration with sidestream CO2 sensors when the CO2 calibration needed alarm is generated.

To ensure all CO2 is dissipated, wait 2 minutes to perform the zero calibration after removing the adapter from the patient's airway.


To perform the zero calibration of the CO2 sensor/adapter (mainstream) and sensor/module (sidestream)

1. Connect the CO2 adapter (1 mainstream) or the CO2 module (2 side-stream) to the CO2 port on the ventilator, and ensure CO2 monitoring is enabled.

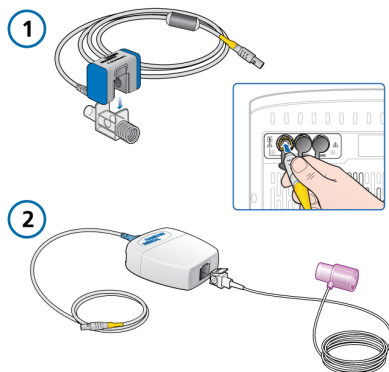

Wait at least 2 minutes for the device to warm up.

2. Disconnect the CO2 sensor from the breathing circuit.
See Figures 4-2 and 4-4 for the sensor location in the breathing circuit.
3. Attach the CO2 sensor to the adapter (1 mainstream) or snap it into the CO2 module (2 sidestream).

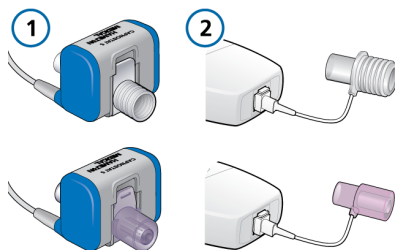

Keep these components away from all sources of CO2, including the patient's and your own exhaled breath, as well as the ventilator exhaust port.

4. Touch **System > Tests & calib.**
5. Touch **CO2 sensor.**
Do *not* move the components during calibration.
6. When the zero calibration is complete, verify that there is a checkmark in the CO2 sensor checkbox.

In case of zero calibration failure

If the zero calibration fails, a red **X** is displayed in the CO2 sensor checkbox.

Perform the following checks, repeating the zero calibration after each one, until it is successful:

- Check the airway adapter and clean if necessary.
- If the zero calibration still fails, ensure there is no source of CO2 near the airway adapter.
- If the zero calibration still fails, connect a new adapter.
- If the zero calibration still fails, connect a new CO2 sensor (mainstream) or CO2 module (sidestream).

If the problem persists, have the ventilator serviced.

5.4.6 Testing the alarms

During ventilator startup, the HAMILTON-C3 performs a self-check that also verifies proper alarm function, including generation of an audible alarm sound. You are *not* required to perform additional alarm tests.

If desired, you can test any adjustable alarm by manually changing the set limit such that the ventilator exceeds or fails to reach the set limit, thereby generating the associated alarm. For details on setting alarm limits, see Section 5.6.

For any tests, use a demonstration lung assembly as described in Section 5.4.1.

5.5 Selecting the ventilation mode

The active ventilation mode is displayed at the top right corner of the display together with the selected patient group.

When first starting to ventilate a patient, the mode associated with the selected **Quick setup** is pre-selected. You can change it, if needed.

For details about each of the modes, see Chapter 7.

To select a mode

1. Touch **Modes** (1).



2. In the **Modes** window, touch the desired mode, then touch **Confirm**.

The **Confirm** button is only displayed after you select a different mode in the window.


The **Controls** window opens.

3. Review and, if needed, adjust the control settings (Figure 5-4), then touch **Confirm** to enable the new mode.

After you touch **Confirm**, the mode changes at the end of the current breath cycle.


Without confirmation, the window closes after a short time and the currently active mode remains in place.

Figure 5-3. Modes window, changing modes

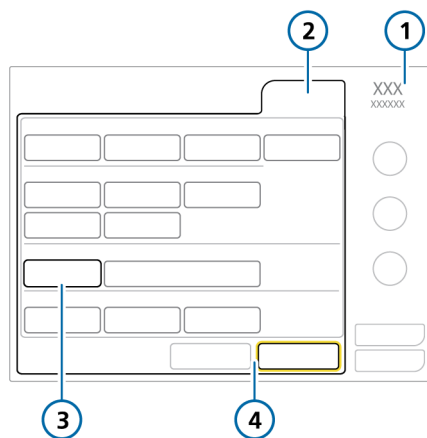

- | | |
|------------------------------|------------------|
| 1 Active mode, patient group | 3 New mode |
| 2 Modes | 4 Cancel/Confirm |

Figure 5-4. Controls window, changing modes

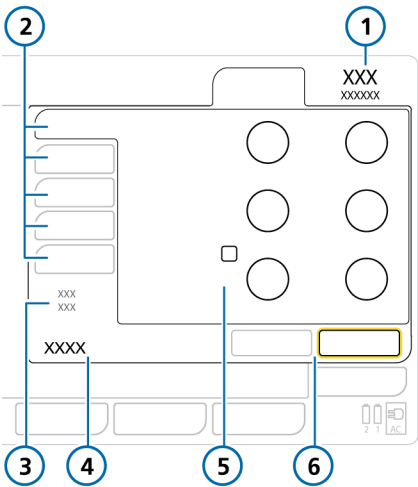

- | | |
|--|-------------------------|
| 1 Active mode, patient group | 4 New mode |
| 2 Tabs: Basic, More, Apnea, TRC, Patient | 5 Controls for new mode |
| 3 Values depending on mode | 6 Cancel/Confirm |

5.5.1 Reviewing and adjusting ventilation settings

You specify ventilation settings in the Controls window tabs: **Basic**, **More**, **Apnea**, **TRC**. The **Patient** tab provides access to patient data during ventilation.


Which tabs are available depends on which mode is selected, as well as whether you are in **Standby** or active ventilation.

In addition, the window changes slightly depending on whether you are changing settings for the active mode or you are changing modes.

To change the control settings for the active mode

1. Touch **Controls**, and select and adjust settings as needed. See Figure 5-5. The change takes effect immediately. For details about changing the trigger type, see Section 5.5.2.
2. Touch **More** to enable/disable **Sigh**, if needed.
3. If applicable, touch **Apnea** and select or deselect **Backup** as needed.
4. If applicable, touch **TRC** and enable/disable/adjust settings as needed. See Section 5.5.4.
5. If you need to change basic patient data, touch **Patient** and adjust settings as needed. See Section 5.3.

Figure 5-5. Controls window, settings for active mode

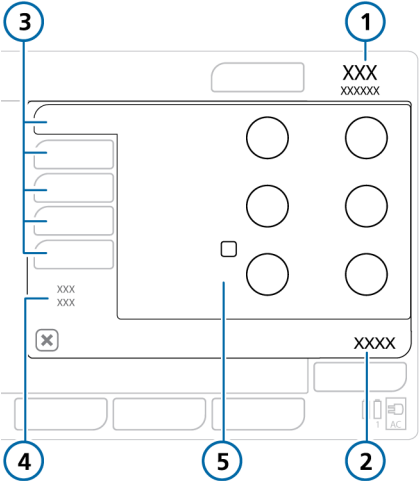

- | | |
|--|--|
| 1 Active mode, patient group | 4 Values depending on mode (minute volume, timing) |
| 2 Controls | 5 Mode controls |
| 3 Tabs: Basic, More, Apnea, TRC, Patient | |

5.5.2 About the trigger types

Before proceeding, review the safety information in Chapter 1.

5.5.2.1 Selecting the inspiratory trigger type

You can select the inspiratory trigger type to use. Table 5-6 describes the trigger types and behavior.

Table 5-6. Inspiratory trigger types

Trigger type	Description
Flow trigger	The patient's inspiratory flow triggers the ventilator to deliver a breath.
P trigger	The drop in airway pressure when the patient tries to inhale triggers the ventilator to deliver a breath.

To specify the inspiratory trigger type and setting

1. Touch **Controls**.
The Controls > Basic window opens.
2. Touch the box to the left of the **Trigger** control to change between the trigger types.
3. Adjust the trigger setting as needed.


Note the following:

- Changing the setting during the inspiratory phase affects the next breath. Changing it during the expiratory phase affects the breath after the next breath.

- If the trigger is set higher than the patient's efforts can achieve, a breath cannot be triggered. Reset the trigger to an achievable value, adjusting the sensitivity of the trigger to the patient's ability.
- The ambient valve of the HAMILTON-C3 opens at -3 cmH2O below ambient pressure. Therefore, be sure to set a pressure trigger setting above this value to ensure accurate trigger sensitivity.

For example, if PEEP is set to 5 cmH2O, P trigger must be set to no less than -8 cmH2O (in total, -3 cmH2O below ambient), to ensure an accurate trigger sensitivity.

Figure 5-6. Trigger type selection box in Controls > Basic window

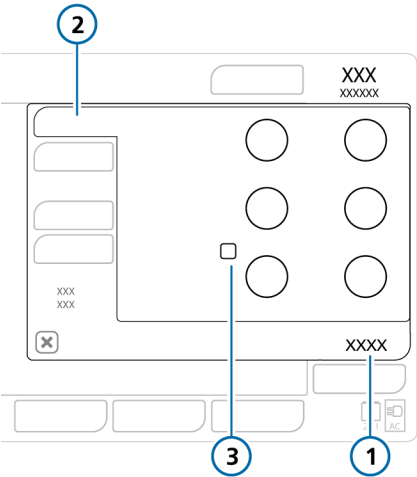

- 1 Controls
- 2 Basic
- 3 Trigger selection box

5.5.3 About Apnea backup ventilation

Before proceeding, review the safety information in Chapter 1.

The HAMILTON-C3 provides apnea back-up ventilation, a mechanism that minimizes possible patient injury due to apnea or cessation of respiration. Apnea backup is available in the following modes: APVsimv, SIMV, SPONT, DuoPAP, APRV, and NIV

Apnea backup ventilation enabled

Apnea backup provides ventilation after the apnea time passes with no breath attempts detected. The apnea time is set in the Alarms window using the Apnea time control.

When this occurs, the ventilator automatically and immediately switches into Apnea backup ventilation.


It generates a low-priority alarm, displays the alarm Apnea ventilation, and provides ventilation using the settings specified in Section 7.1.3.

When set to Automatic, the control setting for the Apnea backup mode depends on the IBW (or weight for neonates) of the patient.

To change the Apnea backup control settings

1. Touch **Controls > Apnea**.
2. Clear the Automatic checkbox.
The settings controls are enabled.
3. Change the values as desired.
The changes take effect immediately.

Figure 5-7. Controls > Apnea window

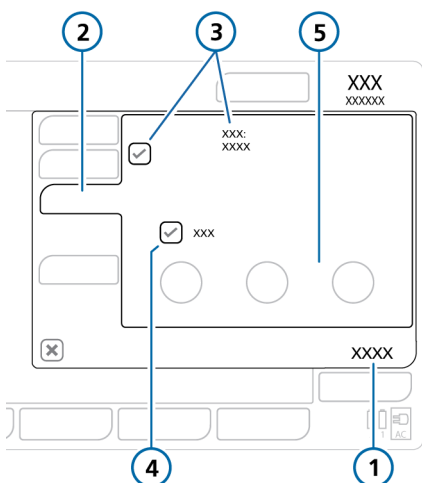

- | | |
|-----------------------------|--|
| 1 Controls | 4 Automatic check box |
| 2 Apnea | 5 Control settings corresponding to the mode |
| 3 Backup check box and mode | |

If the patient triggers two consecutive breaths, the ventilator reverts to ventilation in the original support mode and at the original settings, and displays the message, **Apnea ventilation ended**.

Once **Apnea backup** ventilation is enabled or disabled, it retains this status in all applicable modes. **Apnea backup** ventilation requires no clinician intervention, although you can freely change the mode during **Apnea backup** ventilation, either switching to a new mode or accepting the backup mode as the new mode.

Apnea backup ventilation disabled

When **Apnea backup** is disabled, the high-priority **Apnea** alarm is generated when apnea occurs and there is no patient trigger within the operator-set interval.

5.5.4 About tube resistance compensation (TRC)

Before proceeding, review the safety information in Chapter 1.

TRC is intended for use with spontaneously breathing patients.

Tube resistance compensation (TRC) is flow-proportional pressure support to compensate the flow resistance of the ventilation tube (endotracheal (ET) or tracheostomy (Trach)).

100% compensation indicates that resistance due to the tube itself is compensated. Note that internal resistance (for example, from secretions) and external resistance (for example, from tube kinking) are not compensated.


TRC can be enabled or disabled for the expiration phase, as well.

By default, TRC is disabled.

When TRC is enabled:

- The additional work of breathing due to the tube can be partially or completely compensated.
- The tracheal pressure (P_{trach}) waveform (orange) is shown together with the P_{aw} waveform (yellow).
- At the beginning of the inspiratory phase, the pressure will be higher than without TRC, and will drop below PEEP at the beginning of the exhalation phase to compensate the flow-dependent resistance. See Figure 5-8 for an example.
- The displayed P_{peak} may be higher than the set PEEP/CPAP plus $P_{control}/P_{support}$ due to the additional pressure required to work against the tube resistance.

Figure 5-8. Ptrachea (orange) and Paw (yellow) waveforms, with TRC active

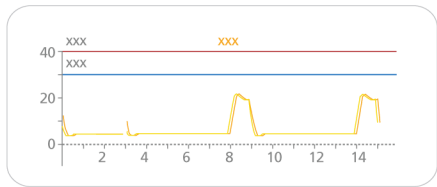

The **Ptrachea** waveform is calculated as follows:

$$\Delta P_{ETT} = K_{tube} \times \dot{V}$$

where

ΔP_{ETT}	Flow-proportional pressure drop over the tube. This is the difference between the Ptrachea and Paw waveforms.
K_{tube}	Tube coefficient (k-factor). Dependent on inner diameter and length of tube, is equal to flow/resistance at a flow of 1 l/s.
$\dot{V}$	Flow of the breathing gas.


To specify TRC settings

Refer to Figure 5-9.

1. Touch **Controls > TRC**.
2. Touch **ET tube** to set the ET tube compensation settings.
To set the tracheostomy tube compensation settings, touch **Trach tube**.
3. Using the **Tube ID** and **Compensate** controls, specify the tube diameter (in mm) and compensation percentage (%) to apply (Figure 5-9).
If the tube is shortened, reduce the compensation percentage.
4. If desired, select the **Expiration** checkbox to activate compensation during exhalation.

5. To disable TRC if it has been enabled, touch **Disable TRC**.
6. Touch **Apply** to confirm the settings.

Figure 5-9. Controls > TRC window

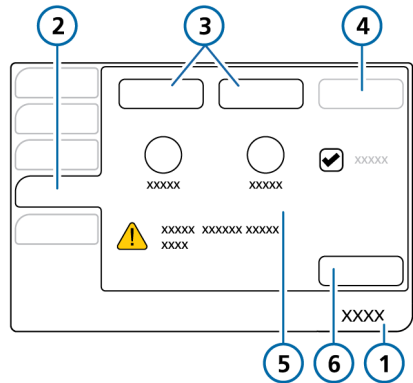


- | | |
|---------------------|---|
| 1 Controls | 4 Disable TRC |
| 2 TRC | 5 Tube ID and Compensate controls, Expiration |
| 3 ET and Trach tube | 6 Apply |

5.6 Setting alarm limits

Before proceeding, review the safety information in Chapter 1.

You can access the **Alarms** window and change alarm settings at any time, without affecting ventilation.

Figure 5-10. Alarms > Limits 1 window

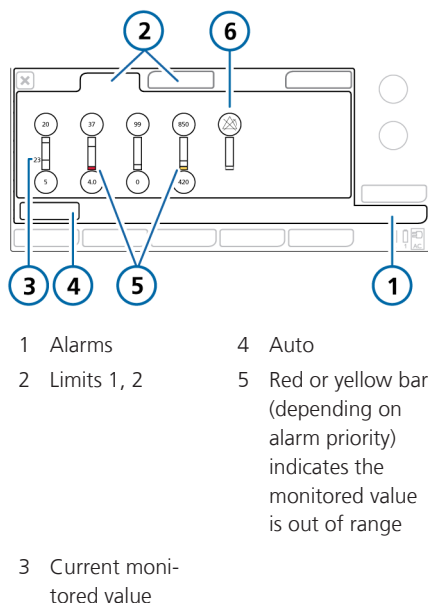

To review and adjust alarms

1. Touch the **Alarms** button.
The **Alarms > Limits 1** window is displayed (Figure 5-10).
2. To set an alarm limit individually, touch the alarm control and adjust the value.
Repeat for any other alarm.
3. Access additional alarm settings by touching the **Limits 2**, and if used, **Limits 3** tabs.
For details about the Oxygen alarm limits, see Section 5.6.1.
4. To set alarm limits automatically, touch **Auto**¹⁴ in the **Limits 1** window.
Selecting **Auto** automatically sets alarm limits around the current monitoring parameter values except for the **Vt** and **Apnea** alarm limits¹⁵. These alarm limits remain unchanged, and must be set manually to the desired level.
Note that some automatic settings are not appropriate under all clinical conditions. Check the validity of the settings as soon as possible.
5. Close the window.

The following table briefly describes each of the adjustable ventilator alarms. Additional details are available in Table 15-9.

For SpO2-related alarms, see the *Pulse Oximetry Instructions for use*.

¹⁴ Not available during neonatal ventilation.

¹⁵ SpO2-related alarms are also not automatically set.

Table 5-7. Adjustable alarms

Alarm	Definition
Apnea time	The maximum time allowed from the beginning of one inspiration to the beginning of the next inspiration. If the patient does not trigger a breath during this time: • A low-priority alarm sounds if Apnea backup is enabled. Apnea ventilation begins. • A high-priority alarm sounds if Apnea backup is disabled The Apnea alarm can be turned off in nCPAP-PS mode.
ExpMinVol (low and high)	Low and high expiratory minute volume. If either limit is reached, a high-priority alarm is generated.
fTotal (low and high)	Low and high monitored total breath rate (fTotal), including both spontaneous and mandatory breaths. If either limit is reached, a medium-priority alarm is generated.
Oxygen (low and high)	Low and high monitored oxygen concentration (Oxygen). If either limit is reached, a high-priority alarm is generated. Applies only when low-pressure oxygen (LPO) is used.
PetCO2 (low and high)	Low and high monitored PetCO2. If either limit is reached, a medium-priority alarm is generated.
Pressure (low and high)	Low and high monitored pressure at the patient airway (Ppeak). If the high Pressure limit is reached or the device fails to reach the low Pressure limit, a high-priority alarm is generated. When pressure reaches the high Pressure limit minus 10 cmH2O, pressure is limited to this setting; the pressure is not increased further. If the delivered pressure is the same as the set high Pressure alarm limit, the device aborts the breath and reduces the pressure to PEEP level. Sigh breaths are an exception to this rule. In this case, the ventilator may apply inspiratory pressure 3 cmH2O below the high Pressure alarm limit (high Pressure limit minus 3 cmH2O).

Alarm	Definition
Vt (low and high)	Low and high expiratory tidal volume, for two consecutive breaths. If either limit is reached, a medium-priority alarm is generated. When the delivered Vt is > 1.5 times the set upper Vt alarm limit, the Inspiratory volume limitation alarm is generated. In this case, the device aborts the breath and reduces the pressure to PEEP level. The APV controls reduce the pressure for the next breath by 3 cmH2O.

5.6.1 About the Oxygen alarm limits

How the device sets the **Oxygen** alarm limits depends on the gas source used (**LPO** or **HPO**).

Oxygen alarm limits are set as follows:

Table 5-8. Setting Oxygen alarm limits in **LPO** and **HPO**

Gas source	Setting Oxygen alarm limit
LPO	Always manually. The Oxygen alarm limit controls are enabled in the Alarms window and are manually adjusted, as appropriate.
HPO	Always automatically. The Oxygen high/low alarms are automatically set to the current Oxygen setting ± 5 (absolute value). The Oxygen alarm limit controls are disabled in the Alarms window.

5.7 Starting ventilation

Before starting ventilation, review the patient information in the **Standby** window and ensure it is correct.

To start ventilation

- Do either of the following:
 - In **Standby**, press the **Power/Standby** key.
 - In **Standby**, touch **Start ventilation**.
- When using **HiFlowO2**, the button is labeled **Start therapy**.

Ventilation starts.

5.8 Stopping ventilation

To enter Standby and stop ventilation

1. Press the **Power/Standby** key.
2. In the confirmation window, touch **Activate standby**.

The device enters **Standby** (Figure 5-1). The yellow counter shows the time elapsed in **Standby**.

5.9 About the control parameters

Table 5-9 briefly describes each of the ventilator control parameters.

Table 15-5 provides the control parameter ranges and default settings, including accuracy.

Table 5-9. Control parameters, defined

Parameter	Definition
%MinVol	Percentage of minute volume to be delivered in ASV mode. The ventilator uses the %MinVol, Pat. height, and sex settings to calculate the target minute ventilation. Add 20% per degree of body temperature > 38.5°C (101.3°F).
Apnea backup	A function that provides ventilation after the adjustable apnea time passes without breath attempts. If Automatic is enabled, control parameters are calculated based on the patient's IBW. Applies in APVsimv, SIMV, SPONT, DuoPAP, APRV, and NIV modes. <i>Be sure to review the safety information in Chapter 1.</i>
ETS	ETS (expiratory trigger sensitivity) is the percent of peak inspiratory flow at which the ventilator cycles from inspiration to exhalation. Increasing the ETS setting results in a shorter inspiratory time. The ETS setting lets you match the inspiratory time of pressure-supported breaths to the patient's neural timing. Applies to spontaneous breaths.
Flow	In HiFlowO2, Flow is the continuous and constant flow of medical gas to the patient in liters per minute.
Flow pattern	Flow pattern for gas delivery. This is not affected by patient pressure or other limitations as long as the peak inspiratory flow or pressure limit is not exceeded. Applies to volume-controlled mandatory breaths.
Flow trigger	See Trigger.
I:E	Ratio of inspiratory time to expiratory time. Applies to mandatory breaths, and in APVsimv/APVcmv and PCV+ modes.
IBW (kg)	Ideal body weight. A calculated value using height and sex, used in calculations for ASV and startup ventilation settings for adult and pediatric patients.

Parameter	Definition
Oxygen	Oxygen concentration to be delivered. Applies to all breaths.
P high	The high pressure setting in APRV and DuoPAP modes. Absolute pressure, including PEEP.
P low	The low pressure setting in APRV.
Pasvlimit	The maximum pressure to apply in ASV mode. For the ASV controller to function correctly, Pasvlimit must be at least 15 cmH ₂ O above PEEP/CPAP. Changing Pasvlimit or the Pressure alarm limit automatically changes the other: The Pressure alarm limit is always 10 cmH ₂ O greater than Pasvlimit.
Pat. height	Patient height. Used to compute ideal body weight (IBW) for adult and pediatric patients.
Pause	Inspiratory pause or plateau, as a percentage of total breath cycle time. After the required gas is delivered (after the operator-set V _t is reached), gas remains in the lungs and exhalation is blocked during the Pause time. The use of a pause increases the residence time of gas in the patient's lungs. Applies to volume-controlled mandatory breaths, when the device is configured in this manner (Section 13.4.1).
Pcontrol	The pressure (additional to PEEP/CPAP) to apply during the inspiratory phase in PCV+ and PSIMV+ modes.
Peak flow	Peak (maximum) inspiratory flow. Applies to volume-controlled mandatory breaths, when the device is configured in this manner (Section 13.4.1).
PEEP/CPAP	Positive end expiratory pressure and continuous positive airway pressure, baseline pressures applied during the expiratory phase. Applies to all breaths, except in APRV mode and with HiFlowO ₂ .
Pinsp	Pressure (additional to PEEP/CPAP) to apply during the inspiratory phase. Applies in PSIMV+ PSync, NIV-ST, and nCPAP-PS modes.

Parameter	Definition
P-ramp	Pressure ramp. The rate at which pressure rises to meet the set value. The P-ramp setting lets you fine-tune the initial flow output during a pressure-controlled or pressure-supported breath to match the ventilator flow to the patient's demand. Applies to all breaths. Notes: • Short P-ramp settings (0 to 50 ms) provide higher initial flow rates and result in faster attainment of the target pressure. This may benefit patients with elevated respiratory drive. • Shorter P-ramp values have been correlated with reduced work of breathing in certain patients. • Setting the P-ramp too low, especially in combination with a small ET tube (high resistance), may result in a noticeable pressure overshoot during the early stage of inspiration and generation of a Pressure limitation alarm. • Setting the P-ramp too high may prevent the ventilator from attaining the set inspiratory pressure. A square (rectangular) pressure profile is the goal.
Pressure trigger	See Trigger.
Psupport	Pressure support for spontaneous breaths in SPONT, NIV, APVsimv, PSIMV+, and DuoPAP modes. It is the pressure (additional to PEEP/CPAP) to apply during the inspiratory phase. Pressure support helps the patient counteract the flow resistance of the breathing circuit and endotracheal tube. It compensates for the decreasing tidal volume and rising respiratory rate of a spontaneously breathing patient.
Rate	Respiratory frequency or number of breaths per minute.
Sex	Sex of patient. Used to compute ideal body weight (IBW) for adult and pediatric patients.
Sigh	When Sigh is activated, every 50th breath is applied using one of the following settings: • In pressure-controlled modes, the pressure delivered is > 10 cmH2O above the currently set PControl or Pinsp. • In volume-controlled modes, the tidal volume delivered is 150% of the current tidal volume (Vt) setting. During Sigh breaths, the Pressure and Vt alarm limits remain in effect to help protect the patient from excessive pressures and volumes. Not available for neonatal patients, in DuoPAP or APRV modes, or with HiFlowO2.

Parameter	Definition
T high	Length of time at the higher pressure level, P high, in DuoPAP and APRV modes.
T low	Length of time at the lower pressure level, P low, in APRV mode.
TI	Inspiratory time, the length of time to deliver gas for inspiration at the Pcontrol or Vt setting. Used with Rate to set the breath cycle time. Applies in (S)CMV, SIMV, PCV+, APVcmv, APVsimv, PSIMV+, NIV-ST, and nCPAP-PS modes. In PCV+, APVcmv, (S)CMV, and SIMV modes, TI can be controlled by Rate and TI or by the I:E ratio (set in Configuration). All other modes are controlled by Rate and TI.
TI max	Maximum inspiratory time for cycled breaths in NIV, NIV-ST, and SPONT in neonatal modes, as well as the neonatal mode, nCPAP-PS. For all patient groups, the switchover from inspiration to exhalation in spontaneous breaths is normally controlled by the ETS. If gas leakage is significant, however, the set cycle may never be reached. The TI max setting provides a backup so inspiration can be terminated. The ventilator switches over to exhalation when the set TI max is reached.
Tip	Inspiratory pause or plateau time. After the required gas is delivered (after the operator-set Vt is reached), gas remains in the lungs and exhalation is blocked during the Tip time. The use of an inspiratory pause increases the residence time of gas in the patient's lungs. Applies to volume-controlled mandatory breaths, when the device is configured in this manner (Section 13.4.1).
TRC: Compensate	Compensation percentage (%).
TRC: Expiration	Activate compensation during exhalation.
TRC: Tube ID	Inner diameter of the tube, in mm.
TRC: Tube type/ Disable TRC	Options are: ET (endotracheal) tube, Trach (tracheostomy) tube, Disable TRC (TRC off)
TRC-related settings	Tube resistance compensation. Reduces the patient's work of breathing by offsetting tube resistance. <i>Review the safety information in Chapter 1.</i>

Parameter	Definition
Trigger, inspiratory	The ventilator offers the following trigger types: Flow and Pressure, which apply to all breaths. For details on selecting the trigger to use, see Section 5.5.2. If the trigger is set higher than the patient is able to meet, a breath cannot be triggered. Reset the trigger to an achievable value, adjusting the sensitivity of the trigger to the patient's ability.
Trigger, inspiratory	Flow The patient's inspiratory flow that triggers the ventilator to deliver a breath.
Trigger, inspiratory	Pressure The drop in airway pressure when the patient tries to inhale triggers the ventilator to deliver a breath. Changing the setting during the: • <i>Inspiratory phase</i> affects the next breath • <i>Expiratory phase</i> affects the breath after the next
Vt/kg	Tidal volume per weight.
Vt	Tidal volume delivered during inspiration in APVcmv, APVsimv, (S)CMV, and SIMV modes.
Weight	Actual body weight. Used only with neonates.

6

Specifying neonatal settings

6.1	Setting up for neonatal ventilation	92
6.2	Performing the preoperational check, tests, and calibrations	95
6.3	Selecting the ventilation mode	97
6.4	Setting the patient weight for ventilation	97
6.5	Alarms for neonatal ventilation	97
6.6	O2 enrichment for neonates	97

6.1 Setting up for neonatal ventilation

Before proceeding, review the safety information in Chapter 1.

Setting up for neonatal ventilation comprises the following steps:

To ...	See ...
On the ventilator, select the patient group and specify weight.	Section 6.1.1
Install the expiratory valve.	Section 3.4.2
Select and assemble the appropriate breathing circuit and components.	Section 6.1.2
Adjust the position of the breathing circuit.	Section 6.1.2.5
Connect external devices.	Chapter 4
Perform the preoperational check and any required tests and calibrations.	Sections 6.2 and 5.4
Select the ventilation mode.	Sections 6.3 and 5.5

6.1.1 Setting the patient group and weight


CAUTION

Entering the correct patient data ensures safe ventilation settings for start up, Apnea backup, and safety ventilation.

You select the patient group and weight in the **Standby** window when first setting up the ventilator for the patient.

You can edit this information during ventilation, if needed, in the **Patient** window.

Figure 6-1. Neonatal Standby window

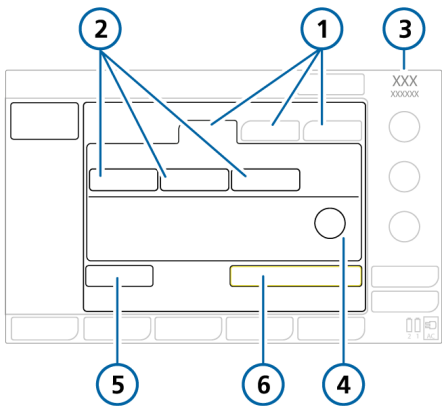

- | | |
|--|--|
| 1 Patient group tabs (Neonatal selected) | 4 Weight |
| 2 Quick setup buttons | 5 Preop check |
| 3 Selected mode and patient group | 6 Start ventilation (when HiFlowO2 is selected: Start therapy) |

To select the patient group

1. In the **Standby** window, touch the **Neonatal** tab. See Figure 6-1.
2. Touch the appropriate **Quick setup** button.

By default, they are labeled **Neonatal 1**, **Neonatal 2**, and **Neonatal 3**. The **Quick setup** names and settings are defined in Configuration. For details, see Section 5.2.1.
3. Touch the **Weight** control and set the patient's body weight.

By default, the weight is set to 2 kg.

You can now select the ventilation mode, if the desired mode is not already selected.

6.1.2 Setting up the patient breathing circuit

Setting up a neonatal breathing circuit comprises the following steps:

Table 6-1. Assembling the breathing circuit

To ...	See ...
Select the components	Section 6.1.2.1
Connect the breathing circuit	Section 6.1.2.2
Connect the flow sensor	Section 6.1.2.4
Position the circuit	Section 6.1.2.5

6.1.2.1 Selecting the breathing circuit components

Select the correct breathing circuit and components for your patient from Table 6-2.

Table 6-2. Neonatal breathing circuit part specifications

Patient group/component	Specification
Patient group	Neonatal
Weight (kg)	0.2 to 30
Breathing circuit tube ID (mm)	10 to 12
Flow sensor	Neonatal
CO2 airway adapter	Neonatal

6.1.2.2 Connecting the neonatal breathing circuit

Figures 2-8 through 2-10 in Chapter 2 show typical neonatal breathing circuit configurations.

6.1.2.3 Working with the expiratory valve

The process is the same as for adult and pediatric patients. See Section 3.4.2.

6.1.2.4 Connecting the neonatal flow sensor

Note the following:

- Use a Hamilton Medical neonatal flow sensor to ventilate your neonatal patient.
- Do *not* use an adult/pediatric flow sensor.
- The neonatal flow sensor adds 1.3 ml of dead space.
- During calibration, the flow sensor is *always* placed after the Y-piece, regardless of which ventilator mode is selected.

To connect the neonatal flow sensor

1. For all modes except nCPAP-PS or when using HiFlowO2, connect a flow sensor between the Y-piece of the breathing circuit and the patient connection. See Figure 6-2.

When using the nCPAP-PS mode, connect the flow sensor between the end of the expiratory limb and the expiratory valve on the ventilator (Figure 6-3).

Note that during calibration you place the flow sensor proximal to the patient.

HiFlowO2 does not use a flow sensor.

2. Connect the blue and clear tubes to the flow sensor connection ports on the ventilator.

The blue tube attaches to the blue connection port. The clear tube attaches to the silver connection port.

3. Calibrate the flow sensor and perform the **Tightness** test. See Section 6.2.

Figure 6-2. Connect flow sensor between the Y-piece and patient interface


 


Figure 6-3. Connecting the flow sensor to the expiratory valve, nCPAP-PS mode

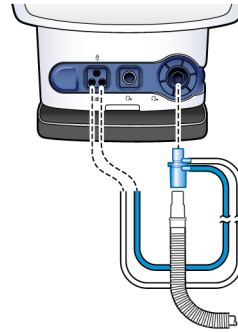

6.1.2.5 Positioning the breathing circuit

After assembly, position the breathing circuit so that the hoses will *not* be pushed, pulled, or kinked as a result of a patient's movement, transport, or other activities, including scanner bed operation and nebulization.

6.2 Performing the preoperational check, tests, and calibrations

Before proceeding, review the safety information in Chapter 1.

The following sections in this chapter provide information that is specific to neonatal ventilation, and is intended as a supplement to the information provided in Chapter 5.

For details about when to perform the tests, and about the full preoperational check process, see Section 5.4.

When to perform

Before connecting a new patient to the ventilator.

To perform the preoperational check

1. Use a setup as described in Table 6-3.
2. Perform all of the steps in Table 6-4.

To ensure that the ventilator functions according to specifications on your patient, perform the preoperational check using the breathing circuit that will be used on the patient.

Table 6-3. Test breathing circuit setup

Component	Specification
Breathing circuit	Neonatal, ID10 to ID12
Flow sensor	Neonatal, with calibration adapter
Test lung	Neonatal, with neonatal ET tube between flow sensor and lung model (an IngMar neonatal lung model is recommended)

Table 6-4. Preoperational check, overview

To ...	See ...
Perform the preoperational check	Section 5.4 in Chapter 5
Perform the Tightness test	Section 5.4.2 in Chapter 5
Calibrate the neonatal flow sensor	Section 6.2.1
Perform other calibrations, as needed	Section 5.4 in Chapter 5

6.2.1 Calibrating the neonatal flow sensor

Calibrate the flow sensor after connecting a new flow sensor or whenever the **Flow sensor calibration needed** alarm is generated.

During calibration, the flow sensor is *always* placed after the Y-piece, regardless of which ventilator mode is selected.


A flow sensor is required for all modes. Before proceeding, ensure you have the calibration adapter available.

To calibrate a neonatal flow sensor


1. Set up the ventilator for ventilation, complete with breathing circuit and flow sensor.
2. Make sure that the **Neonatal** patient group is selected, a neonatal flow sensor is connected, and the calibration adapter is available.
3. Touch **System > Tests & calib.**
4. Touch **Flow sensor.**

If you have not already disconnected the patient, the message line displays **Disconnect patient.**


5. Disconnect the patient now.

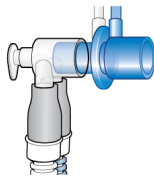


6. When prompted on the display, attach the calibration adapter to the patient end of the flow sensor.

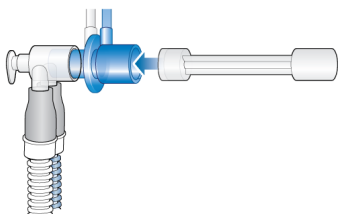

7. When prompted, flip the flow sensor/calibration adapter 180° so the adapter is directly connected to the Y-piece (as shown below).

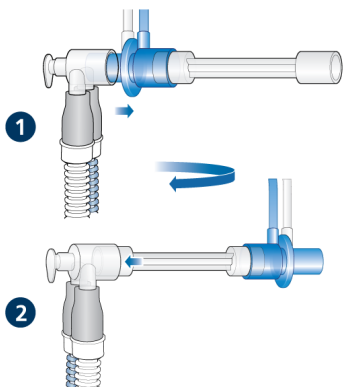

8. When prompted to turn the flow sensor again, remove the calibration adapter, and flip the flow sensor 180° back to its starting position.

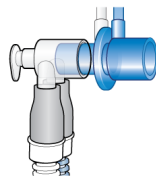

9. When calibration is complete, verify that there is a checkmark in the **Flow sensor** checkbox.
10. When successful, continue with other tests or ventilation.

In case of calibration failure

If the calibration fails, a red **X** is displayed in the **Flow sensor** checkbox.

Perform the following checks, repeating the calibration after each one, until calibration is successful:

- Ensure that the flow sensor is appropriate for the selected patient group.
- Check the breathing circuit for a disconnection between the ventilator and the flow sensor, or for other large leaks (for example, breathing circuit, humidifier).
- Check that the correct flow sensor is connected, and that the flow sensor and expiratory valve/membrane are properly seated.
- If the calibration still fails, replace the flow sensor.
- If the calibration still fails, replace the expiratory valve membrane.
- If the calibration still fails, replace the expiratory valve set.

If the problem persists, have the ventilator serviced.

6.3 Selecting the ventilation mode

The neonatal modes available on the ventilator are either pressure controlled or adaptive (pressure regulated and volume targeted) modes.

Note that the ventilator generates a continuous and constant base flow from the inspiratory outlet to the expiratory outlet during the later part of exhalation.

The base flow is set to a fixed 6 l/min for neonatal patients.

For the list of supported modes and details about each one, see Chapter 7.

To select the ventilation mode

- ▶ See Section 5.5.

6.4 Setting the patient weight for ventilation

For neonates, the ventilator uses actual body weight (instead of a calculated IBW), set in the **Weight** control.

Specifying the correct weight is particularly important as the ventilator uses this data as the basis for some calculations and mode control settings. By default, neonatal weight is set to 2 kg.

To set up the patient, see Section 6.1.1.

6.5 Alarms for neonatal ventilation

Note that the following adjustable alarms use patient **Weight** to set the initial alarm limits:

- Tidal volume, high and low (Vt)
- Minute volume, high and low (ExpMinVol)

Be sure to set the correct patient **Weight** in the **Standby** window before starting ventilation. See Section 6.1.1.

6.6 O2 enrichment for neonates

The applied oxygen concentration during the enrichment maneuver is increased to 125% of the current **Oxygen** setting.

For additional details on performing O2 enrichment, see Chapter 10.

7

Ventilation modes

7.1	Overview.....	100
7.2	Volume-controlled modes, flow control.....	104
7.3	Volume-targeted modes, adaptive pressure control	106
7.4	Pressure-controlled modes	110
7.5	Intelligent Ventilation	116
7.6	Noninvasive modes	118
7.7	Special conditions	122
7.8	Working with noninvasive modes.....	123
7.9	Working with ASV	126

7.1 Overview

The HAMILTON-C3 offers a full range of ventilation modes that provide full and partial ventilatory support.

The primary aims of mechanical ventilation are:

- Elimination of CO2
- Oxygenation
- Decreased work of breathing
- Patient synchronization

The detailed mode descriptions provided in this chapter illustrate how the controls work to achieve these goals.

7.1.1 Breath types and timing options

Hamilton Medical ventilators support two main breathing methods: mandatory breaths and spontaneous breaths.

Mandatory breaths. The start of inspiration (triggering) is determined by the ventilator or the patient. The end of inspiration (cycling) is determined by the ventilator.


Spontaneous breaths. The start of inspiration (triggering) and end of inspiration (cycling) is determined by the patient. The patient breathes independently or receives support from the ventilator.

The ventilator controls mandatory breath timing using a combination of inspiratory time (TI) and Rate.

For some modes, you can set the ventilator to use any of the following combinations to control breath timing: I:E/ Pause, TI/ Pause, or Peak flow/ Tip.

To select the breath timing to use, see Section 13.4.1.

Figure 7-1. Breath timing parameters

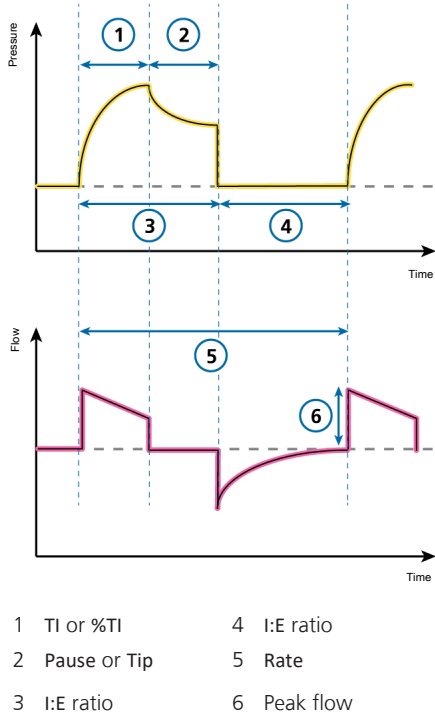

Note that in the breath patterns shown in this chapter, we show I:E. What is actually displayed on your device depends on the breath timing selection on the ventilator.

7.1.2 Ventilation modes

The choice of mode is a medical decision that depends on the patient's CO2 elimination, oxygenation, activity, and breathing effort.

A ventilation mode combines breath type, breath sequence, and control variables.

Table 7-1. HAMILTON-C3 ventilation modes, description and applicable patient group

Mode name	Patient group	Mode
Volume-controlled modes, flow controlled		
(S)CMV	Adult/Ped	Breaths are volume controlled and mandatory, including patient-triggered breaths.
SIMV	Adult/Ped	Volume-controlled mandatory breaths can be alternated with pressure-supported spontaneous breaths.
Volume-targeted modes, adaptive pressure controlled		
APVcmv / (S)CMV+	All	Breaths are volume targeted and mandatory.
APVsimv / SIMV+	All	Volume-targeted mandatory breaths can be alternated with pressure-supported spontaneous breaths.
Pressure-controlled modes		
PCV+	All	All breaths, whether triggered by the patient or the ventilator, are pressure controlled and mandatory.
PSIMV+	All	Mandatory breaths are pressure controlled. Mandatory breaths can be alternated with pressure-supported spontaneous breaths.
DuoPAP	All	Mandatory breaths are pressure controlled. Spontaneous breaths can be triggered at both pressure levels.
APRV	All	Spontaneous breaths can be continuously triggered. The pressure release between the levels contributes to ventilation.
SPONT	All	Every breath is spontaneous, with or without pressure-supported spontaneous breaths.
Intelligent ventilation		
ASV	Adult/Ped	Operator sets %MinVol, PEEP, and Oxygen. Frequency, tidal volume, pressure, and I:E ratio are based on physiological input from the patient.

Mode name	Patient group	Mode
Noninvasive modes		
NIV	All	Every breath is spontaneous.
NIV-ST	All	Every breath is spontaneous as long as the patient is breathing above the set rate. A backup rate can be set for mandatory breaths.
nCPAP-PS	Neonatal	Every breath is spontaneous as long as the patient is breathing above the set rate. A backup rate can be set for mandatory breaths.

7.1.3 Ventilation controls and settings

The table on the following page provides an overview of all of the modes and their control settings.

Mode type	Intelligent Ventilation	Vol. targeted, adaptive press. control		Volume controlled		Pressure controlled						Noninvasive		
		APVcmv	APVsimv	(S)CMV***	SIMV***	PCV+	PSIMV+PSync	PSIMV+	DuoPAP	APRV	SPONT	NIV	NIV-ST	nCPAP-PS**
Mode	Timing	Rate	Rate	Rate	Rate	Rate	Rate	Rate	Rate	T low	--	--	Rate	Rate
		*	TI	*	*	*	TI	TI	T high	T high	--	--	TI	TI
Mandatory breaths		Vt	Vt	Vt	Vt	P control	P control	P control	P high	P high	--	--	Pinsp	Pinsp
		--	Psupport	--	Psupport	P control	Pinsp	Psupport	Psupport	--	Psupport	Psupport	Pinsp	Pinsp
Spontaneous breaths	ETS	--	ETS	--	ETS	--	ETS	ETS	ETS	--	ETS	ETS	ETS	ETS
		--	--	--	--	--	--	--	--	--	--	TI max	TI max	TI max
Baseline press. PEEP/CPAP	X	X	X	X	X	X	X	X	X	P low	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Trigger	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
P-ramp	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Oxygen	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Sext***	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Pat. height**	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Mode specific	%MinVol	--	--	Flow pattern	Flow pattern	--	--	--	--	--	--	--	--	--
		--	--	Pause	Pause	--	--	--	--	--	--	--	--	--
Sign†***	X	X	X	X	X	X	X	X	X	X	X	X	X	X
		X	X	X	X	X	X	X	X	X	X	X	X	X
Apnea backup	--	--	APVsimv	--	(S)CMV	--	--	--	APVsimv	APVsimv	APVsimv	PCV+	--	--
		--	--	--	--	--	--	--	--	--	--	--	--	--

* I:E/Pause, TI/Pause, or Peak flow/TIP ** Neonatal only *** Adult/Psd only -- N/A X applies to this mode

7.2 Volume-controlled modes, flow control

The following modes are volume controlled, with flow control:

- (S)CMV
- SIMV

7.2.1 (S)CMV mode

(S)CMV stands for *synchronized controlled mandatory ventilation*.

Breaths in (S)CMV mode are volume-controlled and mandatory.

The breath can be triggered by the ventilator or by the patient. If the breath is spontaneous (triggered by the patient), the inspiratory rate may increase.


If a breath is not triggered by patient effort within a preset time, the ventilator delivers a set tidal volume with a constant flow or operator-selected flow pattern for a set inspiratory time at a set respiratory rate.

The ventilator always delivers the set tidal volume; pressure in the airway can increase or decrease depending on the resistance and compliance of the patient's lungs.

To protect the patient's lungs it is important to carefully set an upper pressure limit.

- The tidal volume (Vt) setting defines the delivered volume.
- The Rate and I:E define the timing of the breath cycle.
- The Pause setting (in %) is always set in relation to the total breath time.

Figure 7-2. (S)CMV mode: Breathing pattern and controls

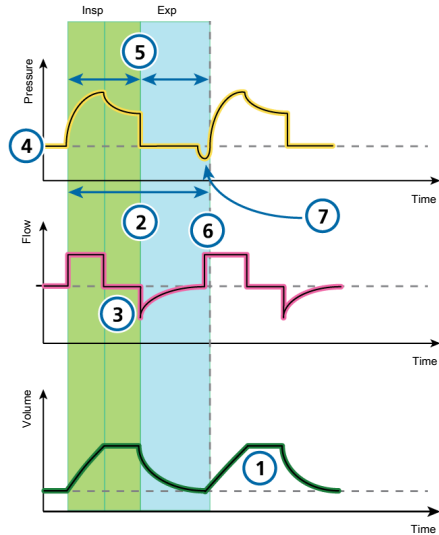

Ventilator controls

CO2 elimination

- | | |
|--------|------------------|
| 1 Vt | 3 Pause |
| 2 Rate | Sigh (not shown) |

Oxygenation

- | | |
|---------------------|--------------------|
| 4 PEEP | 6 Flow pattern |
| 5 I:E ¹⁶ | Oxygen (not shown) |

Patient synchronization

- | |
|-----------|
| 7 Trigger |
|-----------|

¹⁶ Depending on the selected breath timing philosophy (I:E, TI, or other supported option, if available).

7.2.2 SIMV mode

SIMV stands for *synchronized intermittent mandatory ventilation*.

The **SIMV** mode combines attributes of the **(S)CMV** and **SPONT** modes, delivering volume-controlled mandatory breaths or pressure-supported spontaneous (patient-triggered) breaths.

SIMV mode ensures that the set target volume is delivered during the mandatory breaths. After the mandatory breath is delivered, the patient is free to take any number of spontaneous breaths for the remainder of the **SIMV** breath interval.

Each **SIMV** breath interval includes mandatory time (**Tmand**) and spontaneous time (**Tspont**).

If the patient triggers a breath during **Tmand**, the ventilator immediately delivers a mandatory breath. If the patient triggers a breath during **Tspont**, the ventilator delivers a spontaneous, pressure-supported breath.


If the patient does not trigger a breath during **Tspont**, the ventilator automatically delivers a mandatory breath at the end of **Tmand**.

In **SIMV** mode, parameters for both the mandatory and spontaneous breath types are set.

- The tidal volume (**Vt**) setting defines the delivered volume of mandatory breaths.
- **Rate** and **I:E** define the timing of the breath cycle.

- **Psupport** defines the pressure support above **PEEP**. For spontaneous breaths, the expiratory trigger sensitivity (**ETS**) setting defines the percentage of peak flow that cycles the ventilator into exhalation.

Figure 7-3. SIMV mode: Breathing pattern and controls

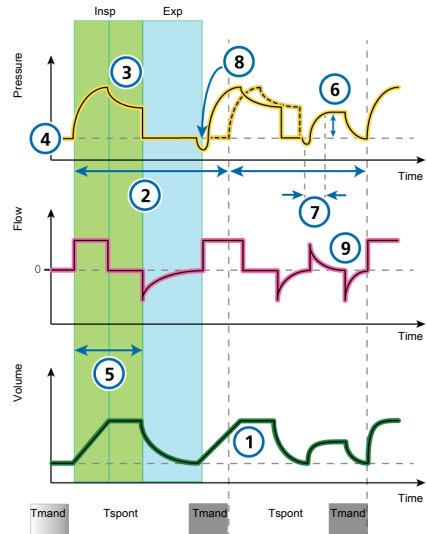

Ventilator controls

CO₂ elimination

- | | |
|--------|------------------|
| 1 Vt | 3 Pause |
| 2 Rate | Sigh (not shown) |

Oxygenation

- | | |
|---------------------|--------------------------|
| 4 PEEP | 6 Psupport |
| 5 I:E ¹⁷ | Oxygen (not shown) |
| | Flow pattern (not shown) |

Patient synchronization

- | | |
|-----------|-------|
| 7 P-ramp | 9 ETS |
| 8 Trigger | |

¹⁷ Depending on the selected breath timing philosophy (I:E, TI, or other supported option, if available).

7.3 Volume-targeted modes, adaptive pressure control

The following modes are volume targeted, with adaptive pressure control:

- APVcmv / (S)CMV+
- APVsimv / SIMV+

In this manual, we refer to these modes using the APVcmv / APVsimv nomenclature. You can select the format to use in Configuration (Section 13.4.2).

NOTICE

- The minimum inspiratory pressure ($P_{peak} - PEEP$) in APVcmv and APVsimv modes is 5 cmH₂O. Be aware that a small set tidal volume with high lung compliance may lead to higher-than-expected tidal volumes.
- For adaptive modes, such as APVcmv or APVsimv, be sure the **Pressure** alarm is set appropriately. This alarm provides a safety pressure limit for the device to appropriately adjust the inspiratory pressure necessary to achieve the target tidal volume.

The maximum available inspiratory pressure is 10 cmH₂O below the high **Pressure** limit, indicated by a blue line on the pressure waveform display.

If the **Pressure** limit is set too low, there may not be enough margin for the device to adjust its inspiratory pressure to deliver the target tidal volume.

7.3.1 APVcmv / (S)CMV+ mode

APVcmv stands for *adaptive pressure ventilation with controlled mandatory ventilation*. This mode is also called **(S)CMV+**, which stands for *synchronized controlled mandatory ventilation*.

APVcmv is a volume-targeted pressure-controlled ventilation mode. It functions similarly to the conventional volume-controlled mode of ventilation, **(S)CMV**, except that pressure is the control variable rather than flow. Pressure is adjusted between breaths to achieve the target tidal volume.

The breath can be triggered by the ventilator or by the patient. If the breath is triggered by the patient, the inspiratory rate may increase.


The ventilator uses the high Pressure alarm limit minus 10 cmH₂O as a safety boundary for its inspiratory pressure adjustment, and does not exceed this value. An exception is Sigh breaths, when the ventilator may apply inspiratory pressures 3 cmH₂O below the high Pressure alarm limit.

Breaths in **APVcmv** mode are volume-targeted and mandatory, delivered at the lowest possible pressure depending on lung conditions.

The operator sets the target tidal volume (**V_t**).

The ventilator delivers the set target volume (**V_t**) at a preset rate. The patient can trigger mandatory breaths between preset rate breaths.

Figure 7-4. APVcmv / (S)CMV+: Breathing pattern and controls

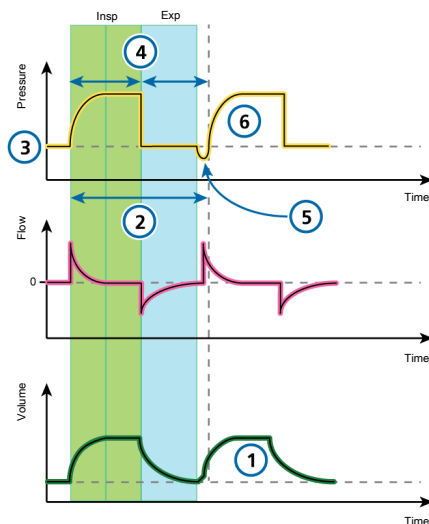

Ventilator controls

CO₂ elimination

- | | |
|------------------|--------|
| 1 V _t | 2 Rate |
|------------------|--------|

Sigh (not shown)

Oxygenation

- | | |
|--------|---------------------|
| 3 PEEP | 4 I:E ¹⁸ |
|--------|---------------------|

Oxygen (not shown)

Patient synchronization

- | | |
|-----------|----------|
| 5 Trigger | 6 P-ramp |
|-----------|----------|

¹⁸ Depending on the selected breath timing philosophy (I:E, T_I, or other supported option, if available).

7.3.2 APVsimv / SIMV+ mode

APVsimv stands for *adaptive pressure ventilation with synchronized intermittent mandatory ventilation*. This mode is also called SIMV+, *synchronized intermittent mandatory ventilation plus*.

The APVsimv mode combines attributes of the APVcmv and SPONT modes, delivering volume-targeted mandatory breaths or pressure-supported spontaneous (patient-triggered) breaths.

APVsimv mode ensures that the set target volume is delivered during the mandatory breaths.

After the mandatory breath is delivered, the patient is free to take any number of spontaneous breaths for the remainder of the APV breath interval.

The ventilator uses the high **Pressure** limit minus 10 cmH₂O as a safety boundary for its inspiratory pressure adjustment, and does not exceed this value. An exception is **Sigh** breaths, when the ventilator may apply inspiratory pressures 3 cmH₂O below the high **Pressure** limit.

Each breath interval includes mandatory time (**Tmand**) and spontaneous time (**Tspont**).


- If the patient triggers a breath during **Tmand**, the ventilator immediately delivers a mandatory breath.
- If the patient triggers a breath during **Tspont**, the ventilator delivers a spontaneous pressure-supported breath.

If the patient does not trigger a breath during **Tspont**, the ventilator automatically delivers a mandatory breath at the end of **Tmand**.

In this mode, parameters for both mandatory and spontaneous breath types are set.

- The tidal volume (**Vt**) setting defines the delivered volume of mandatory breaths.
- **Rate** and **I:E** define the timing of the breath cycle for mandatory breaths.
- For spontaneous breaths, **Psupport** defines the pressure support above PEEP. **ETS** defines the inspiratory timing of the breaths.

Figure 7-5. APVsimv / SIMV+: Breathing pattern and controls

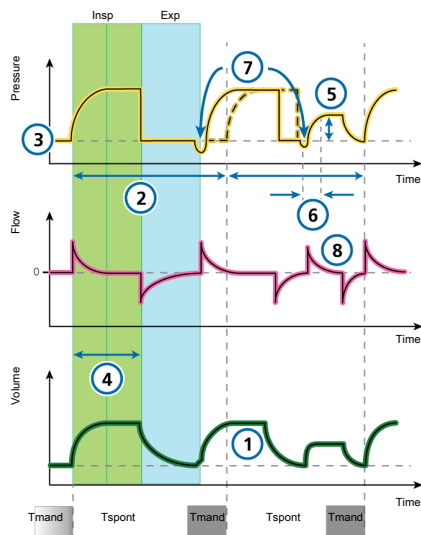

Ventilator controls

CO₂ elimination

- | | |
|---------------------------|--------|
| 1 Vt | 2 Rate |
| Sigh (<i>not shown</i>) | |

Oxygenation

- | | |
|---------------------|-----------------------------|
| 3 PEEP | 5 Psupport |
| 4 I:E ¹⁹ | Oxygen (<i>not shown</i>) |

Patient synchronization

- | | |
|-----------|-------|
| 6 P-ramp | 8 ETS |
| 7 Trigger | |

¹⁹ Depending on the selected breath timing philosophy (I:E, Tl, or other supported option, if available).

7.4 Pressure-controlled modes

The following modes are pressure controlled:

- PCV+
- PSIMV+
- PSIMV+ with PSync
- DuoPAP
- APRV
- SPONT

7.4.1 PCV+ mode

PCV+ stands for *pressure-controlled ventilation*.


Breaths in PCV+ mode are pressure controlled and mandatory.

The ventilator delivers a constant level of pressure, so the volume depends on the pressure settings, the inspiration time, and the resistance and compliance of the patient's lungs.

In PCV+ mode, parameters are set only for mandatory breaths.

- The pressure control (Pcontrol) setting defines the applied pressure above PEEP.
- Rate and I:E define the timing of the breath cycle.
- The P-ramp setting controls the speed with which the ventilator arrives at the desired pressure.

Figure 7-6. PCV+ mode: Breathing pattern and controls

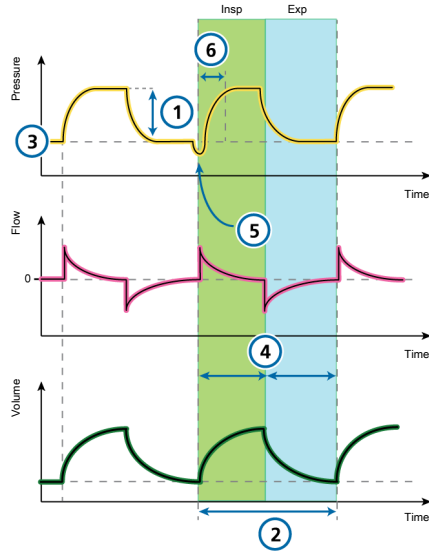

Ventilator controls

CO₂ elimination

- | | |
|------------------|--------|
| 1 Pcontrol | 2 Rate |
| Sigh (not shown) | |

Oxygenation

- | | |
|--------------------|---------------------|
| 3 PEEP | 4 I:E ²⁰ |
| Oxygen (not shown) | |

Patient synchronization

- | | |
|-----------|----------|
| 5 Trigger | 6 P-ramp |
|-----------|----------|

²⁰ Depending on the selected breath timing philosophy (I:E, TI, or other supported option, if available).

7.4.2 PSIMV+ mode

PSIMV+ stands for *pressure-controlled synchronized intermittent mandatory ventilation*.

PSIMV+ mode has two options: with and without PSync. For a description of PSIMV+ with active PSync, see Section 7.4.3.

In PSIMV+ mode, the mandatory breaths are PCV+ breaths. These can be alternated with spontaneous breaths.

Each SIMV breath interval includes mandatory time (T_{mand}) and spontaneous time (T_{spont}).

- If the patient triggers a breath during T_{mand}, the ventilator immediately delivers a mandatory breath.
- If the patient triggers a breath during T_{spont}, the ventilator delivers a spontaneous, pressure-supported breath.
- If the patient does not trigger a breath during T_{spont}, the ventilator automatically delivers a mandatory breath at the end of T_{mand}.

In PSIMV+ mode, parameters for both mandatory and spontaneous breath types are set.


- For mandatory breaths, the pressure control (P_{control}) setting defines the applied pressure above PEEP. Rate and I:E define the timing of the breath cycle.

Rate and I:E define the timing of the breath cycle.

- For spontaneous breaths, P_{support} defines the pressure support above PEEP.

ETS defines the inspiratory timing of the breaths.

Figure 7-7. PSIMV+ mode: Breathing pattern and controls

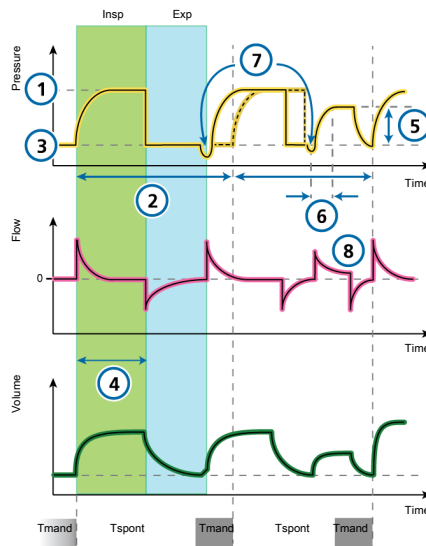

Ventilator controls

CO₂ elimination

- | | |
|------------------------|--------|
| 1 P _{control} | 2 Rate |
| Sigh (not shown) | |

Oxygenation

- | | |
|---------------------|------------------------|
| 3 PEEP | 5 P _{support} |
| 4 I:E ²¹ | Oxygen (not shown) |

Patient synchronization

- | | |
|-----------|-------|
| 6 P-ramp | 8 ETS |
| 7 Trigger | |

²¹ Depending on the selected breath timing philosophy (I:E, TI, or other supported option, if available).

7.4.3 PSIMV+ mode with PSync

PSIMV+ stands for *pressure-controlled synchronized intermittent mandatory ventilation*.

PSIMV+ mode has two options: with and without PSync. For a description of PSIMV+ without active PSync, see Section 7.4.2.


If the patient triggers a breath, the ventilator delivers a breath supported at the P_{insp} setting.

If the patient does not trigger a breath, the ventilator automatically delivers a mandatory breath at the P_{insp} setting.

In PSIMV+ mode, parameters for both mandatory and spontaneous breath types are set.

- The P_{insp} setting defines the applied pressure above PEEP for mandatory and spontaneous breaths.
- Rate and TI define the breath timing for mandatory breaths.
- For spontaneous breaths, ETS defines the inspiratory timing of the breaths.

Figure 7-8. PSIMV+ with PSync mode: Breathing pattern and controls

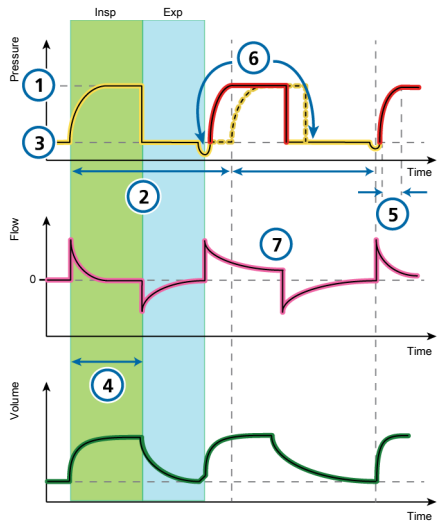

Ventilator controls

CO₂ elimination

- | | |
|---------------------|--------|
| 1 P _{insp} | 2 Rate |
| Sigh (not shown) | |

Oxygenation

- | | |
|--------------------|---------------------|
| 3 PEEP | 4 I:E ²² |
| Oxygen (not shown) | |

Patient synchronization

- | | |
|-----------|-------|
| 5 P-ramp | 7 ETS |
| 6 Trigger | |

²² Depending on the selected breath timing philosophy (I:E, TI, or other supported option, if available).

7.4.4 DuoPAP mode

DuoPAP stands for *duo positive airway pressure*.

DuoPAP is a type of pressure ventilation designed to support spontaneous breathing on two alternating levels of CPAP.

In this mode, the ventilator switches automatically and regularly between two operator-selected levels of positive airway pressure or CPAP.

Cycling between the levels is triggered by DuoPAP timing settings or by patient effort.

In DuoPAP, the switch-over between the two levels is defined by the pressure settings, P high and PEEP/CPAP, and the time settings, T high and Rate.


Note the following:

- At conventional settings and in the absence of spontaneous breathing, DuoPAP resembles PCV+.
- As you decrease the rate, keeping T high short relative to the time at the lower pressure level, the mode looks more like PSIMV+, with spontaneous breaths following mandatory breaths.
- If T high is set to almost the breath cycle time with just enough time at the low level to allow full or near-full exhalation, this mode looks like APRV (Section 7.4.5).

Pressure support can be set to assist spontaneous breaths in DuoPAP, whether they occur at the PEEP/CPAP or P high level.

Psupport is set relative to (above) PEEP/CPAP, which means that spontaneous breaths at the P high level are supported only when this target pressure is greater than P high.

Figure 7-9. DuoPAP mode: Breathing pattern and controls

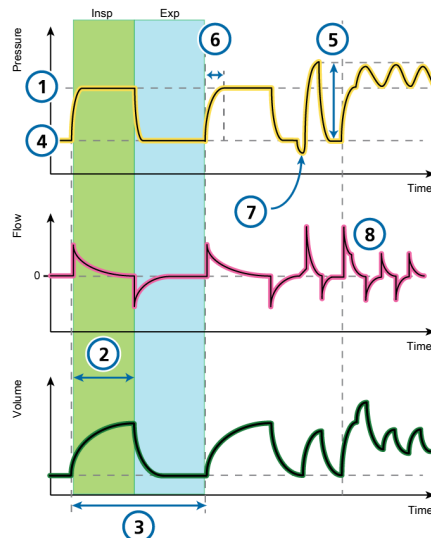

Ventilator controls

CO2 elimination

- | | |
|----------|--------|
| 1 P high | 3 Rate |
| 2 T high | |

Oxygenation

- | | |
|--------------------|------------|
| 4 PEEP/CPAP | 5 Psupport |
| Oxygen (not shown) | |

Patient synchronization

- | | |
|------------------------|-------|
| 6 P-ramp ²³ | 8 ETS |
| 7 Trigger | |

²³ Pressure rise time to P high and Psupport.

7.4.5 APRV mode

APRV stands for *airway pressure release ventilation*.

Set airway pressure P high is transiently released to a lower level P low, after which it is quickly restored to reinflate the lungs.

For a patient who has no spontaneous breathing efforts, APRV is similar to pressure-controlled inverse ratio ventilation.

APRV allows spontaneous breathing at any time during the respiratory cycle.


APRV is an independent mode. When changing modes, the pressure and timing settings from any other mode are not transferred to APRV, and vice versa.

When switching to APRV for the first time, the initial timing and pressure settings proposed are based on IBW (Weight for neonatal patients) as shown in the following table.

Table 7-2. Default settings for APRV

IBW / Weight (kg)	P high / P low (cmH2O)	T high (s)	T low (s)
0.2 to 2.99	20 / 5	1.4	0.2
3 to 5.9	20 / 5	1.7	0.3
6 to 8.9	20 / 5	2.1	0.3
9 to 20.9	20 / 5	2.6	0.4
21 to 39	20 / 5	3.5	0.5
40 to 59	20 / 5	4.4	0.6
> 60	20 / 5	5.4	0.6

Figure 7-10. APRV mode: Breathing pattern and controls

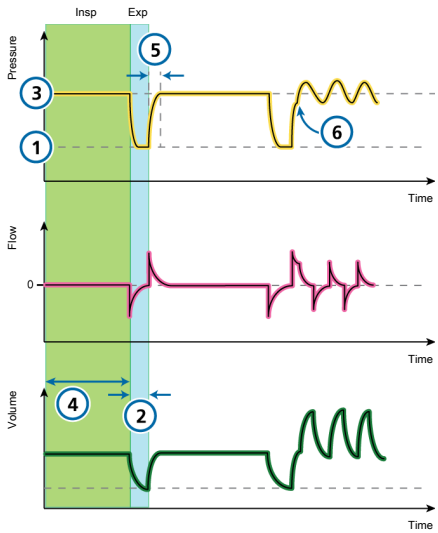

Ventilator controls

CO2 elimination

- 1 P low
- 2 T low

Oxygenation

- 3 P high²⁴
- 4 T high

Oxygen (*not shown*)

Patient synchronization

- 5 P-ramp (to P high)
- 6 Trigger

²⁴ With prolonged T high settings and short T low settings, the P high setting in effect becomes the PEEP level.

7.4.6 SPONT mode


SPONT stands for *spontaneous mode*.

SPONT delivers spontaneous breaths and operator-initiated manual, mandatory breaths.

When pressure support is set to zero, the ventilator functions like a conventional CPAP system.

- The pressure support (P_{support}) setting defines the applied pressure during inspiration.
- ETS defines the inspiratory timing of the breaths.
- The PEEP setting defines the PEEP applied during expiration.

Figure 7-11. SPONT mode: Breathing pattern and controls

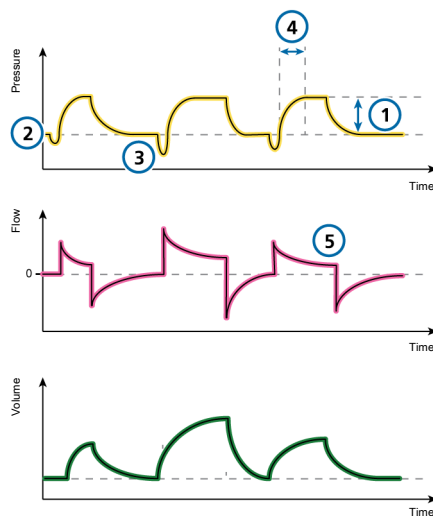

Ventilator controls

CO₂ elimination

1 P_{support} Sigh (not shown)

Oxygenation

2 PEEP Oxygen (not shown)

Patient synchronization

3 Trigger 5 ETS

4 P-ramp

ASV maintains a **preset minimum minute ventilation**:

- Automatically and smoothly adjusts for changing patient conditions between active and passive states
- Mandatory breaths are pressure controlled
- Spontaneous breaths are pressure supported
- Prevents tachypnea

- Prevents AutoPEEP
- Prevents dead space ventilation
- Does not exceed a P_{insp} pressure of **10 cmH₂O below the upper pressure limit**

The operator sets the %MinVol, PEEP, and Oxygen.

For details about working with ASV, see Section 7.9.

Table 7-3. Initial breath pattern settings

Patient group	IBW (kg)	P _{insp} (cmH ₂ O)	TI (s)	Initial rate (b/min)
Pediatric	3 to 5	15	0.4	30
	6 to 8	15	0.6	25
	9 to 11	15	0.6	20
	12 to 14	15	0.7	20
	15 to 20	15	0.8	20
	21 to 23	15	0.9	15
	24 to 29	15	1	15
	> 30	15	1	15
Adult	30 to 39	15	1	14
	40 to 59	15	1	12
	60 to 89	15	1	10
	90 to 99	18	1.5	10
	> 100	20	1.5	10

7.5.1.1 ASV and ASV 1.1

ASV 1.1 is the default setting for the ASV mode. The previous version of ASV is also available on the device, and can be selected in **Configuration**.

ASV 1.1 follows the low tidal volume recommendation (Bellani G, et al. JAMA 2016) and brings additional features and changes:

- Increased target rate and reduced tidal volumes and driving pressure for the majority of patients compared to standard ASV.
- In cases of high time constants and high minute volumes, **Vt max** is limited to 15 ml/kg.

For details about working with ASV, see Section 7.9.

7.6 Noninvasive modes

The following modes are noninvasive:

- NIV
- NIV-ST
- nCPAP-PS

The NIV and NIV-ST modes are implementations of noninvasive positive pressure ventilation (NPPV).

nCPAP-PS is a neonatal mode that offers nasal continuous positive airway pressure - and intermittent positive pressure support through a nasal interface (mask or prongs) for infants and neonates.

For details about working with noninvasive modes, see Section 7.8.

7.6.1 NIV mode

NIV stands for *noninvasive ventilation*.

NIV mode delivers spontaneous breaths.


NIV is designed for use with a mask or other noninvasive patient interface.

When pressure support is set to zero, the ventilator functions like a conventional CPAP system.

- The pressure support (**Psupport**) setting defines the applied pressure during inspiration.
- ETS defines the inspiratory timing of the breaths.
If the ventilator does not detect an expiratory trigger (for example, due to a leak), inspiratory time is limited by **TI max**.
- The PEEP setting defines the PEEP applied during expiration.

For additional details about working with noninvasive modes, see Section 7.8.

Figure 7-13. NIV mode: Breathing pattern and controls

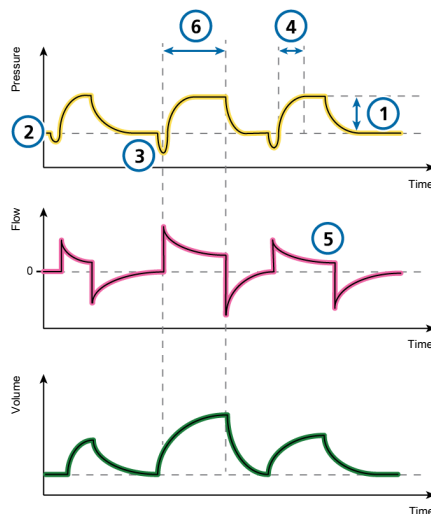

Ventilator controls

CO₂ elimination

- | | |
|------------|------------------|
| 1 Psupport | Sigh (not shown) |
|------------|------------------|

Oxygenation

- | | |
|--------|--------------------|
| 2 PEEP | Oxygen (not shown) |
|--------|--------------------|

Patient synchronization

- | | |
|-----------|----------|
| 3 Trigger | 5 ETS |
| 4 P-ramp | 6 TI max |

7.6.2 NIV-ST mode

NIV-ST stands for *spontaneous/timed noninvasive ventilation*.

NIV-ST mode delivers time-cycled or flow-cycled breaths. Every patient trigger results in a flow-cycled, pressure-supported breath.

If the rate of patient-triggered breaths falls below the set mandatory Rate, time-cycled breaths are delivered at the set Rate and timing.


If the patient triggers a breath during the breath interval *timv*, the ventilator immediately delivers a spontaneous breath. If the patient does not trigger an inspiration during this time, the ventilator initiates a mandatory breath at the end of *timv*.

When pressure support is set to zero, the ventilator functions like a conventional CPAP system.

This mode requires that you set the parameters needed for both mandatory and spontaneous breath types.

- The inspiratory pressure setting, *P_{insp}*, defines the applied pressure for both mandatory and spontaneous breaths.
- The **Rate** and **TI** (inspiratory time) control settings define the breath timing.
- For spontaneous breaths, the **ETS** setting defines the percentage of peak flow that cycles the device into exhalation.
If the ventilator does not detect an expiratory trigger (for example, due to a leak), inspiratory time is limited by **TI max**.

Figure 7-14. NIV-ST mode: Breathing pattern and controls

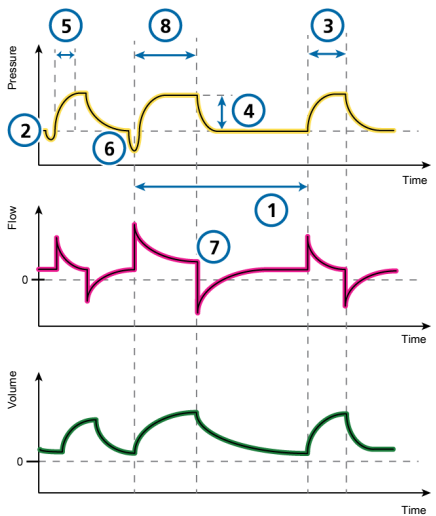

Ventilator controls

CO2 elimination

- | | | |
|---|------|---------------------------|
| 1 | Rate | Sigh (<i>not shown</i>) |
|---|------|---------------------------|

Oxygenation

- | | | | |
|---|------|---|----|
| 2 | PEEP | 3 | TI |
|---|------|---|----|

*Oxygen (*not shown*)*

Patient synchronization

- | | | | |
|---|-------------------------|---|--------|
| 4 | <i>P_{insp}</i> | 7 | ETS |
| 5 | P-ramp | 8 | TI max |
| 6 | Trigger | | |

7.6.3 nCPAP-PS mode

nCPAP-PS stands for *nasal continuous positive airway pressure*.

nCPAP-PS is a neonatal mode that offers nasal continuous positive airway pressure and intermittent positive pressure support through a nasal interface (mask or prongs) for infants and neonates. It is designed to apply CPAP using a nasal interface (mask or prongs).

When **Pin_{sp}** is set to zero, the ventilator functions like a conventional nCPAP system. The minimum **PEEP** setting is 2 cmH₂O.

If the patient triggers a breath during the breath interval **tim_v**, the ventilator immediately delivers a spontaneous breath. If the patient does not trigger an inspiration during this time, the ventilator initiates a mandatory breath at the end of **tim_v**.

This mode requires that you set the parameters needed for both mandatory and spontaneous breath types.


- The inspiratory pressure setting, **Pin_{sp}**, defines the applied pressure for both mandatory and spontaneous breaths.
- The **Rate** and **TI** (inspiratory time) control settings define the breath timing.
- For spontaneous breaths, the **ETS** setting defines the percentage of peak flow that cycles the device into exhalation.

If the ventilator does not detect an expiratory trigger (for example, due to a leak), inspiratory time is limited by **TI max**.

- The **TI max** setting provides an alternative: when inspiration lasts longer than **TI max**, the ventilator cycles into exhalation.

Note that volume is *not* monitored in this mode.

Figure 7-15. nCPAP-PS mode: Breathing pattern and controls

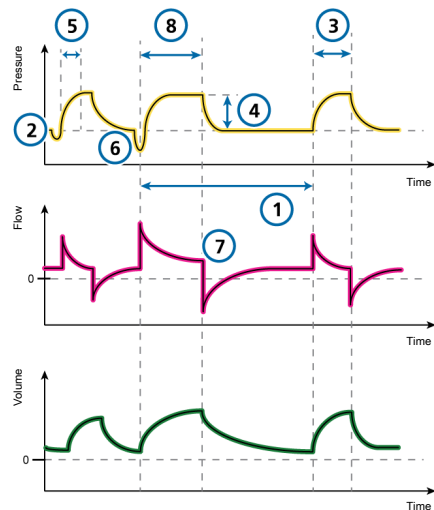

Ventilator controls

CO₂ elimination

1 Rate

Oxygenation

2 PEEP 3 TI

Oxygen (*not shown*)

Patient synchronization

4 Pin_{sp} 7 ETS

5 P-ramp 8 TI max

6 Trigger

7.7 Special conditions

The following ventilator modes/states may be observed under certain error conditions:

Table 7-4. Special conditions overview

For details about ...	See ...
Sensor Failure mode	Section 7.7.1
Safety ventilation	Section 7.7.2
Ambient state	Section 7.7.3

7.7.1 Sensor Failure mode

When there is a problem with the flow sensor that lasts more than three breath cycles, the **External flow sensor failed** alarm is generated and the ventilator switches to **Sensor Failure** mode. Ventilation continues in **PCV+** mode.

Once the alarm is resolved, the ventilator exits **Sensor Failure** mode and returns to ventilation with the previous mode and settings. For details about the **External flow sensor failed** alarm, see Section 9.4.

The following conditions apply to ventilation in **Sensor Failure** mode:

- The ventilator changes to **PCV+** mode.
- Internal ventilator pressure (**Pvent**) is displayed instead of airway pressure (**Paw**).
- Monitoring parameters related to the flow sensor measurement are shown in grey, indicating they are inaccurate.
- The message **Sensor Failure mode ventilation initiated** is recorded in the Event log.

7.7.2 Safety ventilation

In the event of certain technical failures, the ventilator switches to **Safety ventilation**. This gives you time to arrange for corrective actions, including organizing a replacement ventilator.

If these conditions occur when using **HiFlowO2**, the ventilator switches to **Safety mode**.

The following conditions apply to ventilation in **Safety ventilation**:

- The ventilator does not monitor patient inputs in **Safety ventilation**.
- In **Safety ventilation**, the blower runs constantly to create inspiratory pressure (**Pinsp**) (Tables 7-5 and 7-6).
In **Safety mode**, the blower creates a constant pressure of 5 cmH2O at the inspiratory port.
- In **Safety ventilation**, the expiratory valve switches system pressure levels between **PEEP** and inspiratory pressure.
- You must turn off ventilator power to exit **Safety ventilation**.

Table 7-5. Safety ventilation settings (Adult/Ped)

IBW (kg)	Pinsp (cmH2O)	Rate (b/min)	Oxygen (%)
3 to 5.9	15	30	> 21%
6 to 8.9	15	25	> 21%
9 to 20.9	15	20	> 21%
21 to 29	15	15	> 21%
30 to 39	15	14	> 21%
40 to 59	15	12	> 21%
60 to 89	15	10	> 21%

IBW (kg)	Pinsp (cmH ₂ O)	Rate (b/min)	Oxygen (%)
90 to 99	18	10	> 21%
≥ 100	20	10	> 21%

PEEP is set to the PEEP of the previous mode and the I:E ratio is 1:4.

Table 7-6. Safety ventilation settings (Neonatal)

Weight (kg)	Pinsp (cmH ₂ O)	Rate (b/min)	Oxygen (%)
< 1.26	15	60	> 21%
1.26 to 3.0	15	45	> 21%
3.1 to 6.0	15	35	> 21%
6.1 to 9.0	15	30	> 21%
9.1 to 21	15	25	> 21%
> 21	15	20	> 21%

PEEP is set to the PEEP of the previous mode and the I:E ratio is 1:3.

7.7.3 Ambient state

If the technical fault alarm is serious enough to possibly compromise safe ventilation, the ventilator enters the **Ambient state**.

The following conditions apply to ventilation in the **Ambient state**:

- The inspiratory channel and expiratory valves are opened, letting the patient breathe room air unassisted.
- Provide alternative ventilation immediately.
- You must turn off ventilator power to exit the **Ambient state**.

7.8 Working with noninvasive modes

This section provides an overview of noninvasive ventilation requirements, contraindications for use, and important information about settings and alarms.

When using noninvasive positive pressure ventilation (NPPV), use a noninvasive patient interface, for example a mask, rather than an invasive conduit.

7.8.1 Required conditions for use

Before proceeding, review the safety information in Chapter 1.

The following requirements **must be met** to use noninvasive ventilation:

- The patient must be able to trigger the ventilator and must have regular spontaneous breaths.
Noninvasive ventilation is intended to provide supplemental ventilatory support to patients with regular spontaneous breaths.
- The patient must be conscious.
- The patient must be able to maintain an adequate airway.
- Intubation must be possible at any time.
- The mask or interface is a good fit.

7.8.2 Contraindications

CAUTION

- *If you place an additional component, such as an HMEF, between the flow sensor and the patient, the additional resistance limits the ventilator's ability to identify disconnection at the patient.
To correctly identify a patient disconnection, be sure to appropriately set the lower limit of the Pressure alarm, as well as the Volume alarm limits, and carefully monitor the patient's SpO2 and, if available, PetCO2 values.*
- *To prevent possible patient injury, do NOT use noninvasive ventilation on patients with no or irregular spontaneous breaths. Noninvasive ventilation is intended to provide supplemental ventilatory support to patients with regular spontaneous breaths.*
- *To prevent possible patient injury, do NOT attempt to use noninvasive ventilation on intubated patients.*

Using noninvasive ventilation is contraindicated if **any** of the following conditions are met:

- The patient does not have the drive to breathe
- Partial or complete airway obstruction
- Gastrointestinal bleeding
- Anatomic or subjective intolerance of NIV interface
- Patient is unable to cooperate or protect airway

7.8.3 Potential adverse reactions

The following reactions to noninvasive ventilation are possible:

- Aspiration, gastric insufflation
- Increase of intracranial pressure (ICP)
- Decrease of arterial pressure
- CO2 rebreathing
- Claustrophobia
- Discomfort
- Dyssynchrony
- Skin or conjunctiva lesions

7.8.4 Control settings in noninvasive ventilation

WARNING

- The exhaled volume from the patient can differ from the measured exhaled volume due to leaks around the mask.
- Peak pressures exceeding 33 cmH2O may increase the risk of aspiration due to gastric insufflation. When ventilating with such pressures, consider using an invasive mode.

When a significant leak occurs, the inspiratory flow can never fall below ETS, thereby preventing the ventilator from cycling into exhalation and resulting in endless inspiration. The TI max setting provides an alternate way to cycle into exhalation. When inspiration lasts longer than TI max, the ventilator cycles into exhalation.

Ensure the TI max setting is sufficiently long to give ETS the chance to cycle the ventilator.

- Adjusting the TI max setting increases or decreases the allowable inspiratory time.
- Increasing ETS above the default 25% allows the ventilator to cycle to terminate inspiration at a higher flow, to accommodate larger leaks.

Other controls require special attention:

- Carefully observe the patient/ventilator interaction.
- Adjust Psupport or P_{insp} to obtain appropriate tidal volumes.
- The leakage in noninvasive modes can reduce the actual applied PEEP and give rise to autotriggering.
- Adjust PEEP further, considering oxygenation and AutoPEEP.

7.8.5 Alarms in noninvasive ventilation

Due to the changing and unpredictable amount of leakage, volume alarms are less meaningful in noninvasive modes than in other modes. Alarms are based on the returned expiratory gas volume measured at the flow sensor; this value can be significantly lower than the delivered tidal volume, because the delivered tidal volume is the sum of the displayed VTE and the leakage volume.

To avoid nuisance volume alarms, set the low Vt and ExpMinVol alarms to a low level.

Because the noninvasive modes are pressure modes, however, do pay attention to the pressure-related alarms. If the defined PEEP and inspiratory pressure can be maintained, the ventilator is compensating the gas leak sufficiently.

7.8.6 Monitored parameters in noninvasive ventilation

NOTICE

- The following numeric monitoring parameters *cannot* be used for reliable analysis of patient conditions: ExpMinVol, RCexp, R_{insp}, Insp Flow, AutoPEEP, and Cstat.
- Continuous monitoring of clinical parameters and patient comfort is critically important.
- The parameters VTE NIV, MinVol NIV, MVSpont NIV, and MVLeak are leak compensated, and are used in noninvasive modes. These parameters are estimations and may not reflect exact values.

Due to the leakage at the patient interface, displayed exhaled volumes in the noninvasive modes can be substantially smaller than the delivered volumes.

The flow sensor measures the delivered volume and the exhaled tidal volume; the ventilator displays the difference as VLeak in percent (%), and as MVLeak in l/min. Use VLeak and MVLeak to assess the fit of the mask or other noninvasive patient interface.

While a leak at the patient interface influences the tidal volume measurement, leaks in the breathing circuit itself do not influence the tidal volume measurement.

In addition to other clinical parameters, TI, Ppeak, PEEP/CPAP, I:E, fTotal, Pmean, and fSpont can be used to assess the patient's ventilatory status.

7.8.7 Additional notes about using noninvasive ventilation

Due to some unique characteristics, consider the following points when using noninvasive ventilation.

IntelliTrig function

To synchronize, IntelliTrig compensates for leaks and resistance between the ventilator and the patient, and with each breath, it measures the leakage at the patient interface (mask).

With this information, IntelliTrig adjusts the trigger mechanism, reducing the influence of leakage and the changing breath pattern on the operator-set trigger sensitivity.

Maintaining PEEP and preventing auto-triggering

Significant leakage can be present in noninvasive ventilation, which can serve to reduce the actual applied PEEP/CPAP and give rise to autotriggering. If you cannot reach the set PEEP/CPAP, check the mask fit.

The Loss of PEEP alarm alerts you to uncompensated leaks (that is, when the measured PEEP/CPAP is 3 cmH₂O lower than the set PEEP/CPAP).

Inspect mask fit and position

Inspect the mask position regularly and adjust as necessary. React promptly and appropriately to any alarms.

The ventilator's VLeak parameter provides one indicator of mask fit.

To verify that the mask fits properly, ensure that the leakage value shown in the Monitoring window (VLeak, MVLeak) is acceptable.

To monitor leakage during ventilation, set the low limit of the Pressure alarm to a value near the set pressure for ventilation (PEEP/CPAP + P_{insp}/P_{support}). When excessive leaks are present, the ventilator may not be able to reach the set pressure, and generates an alarm.

7.9 Working with ASV

ASV is indicated for passive and spontaneously breathing adult and pediatric patients.

7.9.1 Contraindications

ASV and ASV 1.1 are contraindicated with the following:

- Infants and neonates
- If there is a high leakage (NIV or broncho-pleural fistula)
- Irregular respiratory drive (Cheyne-Stokes respiration)

7.9.2 Setting up ASV on the ventilator

To set up the ventilator using ASV

1. Touch **Modes**.
2. Touch **ASV**, then touch **Confirm**.
3. Set the controls as appropriate:
 - **%MinVol**: Set a value that results in the same minute volume as a previous mode, if applicable.
 - **PEEP, Oxygen, Trigger, ETS, P-ramp**: Set according to clinical requirements and the patient condition.
4. Review and adjust alarm limits.

Set the high **Pressure** alarm limit to an appropriate value.

The maximum peak pressure delivered in **ASV (Pasvlimit)** is 10 cmH₂O below the high **Pressure** alarm limit or equal to the **Pasvlimit** setting.

The maximum peak pressure for **ASV** can be also set using the **Pasvlimit** control in the **Controls** window.

Changing the **Pasvlimit** value also changes the high **Pressure** limit.
5. Connect the patient to the ventilator and start ventilation.

The ventilator initiates three test breaths.


The device automatically selects the values for respiratory rate (**fTotal**), inspiratory time (**TI**), and inspiratory pressure (**Pinsp**) based on the calculated IBW and as specified in Table 7-3.

7.9.3 Clinical workflow with ASV

Figure 7-16 provides an overview of the ASV clinical workflow.

For technical specifications, see Section 15.9.

Figure 7-16. Clinical use of ASV

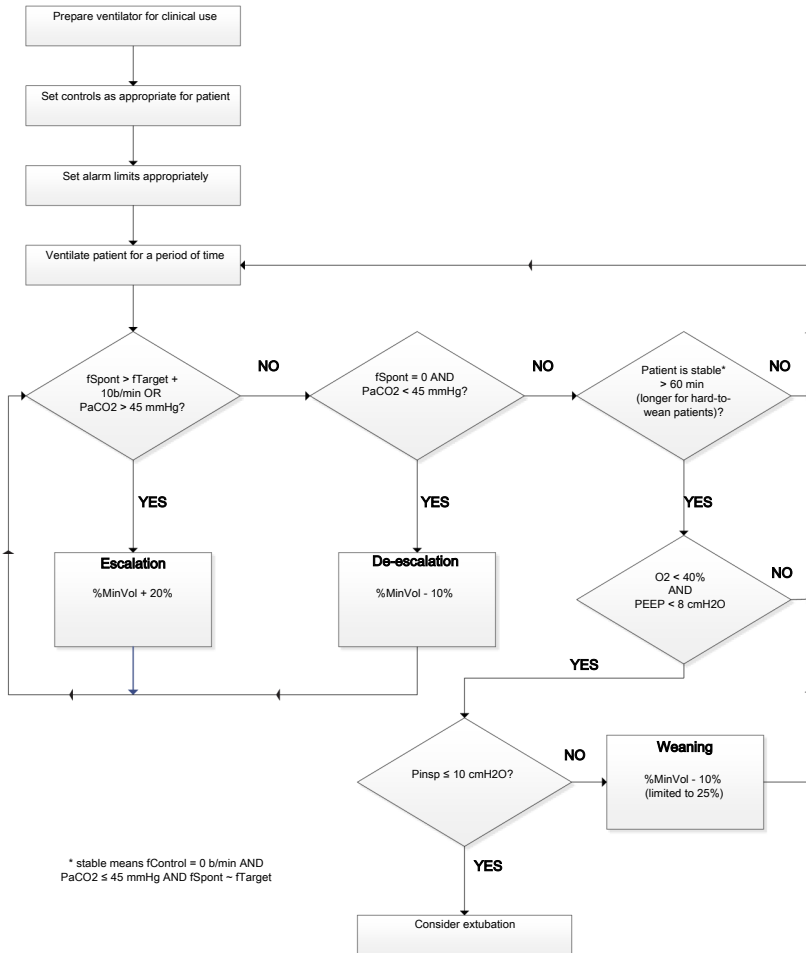

7.9.4 Maintaining adequate ventilation



WARNING

To change the minute volume setting, always use the %MinVol control. Do *not* manipulate the patient height setting to achieve the desired IBW to control minute volume.

Once ASV is started, the ventilator calculates an optimal breath pattern and associated target values for tidal volume and rate according to the rules in ASV and the set %MinVol to achieve the targets. Depending on whether the patient is passive or actively breathing, the ventilator delivers pressure-controlled or pressure-supported breaths in compliance with a lung-protective strategy. For details, see Section 7.9.8.4.

Once the calculated targets are reached, the result of the ventilation needs to be assessed. All monitored parameters can be used for this purpose.

However, to assess respiratory acid-base status, it is recommended that arterial blood gases be measured and minute ventilation be adjusted accordingly.

Table 7-7 provides examples of how to adjust the %MinVol setting.


Table 7-7. Blood gas and patient conditions and possible adjustments for ASV

Condition	%MinVol change
Normal arterial blood gases	None
High PetCO ₂ or PaCO ₂	Increase %MinVol Pay attention to inspiratory pressures
Low PaCO ₂	Decrease %MinVol Pay attention to mean pressures and oxygenation status
High respiratory drive	Consider increase in %MinVol Consider sedation, analgesia, or other treatments
Low O ₂ saturation	None Consider increase in PEEP/CPAP and/or Oxygen

7.9.5 Reviewing alarm settings

It is *not* possible to select a %MinVol that is incompatible with the lung-protective rules that govern ASV (for a detailed description, see Section 7.9.8.4). As a consequence, ASV tries to achieve the maximum possible ventilation and activates the ASV: Cannot meet target alarm.

Figure 7-17. Example of high %MinVol setting incompatible with the lung-protective rules strategy

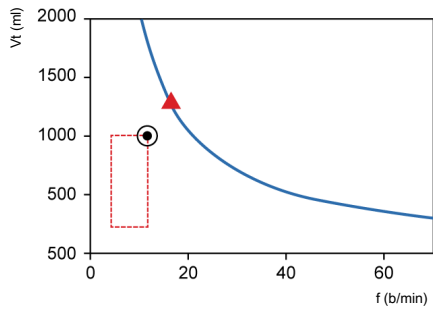

7.9.6 Monitoring ASV


ASV interacts with the patient continuously. Whenever the patient’s respiratory mechanics change, ASV adjusts to this change. Whenever the patient’s breathing activity changes, ASV adjusts the settings.

The ASV graph, shown in Figure 7-18, provides a real-time graphical view of the patient status relative to the set target. For details about the graph, see Section 8.4.3.

For details on displaying the ASV graph and ASV monitoring values, see Section 8.4.

To monitor progress over time, it is recommended that you plot trends for **Pinsp**, **fTotal**, and **fSpont**. Review these trends, together with the %MinVol setting to gain insight into the patient’s ventilatory status. Table 7-8 provides interpretations of typical ventilatory patterns.

Figure 7-18. ASV Graph panel

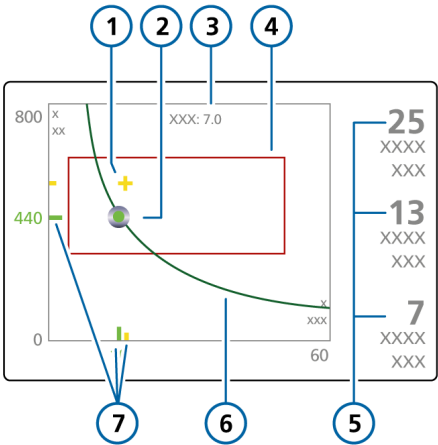

- | | |
|--|--|
| 1 Patient symbol:
intersection of
current measured
tidal volume and
rate | 5 Pinsp: Inspiratory
pressure set by
ventilator

fControl: Machine
rate

fSpont: Sponta-
neous breath rate |
| 2 Target point:
Intersection of
target tidal
volume and
target rate | 6 Minute volume
curve |
| 3 Target minute
volume | 7 Current measured
point (in yellow)
and target value
(in green) |

4 Safety frame

7.9.7 Weaning

Weaning patients from the ventilator is a clinical task that requires experience and involves more than just ventilation issues. This section does not intend to provide clinical information other than that needed to operate the ventilator using ASV mode.

ASV always allows patients to take spontaneous breaths. Episodes of spontaneous breathing can occur and are supported by ASV even within a period of fully controlled ventilation. In other words, weaning can start with ASV so early that it may go unrecognized clinically. It is therefore important to monitor the spontaneous efforts of the patient over time.

The weaning progress can be monitored in the trends display when inspiratory pressure (P_{insp}), total rate (f_{Total}), and spontaneous rate (f_{Spont}) are plotted.

It may be necessary to reduce the %MinVol setting to 70% or even lower to “motivate” the patient to resume spontaneous breathing. If a patient can sustain minutes or even hours with a low %MinVol setting, it does not mean that weaning is complete. In fact, the %MinVol setting must always be interpreted in conjunction with the level of P_{insp} needed to achieve the set minute ventilation. Only if P_{insp} and f_{Control} are at their minimum values can weaning be assumed to be complete.

Table 7-8. Interpretation of breathing pattern at lower than 100 %MinVol setting

P _{insp}	f _{Control}	f _{Spont}	Interpretation
> 10	> 10	0	<i>Danger of hypoventilation.</i> Check arterial blood gases and consider increasing %MinVol.
> 10	0	Acceptable	<i>Enforced weaning pattern.</i> Check arterial blood gases and patient respiratory effort. Consider decreasing or increasing %MinVol accordingly.
< 8	0	Acceptable	<i>Unsupported breathing.</i> Consider extubation.
> 10	0	High	<i>Dyspnea.</i> Consider increasing %MinVol and other clinical treatments. Check for autotriggering.


7.9.8 Functional overview

The following sections provide a brief overview of how ASV manages ventilation.

7.9.8.1 Normal minute ventilation

ASV defines **normal** minute ventilation according to the graph in Figure 7-19.

Figure 7-19. Normal minute ventilation as a function of ideal body weight (IBW)

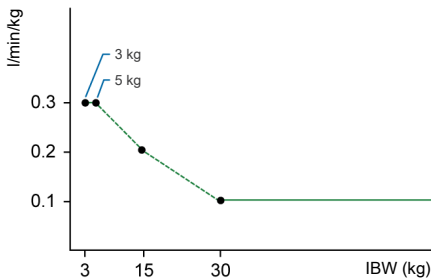

For patients with an IBW of 30 kg or more, minute ventilation is calculated as $0.1 \text{ l/kg} * \text{IBW}$ (solid line).

For patients with an IBW below 30 kg, the value is indicated by the dotted line in the previous figure.

Minute ventilation for a 15 kg patient is calculated as

$$0.2 \text{ l/kg} * 15 \text{ kg} = 3 \text{ l/min}$$

For example, for an IBW of 70 kg, **normal** minute ventilation corresponds to 7 l/min.

7.9.8.2 Compensation for changes in apparatus dead space

Dead space is calculated as 2.2 ml per kg. This dead space is a nominal value that is valid, on average, for intubated patients whose endotracheal tube is connected to the Y-piece of the ventilator by a standard catheter mount.

Changes in alveolar dead space due to ventilation/perfusion mismatch must be compensated using the %MinVol control.

If this dead space is altered by an artificial airway configuration, such as the use of a heat and moisture exchanging filter (HMEF) or nonstandard tubing, modify the %MinVol setting to take into account the added or removed dead space.

7.9.8.3 Targeted minute ventilation

When you choose ASV, you must select an appropriate minute ventilation for the patient. Minute ventilation is set with the %MinVol control, which, together with the patient height, determines the total minute ventilation in liters per minute (l/min).

A %MinVol setting of 100% corresponds to **normal** minute ventilation (Section 7.9.8.1). A setting below or above 100% corresponds to minute ventilation lower or higher than normal.


From the %MinVol, the target minute ventilation (in l/min) is calculated as:

$$\text{Ideal body weight (in kg)} \times \text{NormMinVent (in l/kg/min)} \times (\% \text{MinVol} / 100)$$

where **NormMinVent** is the **normal** minute ventilation. See Figure 7-19.

For example, with a %MinVol = 100 and an IBW = 70 kg, a target MinVol of 7 l/min is calculated. This target can be achieved with a number of combinations of tidal volume (V_t) and respiratory rate (f). This is shown in Figure 7-20, where all possible combinations of V_t and f lie on the bold line, the target minute volume curve.

Figure 7-20. MinVol = 7 l/min

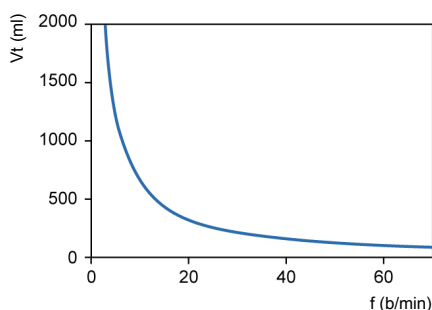

7.9.8.4 Lung-protective strategy

Not all combinations of V_t and f shown in Figure 7-20 are safe for the patient. The high tidal volumes will overdistend the lungs, and the small tidal volumes cannot produce alveolar ventilation at all.


Another risk lies in inadequate respiratory rates. High rates can lead to dynamic hyperinflation or breath stacking, and thus inadvertent PEEP. Low rates can lead to hypoventilation and apnea. Therefore, it is necessary to limit the number of possible combinations of V_t and f .

When limits are imposed on the possible combinations of V_t and f , ASV uses a double strategy:

- The operator input for ASV determines the absolute boundaries.
- Internal calculations based on patient measurements further narrow the limits to counteract possible operator errors and to follow changes of respiratory system mechanics.

The effect of the strategy is shown in Figure 7-21 and explained in the subsequent sections.

Figure 7-21. Lung-protective rules strategy

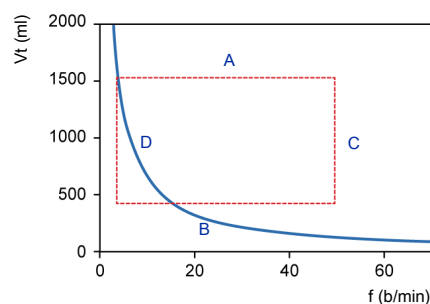

A: High tidal volume limit

The tidal volume applied by ASV is limited (see A in Figure 7-21) by three operator settings: high Pressure alarm limit, high V_t alarm limit, and patient height.

Note the following:

- You must set the high Pressure limit before connecting a patient to the ventilator. The maximum pressure applied in the ASV mode is 10 cmH₂O below the high Pressure alarm limit.

- Additionally, the target volume is limited to 150% of the high Vt alarm limit, and pressure support is limited such that the inspired volume does not exceed the high Vt alarm limit in mechanical breaths for more than a few breaths.
- If you set the Pressure alarm limit to a very high pressure, say 60 cmH2O, the target volume is limited by the second criterion: 15 ml/kg.
- Check the Vt high setting to make sure the target minute ventilation can be reached in passive patients.

B: Low tidal volume limit

You must use caution with low tidal volumes to avoid insufficient alveolar ventilation.

The determining parameter for alveolar ventilation is dead space (VDaw). Tidal volume value must always be greater than the VDaw value. It is widely accepted that a first approximation of dead space can be obtained by the following simple equation (Radford 1954):

$$VDaw = 2.2 * IBW$$

ASV calculates the lower limit for tidal volume based on the following equation: $IBW * 4.4 \text{ ml/kg}$. The multiplying factor is calculated to be at least twice the dead space.

C: High rate limit

You derive the maximum rate (C in Figure 7-21) from the operator-set %MinVol and the calculated IBW, which is calculated from the operator-set patient height (Pat. height). The equation used to calculate the maximum rate is:

$$f_{max} = \text{target MinVol} / \text{minimum Vt}$$

However, if you choose an excessively high %MinVol of 350%, the maximum rate becomes 77 b/min. To protect the patient against such high rates, ASV employs a further safety mechanism, which takes into account the patient's ability to exhale.

A measure of the ability to exhale is the expiratory time constant (RCexp). To achieve a nearly complete exhalation to the equilibrium point of the respiratory system (90% of the maximum potential volume change), an expiratory time of at least $2 * RCexp$ is theoretically required.

For this reason, ASV calculates the maximum rate based on the principle of giving a minimum inspiratory time equal to $1 * RCexp$ and a minimum expiratory time equal to $2 * RCexp$, which results in these equations:

$$f_{max} = 60 / (3 * RCexp) = 20 / RCexp$$

$$f_{max} \leq 60 \text{ b/min}$$

This limit applies to the respiratory rate of the ventilator only, *not* to the respiratory rate of the patient.

D: Low rate limit

The lowest target rate (see D in Figure 7-21) is predefined according to the IBW. See Table 7-3.

7.9.8.5 Optimal breath pattern

Although the lung-protective rules strategy limits possible combinations of V_t and f , ASV prescribes an explicit target combination. Using the example in Figure 7-21, this shows considerable room for selection within the dotted rectangle. The selection process is an exclusive feature of ASV.

The device works on the assumption that the optimal breath pattern is identical to the one a totally unsupported patient will choose naturally (assuming the patient is capable of maintaining the pattern).


It is common knowledge that the choice of breathing pattern is governed by either work of breathing or the force needed to maintain a pattern. ASV calculates the optimal rate based on the operator-set %MinVol and the calculated IBW, as well as on the measurement of RC_{exp} (Section 7.5.1).

Once the optimal rate is determined, the target V_t is calculated as follows:

$$V_t = \text{target MinVol} / \text{optimal rate}$$

Figure 7-22 shows the position of the target breathing pattern as well as the safety limits imposed by the lung-protective rules strategy. The rectangle shows the safety limits; the circle shows the target breath pattern.

Figure 7-22. Anatomy of the ASV target graphics window

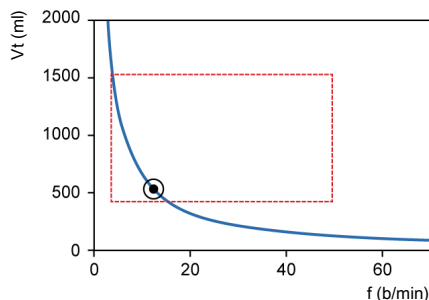

7.9.8.6 Initial breaths: How ASV starts

How do you achieve the target values for a given patient if you do not know whether or not the patient can breathe spontaneously? For this purpose, ASV uses a predefined rate according to the calculated IBW. For more information see Table 7-3.

Patient-triggered breaths are pressure supported and flow cycled. If the patient does not trigger the breath, the delivery of the breath is with a preset pressure and time cycled.

The following controls are operator-set (manual):

- PEEP/CPAP
- Oxygen
- P-ramp
- ETS
- Trigger type and sensitivity

This list of controls is adjusted automatically by ASV, and cannot be adjusted by the operator:

- *Mandatory breath rate*: to change total respiratory rate
- *Inspiratory pressure level*: to change inspiratory volume
- *Inspiratory time*: to allow gas flow into the lungs
- Startup breath pattern


To safely start ASV, you set the patient height and sex, which are then used to calculate the IBW.

Upon starting ventilation, after some initial test breaths are delivered, the resulting rate and tidal volume are measured and compared with the target values. ASV then responds to the differences between the current and target tidal volumes, as well as the current and target rates.

7.9.8.7 Approaching the target

Figure 7-23 shows a possible scenario after the initial test breaths. The current breath pattern, which is plotted as the patient symbol, shows clear deviation from the target. ASV's task is to move the patient symbol as close to the circle as possible.

Figure 7-23. Example after three initial breaths

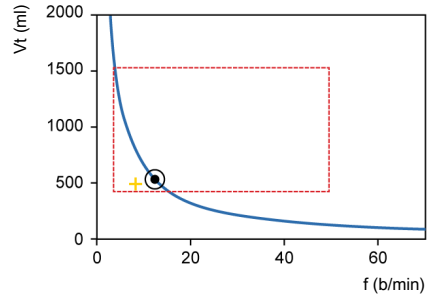

The patient symbol marks the actual measured value for V_t and Rate.

To achieve the target, ASV uses the following strategy:

- If actual $V_t <$ target V_t , the inspiratory pressure is increased.
- If actual $V_t >$ target V_t , the inspiratory pressure is decreased.
- If actual $V_t =$ target V_t , the inspiratory pressure is left unchanged.
- If actual rate $<$ target rate, the fControl rate is increased.
- If actual rate $>$ target rate, the fControl rate is decreased.
- If actual rate $=$ target rate, the fControl rate is left unchanged.

As a result, the patient symbol in Figure 7-23 moves toward the circle. The current V_t is calculated as the average of inspiratory and expiratory volumes. This definition compensates in parts for leaks in the breathing circuit, including the endotracheal tube.


7.9.8.8 Dynamic adjustment of lung protection

The operator preset values are not changed by ASV, and the corresponding safety limits remain as defined in the previous sections. However, if the respiratory system mechanics change, the safety limits change accordingly, as defined in Section 7.9.8.4. The safety limits are updated on a breath-by-breath basis.

For example, if the lungs stiffen, the high V_t limit is lowered proportionally, and the high rate limit is increased.

This dynamic adjustment ensures that ASV applies a safe breathing pattern at all times. In graphical terms, the dotted rectangle changes as shown in Figure 7-24.

Figure 7-24. Lung-protective limits

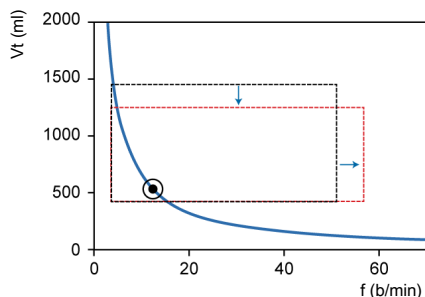

Lung-protective limits are changed dynamically and according to the respiratory system mechanics.

However, the limits set by the operator are never violated.

7.9.8.9 Dynamic adjustment of optimal breath pattern

After it is calculated, the optimal breath pattern is revised with each breath according to the RCexp measurements. A new target breathing pattern is calculated using ASV algorithms. The targets do not change under steady-state conditions. However, if the patient's respiratory system mechanics change, the target values also change.

8

Monitoring ventilation

8.1	Overview.....	140
8.2	Viewing numeric patient data	140
8.3	Viewing graphical patient data	142
8.4	Working with Intelligent panels	149
8.5	About the monitored parameters	154
8.6	Viewing patient ventilation time	162
8.7	Viewing device-specific information	162


8.1 Overview

You can configure how to view patient data during ventilation, including viewing data numerically and graphically in a combination of waveforms, loops, trends, and Intelligent Panel graphics to suit your institution’s needs (Figure 8-1).

Data is also available in the **Monitoring** window, which you can access at any time without affecting breath delivery.

For the list of monitored parameters, see Section 8.5.

Figure 8-1. Main display

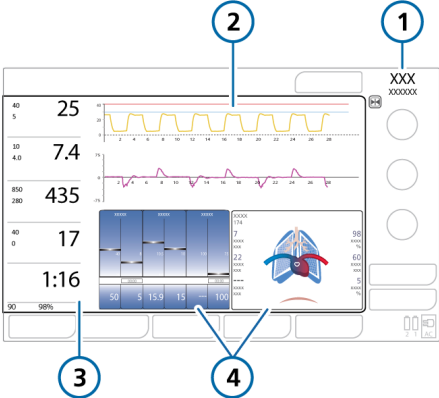

- | | |
|----------------|--|
| 1 Current mode | 3 Main monitoring parameters (MMP) (Section 8.2.1) |
| 2 Waveforms | 4 Graphic display, configurable (Section 8.3) |

8.2 Viewing numeric patient data

Numeric patient data is readily available as follows:

- The main display prominently shows the configured main monitoring parameters (MMPs). See Section 8.2.1.
- The **Monitoring** window provides access to all of the parameter data. See Section 8.2.2.


8.2.1 About the main monitoring parameters (MMP)

The MMPs are the numerical monitoring parameters shown on the left side of the display. Every displayed parameter shows the following elements: the current value, name, and unit of the monitoring parameter, and the set alarm limits, when applicable.

The MMPs that are displayed, as well as their sequence on the display, can be changed in **Configuration** (Chapter 13). Any of the monitored parameters can be displayed as an MMP. As a result, MMPs may differ between individual ventilators. Note that **Ppeak** is always displayed.

An MMP is normally displayed in white. When directly related to an active alarm, the MMP is shown in yellow or red, corresponding to the alarm priority. After the alarm resets, the affected MMP returns to white.

Figure 8-2. MMP components

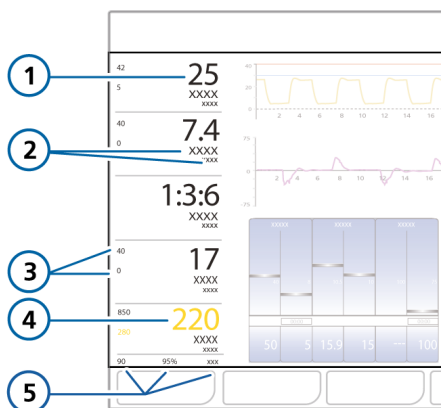

- | | |
|----------------------------|--|
| 1 MMP value | 4 Parameter associated with active alarm |
| 2 Parameter name/units | 5 SpO2 lower alarm limit, SpO2 value* |
| 3 Upper/lower alarm limits | |


* If SpO2 sensor is enabled and connected

8.2.2 Viewing patient data in the Monitoring window

The **Monitoring** window provides access to monitored parameter data as follows:

- The **General** tab (Figure 8-3) provides access to ventilation parameter values.
- When enabled, the **CO2** and **SpO2** tabs provide access to CO2- and SpO2-related data.

Figure 8-3. Monitoring > General window

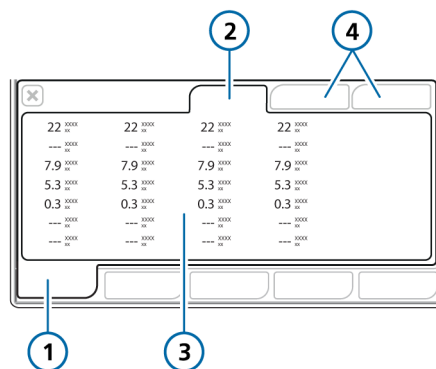

- | | |
|--------------|-----------------------------|
| 1 Monitoring | 3 Parameter values |
| 2 General | 4 CO2 and SpO2 (if enabled) |

To display the Monitoring > General window

- Touch **Monitoring**.

The Monitoring > General window is displayed.

8.3 Viewing graphical patient data

In addition to numerical data, the ventilator shows user-selectable graphical views of real-time patient data (Table 8-1).

The ventilator offers multiple views of this data, and, within preconfigured layouts, allows you to select what to display and where. You choose a layout to show your desired combination of full- and half-screen waveforms, graphics, and informational panels.

You can change individual elements, as well as the display layout, at any time.

Table 8-1. Graphical view options

Graphic type	Options	
Waveforms (Data values plotted against time)	• Pressure • Flow • Volume • Off	• PCO2²⁵ • FCO2²⁵ • Plethysmogram²⁶
Graphics (Intelligent panels)	• Dynamic Lung²⁷ • Vent Status	• ASV Graph²⁸
Trends	1-, 6-, 12-, 24-, or 72-h trend data for a selected parameter or combination of parameters	
Loops	• Pressure/Volume • Pressure/Flow • Volume/Flow	• Volume/PCO2²⁵ • Volume/FCO2²⁵

²⁵ CO2 option required.
²⁶ SpO2 option required
²⁷ Only for adult/pediatric patients
²⁸ Only in ASV mode

8.3.1 Selecting a display layout

While you can select a layout and the graphics to display, you can also revert back to the default layout at any time.

Table 8-2 describes the layout options.

Table 8-2. Graphic layout options

	Layout 1. Four full-screen waveforms
	Layout 2. Two full-screen waveforms and any combination of graphic panels and half-screen waveforms
	Layout 3. Any combination of half-screen waveforms and graphic panels

The graphic choices you make for a selected layout are saved for the current patient until you manually change them. When setting up a new patient, each layout reverts to the default graphics specified in the selected **Quick Setup**.


Tip. When setting up a new patient, you can individually set up Layouts 1, 2, and 3 with your preferred graphics, and then later quickly switch between these views at any time by selecting the desired layout in the **Graphics** window.

To change the layout of the display graphics

1. Touch **Graphics** (Figure 8-4).
2. Touch the desired layout option.
To revert to the default layout configuration, touch **Defaults**.

The window closes automatically, and the display adjusts to the new selection.

Figure 8-4. Graphics window, layout options

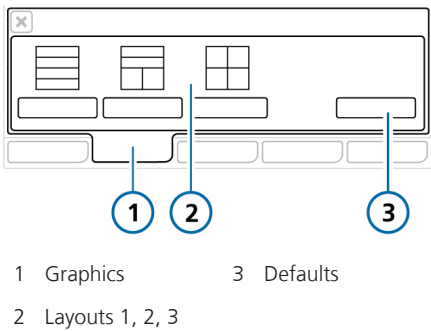


8.3.2 Selecting display options

You can change the graphics at any time.

To change the contents of a graphic panel or waveform

1. Touch the area of the display to change.
The selected panel is highlighted in yellow.

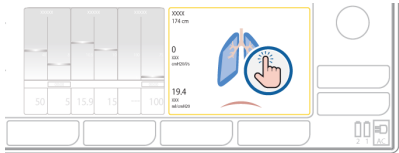


The graphics selection window appears, displaying the current selection (Figure 8-5).

2. Touch the desired option to select it, or touch a tab (**Trends**, **Loops**, **Graphics**, **Waveforms**) to access additional options.

After making a selection, the window closes automatically, and the display adjusts to the new selection.

Figure 8-5. Graphics selection window

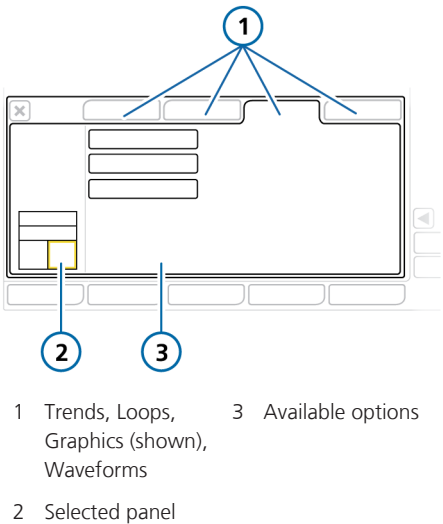

8.3.3 Working with waveforms

The ventilator can plot pressure, volume, and flow against time, in addition to other data as listed in Table 8-1.

8.3.3.1 Waveform views

You can show one or more waveforms on the display, depending on which layout option you select.


Table 8-3. Waveform layout options

<i>Layout 1.</i> Up to four full-screen wave-forms	
<i>Layout 2.</i> Up to two full-screen wave-forms and two or more half-screen waveforms	
<i>Layout 3.</i> A combina-tion of two or more half-screen wave-forms and graphic panels	

8.3.3.2 Displaying waveforms

You select waveform options in the **Wave-forms** window.

Figure 8-6. Graphics selection > Waveforms window

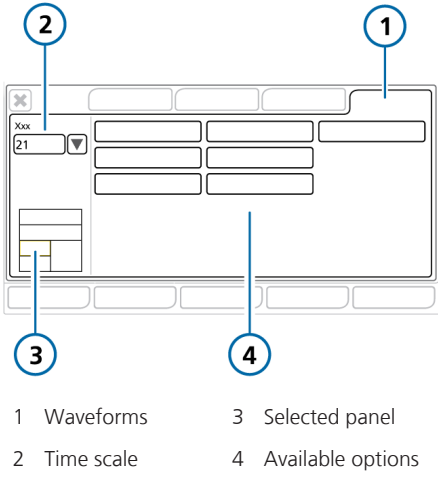

To add or change a full-screen waveform

1. Touch the waveform to change (Section 8.3.2).
The graphics selection window appears, with the **Waveforms** tab selected (Figure 8-6).
2. If needed, change the time scale to apply to all waveforms.
3. Touch the waveform type to display.
To leave the area blank, touch **Off**.²⁹
Once selected, the window closes and the selected waveform is displayed.


²⁹ The **Off** option is disabled for the topmost full-screen waveform in Layouts 1 and 2, and for the left topmost waveform in Layout 3.

To add or change a half-screen waveform

1. Touch the graphic panel or waveform to change.
The graphics selection window opens (Figure 8-6).
2. If not already displayed, touch the **Waveforms** tab (Figure 8-6).
The layout on the left indicates which waveform you are configuring (top or bottom).
3. If needed, change the time scale to apply to all waveforms.
4. Touch the waveform type to display.
To leave the area blank, select **Off**.²⁹
After making your selection, one of the following occurs:
 - If you are adding or changing a single waveform, the window closes and the selected waveform is displayed.
 - If you are replacing a graphic panel with waveforms, the window shows the options for the second waveform.
5. For a second waveform, select the waveform type to display.

Once the selection is made, the window closes and the selected waveform is displayed.

Figure 8-7. Two half-screen waveforms

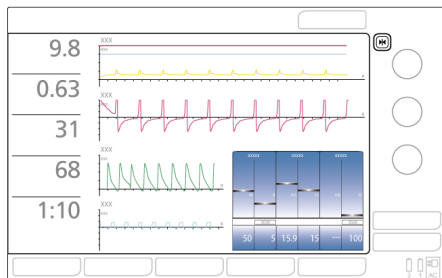


8.3.3.3 About the Pressure/time (Paw) graph

By default, the **Pressure/time (Paw)** graph is shown at the top of the display.

The blue pressure limit line shows the maximum pressure that the ventilator will apply, which is 10 cmH₂O below the set high **Pressure** alarm limit. The high **Pressure** alarm limit is shown as a red line.

Figure 8-8. Pressure/time graph

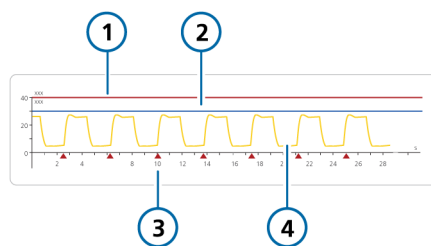

- | | |
|--|----------------------------------|
| 1 High Pressure alarm limit | 3 Patient trigger indicator |
| 2 Pressure limitation: high Pressure alarm limit – 10 cmH ₂ O | 4 Airway pressure (Paw) waveform |

When TRC is enabled, the tracheal pressure (**P_{trach}**) waveform (orange) is shown together with the **Paw** waveform (yellow). See Section 5.5.4.

8.3.3.4 Changing the waveform time scale

Scaling refers to the values of the x- and y-axis of a waveform or a loop. In the waveforms displayed on the ventilator, the x-axis represents time, while the y-axis can represent a variety of parameters, including pressure, flow, or volume.

You can set the time scale (x-axis values) of the waveforms; your selection applies to all displayed waveforms.

A scale value refers to the length of the x-axis. For example, a scale value of 21 means that the x-axis displays the waveform from 0 to 21 seconds.

When you switch from layouts 1 or 2 to layout 3, the waveform time scale increases. When switching from layout 3 to either layout 1 or 2, the waveform time scale decreases.

The HAMILTON-C3 offers the following time scale options, in seconds:

- *Layouts 1 and 2:* 7, 14, 21, 28, 56
- *Layout 3:* 3.5, 7, 14, 21, 28

To change the time scale

- In the **Waveforms** window, touch the **Time scale** arrow (Figure 8-6) and select the time scale to use.

Your selection applies to all displayed waveforms.

8.3.3.5 Freezing and reviewing waveforms and trends


You can temporarily freeze the display of waveforms and trends. After 30 seconds of inactivity, they are automatically unfrozen.

When **Freeze** is enabled, any displayed waveforms and Trend graphs are frozen, allowing you to scroll through them for a detailed review. The **Freeze** function is time-synced across the displayed waveforms.

The **Freeze** function is particularly useful when you perform a breath hold maneuver. The display automatically freezes following a successful inspiratory or expiratory hold maneuver.

Note that when **Freeze** is enabled, all of the elements on the display are unavailable.

Figure 8-9. Freezing waveforms

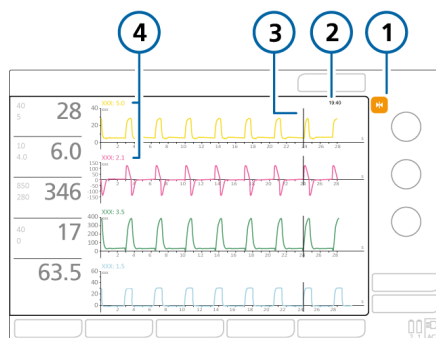

- | | |
|------------------|---|
| 1 Freeze button | 3 Cursor |
| 2 Time at cursor | 4 Value at cursor
(same color as the waveform) |

To freeze waveforms


1. Touch the **Freeze** button (1 in Figure 8-9).
Any displayed waveforms and **Trend** graphs are frozen, and cursor bars are displayed.
2. To scroll through the graphics for analysis, turn the **P&T** knob clockwise or counter-clockwise.
The cursor bars move to the right and to the left.
3. To unfreeze the display, touch the **Freeze** button again or press the **P&T** knob.

The display returns to displaying real-time data and all of the elements on the display are available.

8.3.4 Working with Trend graphs

Trend data includes all data since the ventilator was turned on for a selected parameter for the past 1, 6, 12, 24, or 72 hours.

Figure 8-10. Trend panel

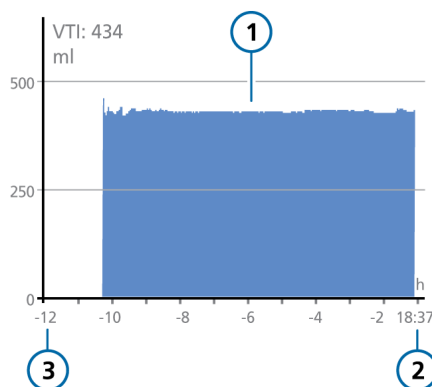

1 Trend graph

3 Elapsed time relative to present

2 Current time

From the time the ventilator is turned on, it continuously stores up to 72 hours of monitored parameter data in its memory, including when in **Standby**. This data is deleted upon setting up a new patient.


You can also freeze **Trend** graphs and examine them more closely. When trends are frozen, the panel shows the time and the corresponding value of the monitored parameter.

Most monitoring parameters can be trended. The following parameters are trended in combination: **Ppeak/PEEP**, **ExpMinVol/MVSpont**, **fTotal/fControl**, **VDaw/VTE**, **VTE/Vtalv**, and **SpO2/FiO2** (if supported on your device).

8.3.4.1 Displaying trends

Trend graphs can be displayed using graphic layouts 2 and 3 (Table 8-2).

Figure 8-11. Graphics selection > Trends window

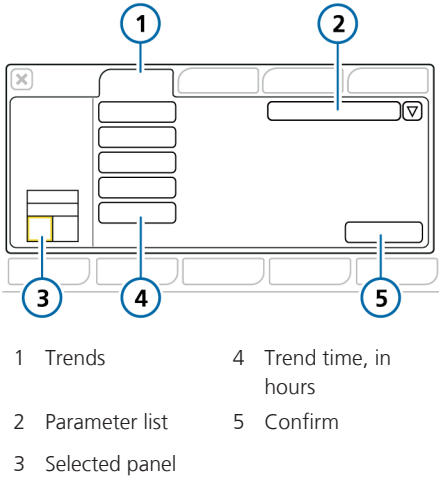


To display trends

1. Touch the area of the display where you wish to show a trend graph (Section 8.3.2).
2. In the graphics selection window, touch the **Trends** tab (Figure 8-11).
3. Select the parameter(s) to trend.
4. Touch the desired trend time.
The selected time applies to all displayed trends.
5. Touch **Confirm**.
The selected trend information is displayed (Figure 8-10).

8.3.5 Working with loops

The HAMILTON-C3 can display a dynamic loop based on the parameter combinations listed in Table 8-1.

Figure 8-12. Loops panel, Pressure/Volume loop displayed

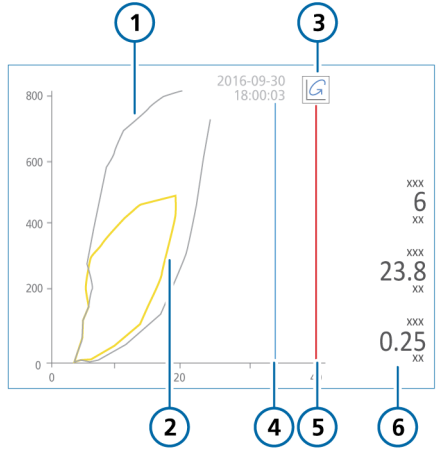


* Displayed if applicable

8.3.5.1 Displaying loops

Loops can be displayed in layouts 2 and 3 (Table 8-2).

Figure 8-13. Graphic selection > Loops window

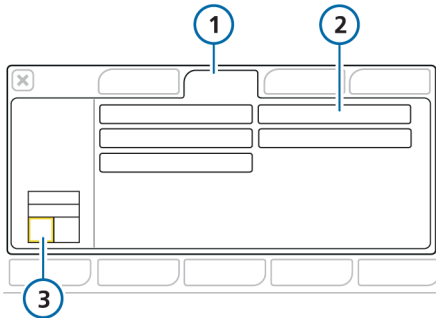

- | | |
|------------------|---------------------|
| 1 Loops | 3 Parameter options |
| 2 Selected panel | |

To display loops

1. Touch the area of the display where you wish to show a loop (Section 8.3.2).
2. In the graphics selection window, touch the **Loops** tab.
3. Touch the parameter combination to display.

The selected combination is displayed (Figure 8-12).

8.3.5.2 Storing loops

You can store a Loop to use as a reference, for comparison purposes.

To store a new loop

- ▶ In the Loop display (Figure 8-12), touch the **Loop reference** button to store the Loop curve with the current date and time.

The previous and current characteristics are shown. Any previously stored Loop is discarded.

8.4 Working with Intelligent panels

You can show any of the following Intelligent panels on the ventilator display:

- Vent Status
- Dynamic Lung
- ASV Graph

The Intelligent panels are all displayed using the graphics selection window **Graphics** tab.

8.4.1 Dynamic Lung panel: real-time ventilation status


The **Dynamic Lung**³⁰ shows an up-to-date visual representation of key ventilation data (Figure 8-14). It visualizes tidal volume, lung compliance, patient triggering, and resistance in real-time.

In addition to the graphic representation, the panel shows numeric data for key parameters. If all values are in a normal range, the panel is framed in green.

The **Dynamic Lung** comprises the following components:

- Mechanical breath
- Respiratory compliance
- Airway resistance
- Patient triggering
- SpO2 data (if installed and enabled)

Figure 8-14. Dynamic Lung panel

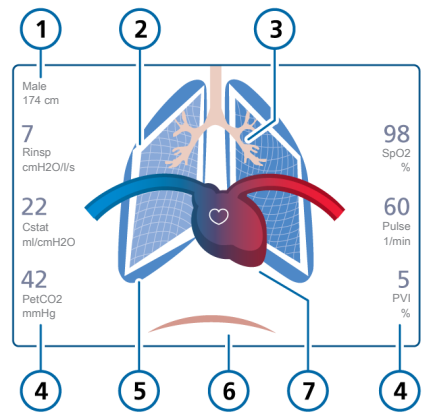

- | | |
|---------------------------------------|--|
| 1 Sex, height | 5 Representation of breaths and tidal volume |
| 2 Representation of lung compliance | 6 Patient trigger (diaphragm) |
| 3 Representation of airway resistance | 7 Heart and pulse display* |
| 4 Monitored parameter values | |

* If SpO2 sensor enabled and connected.

Mechanical breaths, with tidal volume

The mechanical breath is shown as a set of lungs that expand and contract in synchrony with ventilator breath delivery, showing the delivered tidal volume (V_t) in real-time. The lung size displayed is relative to the “normal” size for the patient’s height.

A **Disconnection** alarm is indicated by a deflated lung. An **Exhalation obstructed** alarm is indicated by an over-inflated lung.


The movement and shape of the lungs allows you to quickly verify that the ventilator is ventilating the patient.

³⁰ Only for adult/pediatric patients

Respiratory compliance

Respiratory compliance is a measure of the lung's ability to stretch and expand. Compliance is illustrated by the contour lines of the lung, as shown in Figure 8-15. The static measurement is provided with the Cstat parameter.


Figure 8-15. Examples of lung compliance (Cstat) illustrated in Dynamic Lung

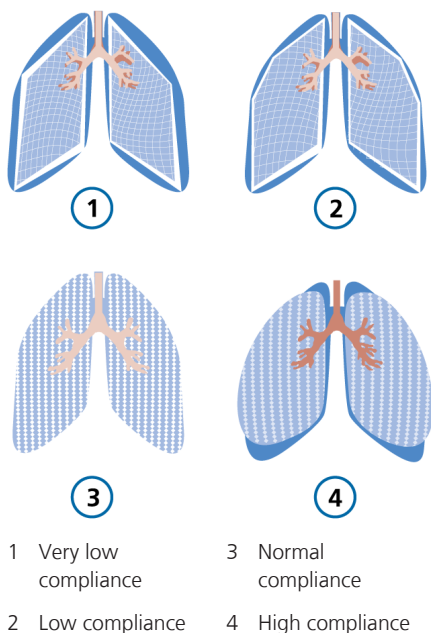

Airway resistance

Airway resistance refers to the total resistance imposed by the patient's airway as well as the artificial airway, such as an endotracheal tube or tracheostomy tube. Airway resistance is illustrated by the size and color of the tracheobronchial tree, as shown in Figure 8-16. The resistance measurement is provided with the Rinsp parameter.


Figure 8-16. Examples of resistance shown by the bronchial tree of the Dynamic Lung

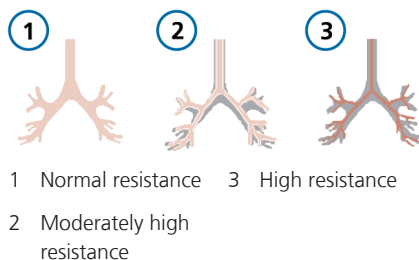

Patient trigger

If a patient trigger is detected, an illustration of the diaphragmatic muscle appears briefly at the beginning of inspiration, as shown in Figure 8-17. This allows you to quickly see whether the breath is patient triggered.

Figure 8-17. Patient triggering (1) in Dynamic Lung

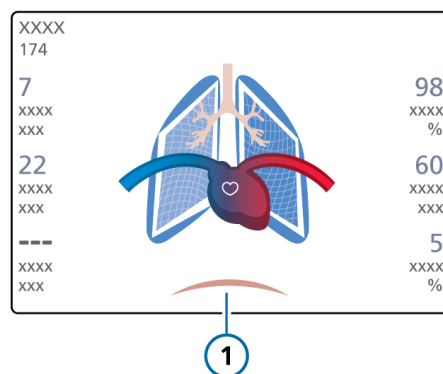

SpO2 data

If the SpO2 option is enabled and a sensor is connected, the Dynamic Lung panel shows a heart and big vessel illustration superimposed on the lungs. The heart beats in synchrony with the patient's pulse rate.

For details about SpO2 measurement, see the *Pulse Oximetry Instructions for Use*.

8.4.1.1 Displaying the Dynamic Lung


The Dynamic Lung panel can be displayed in layouts 2 and 3 (Table 8-2).

To display the Dynamic Lung

1. Touch the area of the display where you wish to show the **Dynamic Lung** panel (Section 8.3.1).
2. In the graphics selection window, touch the **Graphics** tab (Figure 8-5).
3. Touch **Dynamic Lung**.

The Dynamic Lung panel is displayed (Figure 8-18).

Figure 8-18. Dynamic Lung in display

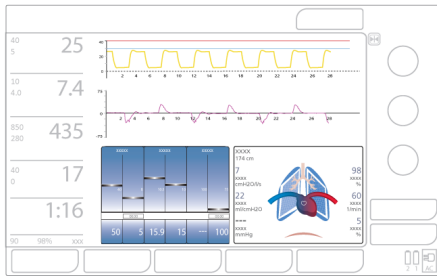

8.4.2 Vent Status panel: real-time ventilator dependence status

The **Vent Status** panel (Figure 8-19) displays six parameters related to the patient's ventilator dependence, in the areas of oxygenation, CO₂ elimination, and patient activity.

A floating indicator moving up and down within the column shows the value for a given parameter.


When the indicator is in the white (weaning) zone, a timer starts, showing how long that value has been in the weaning zone. When all values are in the weaning zone, the **Vent Status** panel is framed in green, indicating that weaning should be considered. A timer appears, recording the length of time all values have been in the weaning zone (Figure 8-19).

The panel is updated breath by breath.

Table 8-4 describes the parameters shown in the Vent Status panel.

You can configure the weaning zone ranges for these parameters in **Configuration**. To set the values, see Section 13.6.1.

Figure 8-19. Vent Status panel

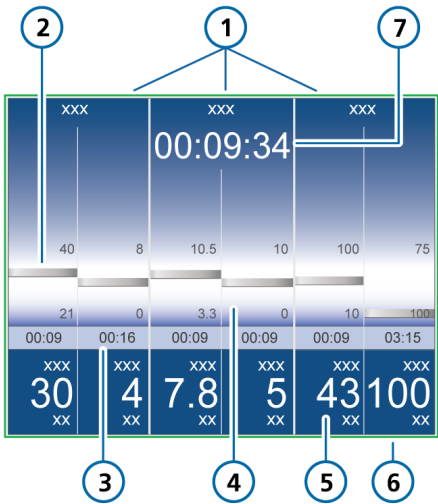

- | | |
|---|---|
| 1 Group title | 5 Monitored value, numeric |
| 2 Monitored value, graphic (floaters) | 6 Green outline indicating all values are in the weaning zone |
| 3 Elapsed time value has been in weaning zone | 7 Elapsed time all values have been in weaning zone |
| 4 Weaning zone with user-configurable limits | |

Table 8-4. Vent Status parameters

Parameter (unit)	Definition
For additional details, including ranges and accuracy, see Table 15-5.	
Oxygen (%)	Oxygen setting.
PEEP (cmH2O)	PEEP/CPAP setting.
MinVol (l/min)	Normal minute ventilation (see Section 7.9).
Pinsp (cmH2O)	Inspiratory pressure, the target pressure (additional to PEEP/CPAP) applied during the inspiratory phase.
RSB (1 / (l*min)) ³¹	Rapid shallow breathing index. The total breathing frequency (fTotal) divided by the exhaled tidal volume (VTE).
%fSpont (%)	Spontaneous breath percentage. The moving average of the percentage of spontaneous breaths over the last 10 total breaths.

³¹ Weaning zone defaults are based on normal values < 100 / (l*min) for adult patients. Default values can be changed in Configuration.

8.4.2.1 Displaying the Vent Status panel

The **Vent Status** panel can be displayed in layouts 2 and 3 (Table 8-2).

To display the Vent Status panel

- 1. Touch the area of the display where you wish to show the **Vent Status** panel (Section 8.3.1).
- 2. In the graphics selection window, touch the **Graphics** tab (Figure 8-5).
- 3. Touch **Vent Status**.

The **Vent Status** panel is displayed (Figure 8-19).

8.4.3 ASV Graph panel: real-time patient condition and targets

Available in ASV³² mode, the **ASV Graph** shows how the adaptive lung controller moves toward its targets. The graph shows both the target and real-time patient data for tidal volume, frequency, pressure, and minute ventilation.

Figure 7-18 in Chapter 7 describes the graph in detail.

8.4.3.1 Displaying the ASV Graph


The **ASV Graph** can be displayed in layouts 2 and 3 (Table 8-4).

To display the ASV Graph

- 1. Touch the area of the display where you wish to show the **ASV Graph** (Section 8.3.1).
- 2. In the graphics selection window, touch the **Graphics** tab (Figure 8-5).
- 3. Touch **ASV Graph**.

The **ASV Graph** is displayed (Figure 8-20).

Figure 8-20. ASV Graph panel (1)

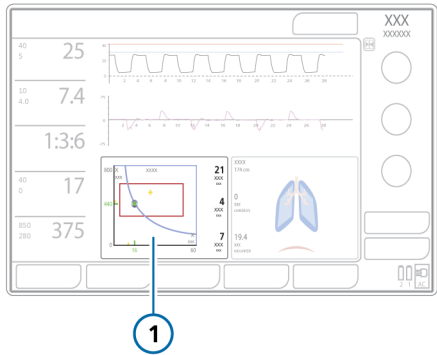

8.5 About the monitored parameters

The following table provides a list of the ventilator’s monitored parameters.

You can review all parameter values in the **Monitoring** window (Section 8.2.2). The display of monitored parameters is updated every breath or is time driven.

See Section 15.6 for parameter specifications.

For details about SpO2-related parameters, see the *Pulse Oximetry Instructions for Use*.

³² Only for adult/pediatric patients

Table 8-5. Monitored parameters

Parameter (unit)	Definition
Pressure	
AutoPEEP (cmH ₂ O)	The difference between the set PEEP and the calculated total PEEP within the lungs. AutoPEEP is the abnormal pressure generated by air “trapped” in the alveoli due to inadequate lung emptying. Ideally, it should be zero. AutoPEEP is calculated using the LSF method applied to the entire breath. Actively breathing patients can create artifacts or noise, which can affect the accuracy of these measurements. When AutoPEEP is present, volutrauma or barotrauma might develop. In active patients, AutoPEEP may present an extra workload to the patient. AutoPEEP or air trapping may result from an expiratory phase that is too short, which may be observed under the following conditions: • Delivered tidal volume too large • Expiratory time too short or respiratory rate too high • Circuit impedance too high or expiratory airway obstruction • Peak expiratory flow too low
PEEP/CPAP (cmH ₂ O)	Monitored PEEP/CPAP. The airway pressure at the end of exhalation. Measured PEEP/CPAP may differ slightly from the set PEEP/CPAP, especially in spontaneously breathing patients.
Pinsp (cmH ₂ O)	Inspiratory pressure, the automatically calculated target pressure (additional to PEEP) applied during the inspiratory phase. Also displayed in the Vent Status panel. Not all modes use the Pinsp parameter. Rather, this target pressure is set using the following parameters, depending on the selected mode: • APVcmv, APVsimv, ASV: Automatically calculated target pressure • PCV+: Pcontrol setting • PSIMV+, NIV-ST, nCPAP-PS: Pinsp setting • SPONT, NIV: Psupport setting • APRV, DuoPAP: P high setting
Pmean (cmH ₂ O)	Mean airway pressure. The absolute pressure, averaged over the breath cycle. Pmean is an important indicator of the possible impact of applied positive pressure on hemodynamics and surrounding organs.

Parameter (unit)	Definition
Ppeak (cmH ₂ O)	Peak airway pressure. The highest pressure during the previous breath cycle. It is influenced by airway resistance and compliance. Ppeak may differ noticeably from alveolar pressure if airway resistance is high. This value is always displayed.
Pplateau (cmH ₂ O)	Plateau or end-inspiratory pressure. The pressure measured at the end of inspiration when flow is at or close to zero. Used as a rough representation of alveolar pressure. Pplateau is displayed for mandatory and time-cycled breaths.
Flow	
Control Flow ³³ (l/min)	The set flow of gas to the patient when using HiFlowO ₂ .
Exp Flow (l/min)	Peak expiratory flow.
Insp Flow (l/min)	Peak inspiratory flow, spontaneous or mandatory. Measured every breath.
Volume	
ExpMinVol MinVol NIV (l/min)	Expiratory minute volume. The moving average of the monitored expiratory volume per minute over the last 8 breaths. ExpMinVol changes to MinVol NIV in noninvasive modes. MinVol NIV is an adjusted parameter taking leakage into account.
MVSpont MVSpont NIV (l/min)	Spontaneous expiratory minute volume. The moving average of the monitored expiratory volume per minute for spontaneous breaths, over the last 8 mandatory and spontaneous breaths. In noninvasive ventilation modes, MVSpont is replaced by MVSpont NIV. MVSpont NIV is an adjusted parameter taking leakage into account.
VLeak (%) MVLeak (l/min)	Due to the leakage at the patient interface, displayed exhaled volumes in the noninvasive modes can be substantially smaller than the delivered volumes. The flow sensor measures the delivered volume and the exhaled tidal volume; the ventilator displays the difference as VLeak in % and as MVLeak in l/min, averaged over the past 8 breaths. VLeak/MVLeak can indicate leaks on the patient side of the flow sensor. They do not include leakage between the ventilator and the flow sensor. Use VLeak and MVLeak to assess the fit of the mask or other noninvasive patient interface.

³³ Only displayed as an **MMP**; not displayed in the **Monitoring** window.

Parameter (unit)	Definition
VTE VTE NIV (ml)	Expiratory tidal volume, the volume exhaled by the patient. It is determined from the flow sensor measurement, so it does not show any volume added due to compression or lost due to leaks in the breathing circuit. If there is a gas leak on the patient side, the displayed VTE may be less than the tidal volume the patient actually receives. In noninvasive ventilation modes, VTE is replaced by VTE NIV. VTE NIV is an adjusted parameter taking leakage into account.
VTESpont (ml)	Spontaneous expiratory tidal volume, the volume exhaled by the patient. If there is a gas leak on the patient side, the displayed VTESpont may be less than the tidal volume the patient actually receives. Only displayed for spontaneous breaths.
VTI (ml)	Inspiratory tidal volume, the volume delivered to the patient, determined from the flow sensor measurement. If there is a gas leak on the patient side, the displayed VTI may be larger than the displayed VTE.
Vt/IBW Vt/Weight (kg)	Tidal volume is calculated according to ideal body weight (IBW) for adult/pediatric patients and according to the actual body weight for neonatal patients.
Time	
fControl (b/min)	Mandatory breath frequency. The moving average of machine-delivered breaths per minute over the last 8 total breaths.
fSpont (b/min)	Spontaneous breath frequency. The moving average of spontaneous breaths per minute over the last 8 total breaths.
fTotal (b/min)	Total breathing frequency. The moving average of the patient's total breathing frequency over the last 8 breaths, including both mandatory and spontaneous breaths. When the patient triggers a breath or the operator initiates a breath, fTotal may be higher than the Rate setting.
I:E	Inspiratory:expiratory ratio. Ratio of the patient's inspiratory time to expiratory time for every breath cycle. This includes both mandatory and spontaneous breaths. I:E may differ from the set I:E ratio if the patient breathes spontaneously.

Parameter (unit)	Definition
TE (s)	Expiratory time. In mandatory breaths, TE is measured from the start of exhalation until the set time has elapsed for the switch to inspiration. In spontaneous breaths, TE is measured from the start of exhalation, as dictated by the ETS setting, until the patient triggers the next inspiration. TE may differ from the set expiratory time if the patient breathes spontaneously.
TI (s)	Inspiratory time. In mandatory breaths, TI is measured from the start of breath delivery until the set time has elapsed for the switch to exhalation. In spontaneous breaths, TI is measured from the patient trigger until the flow falls to the ETS setting for the switch to exhalation. TI may differ from the set inspiratory time if the patient breathes spontaneously.
Other calculated and displayed parameters	
Cstat (ml/cmH ₂ O)	Static compliance of the respiratory system, including lung and chest wall compliances, calculated using the LSF method. Cstat can help diagnose changes in elastic characteristics of the patient's lungs. Actively breathing patients can create artifact or noise, which can affect the accuracy of these measurements.
Oxygen (%)	Oxygen concentration of the delivered gas. It is measured by an O₂ cell in the inspiratory pneumatics. This parameter is not displayed if the O₂ cell is not installed, is defective, is not a genuine Hamilton Medical part, or if oxygen monitoring is disabled.
P0.1 (cmH ₂ O)	Airway occlusion pressure. The pressure drop during the first 100 ms when a breath is triggered. P0.1 indicates the patient's respiratory drive and patient inspiration effort. P0.1 applies only to patient-triggered breaths. A P0.1 value of -3 cmH₂O indicates a strong inspiratory effort, and a value of -5 cmH₂O indicates an excessive effort, possibly because the patient is "air hungry" (peak inspiratory flow or total ventilatory support is inadequate) or has an excessive drive. If P0.1 is below -3 cmH₂O: • Increase pressure or volume settings (depending on mode) • Increase %MinVol (ASV mode only) • Shorten P-ramp

Parameter (unit)	Definition										
PTP (cmH2O*s)	Inspiratory pressure time product. The measured pressure drop required to trigger the breath multiplied by the time interval until the PEEP/CPAP level is reached at the beginning of inspiration. PTP is valid for patient-initiated breaths only, and indicates work by the patient to trigger the breath. The work depends on: • The intensity of the patient's effort • The trigger sensitivity • The volume and resistance of the breathing circuit PTP does not indicate total patient work but is a good indicator of how well the ventilator is adjusted for the patient. If PTP values increase, do the following: • Increase trigger sensitivity • Decrease P-ramp										
RCexp (s)	Expiratory time constant. The rate at which the lungs empty, as follows: <table><tr><td>Actual TE</td><td>% emptying</td></tr><tr><td>1 x RCexp</td><td>63%</td></tr><tr><td>2 x RCexp</td><td>86.5%</td></tr><tr><td>3 x RCexp</td><td>95%</td></tr><tr><td>4 x RCexp</td><td>98%</td></tr></table> RCexp is calculated as the ratio between VTE and flow at 75% of the VTE. Normal values in intubated adult patients: • Short, < 0.6 seconds: restrictive disease (ARDS, atelectasis, chest wall stiffness) • Normal, 0.6 to 0.9 seconds: normal compliance and resistance, or combined decreased compliance and increased resistance • Long, > 0.9 seconds: obstructive disease (COPD, asthma), bronchospasm, ET tube obstruction, or incorrect positioning Use RCexp to set the optimum TE (Goal: TE ≥ 3 x RCexp): • With passive patients: Adjust Rate and I:E • With active patients: Increase Psupport and/or ETS to achieve a longer TE These actions may reduce the incidence of AutoPEEP.	Actual TE	% emptying	1 x RCexp	63%	2 x RCexp	86.5%	3 x RCexp	95%	4 x RCexp	98%
Actual TE	% emptying										
1 x RCexp	63%										
2 x RCexp	86.5%										
3 x RCexp	95%										
4 x RCexp	98%										


Parameter (unit)	Definition
R _{insp} (cmH ₂ O / (l/s))	Resistance to inspiratory flow caused by the endotracheal tube and the patient's airways during inspiration. It is calculated using the LSF method applied to the inspiratory phase. Also displayed in the Dynamic Lung panel. Actively breathing patients can create artifact or noise, which can affect the accuracy of these measurements.
RSB (1 / (l*min))	Rapid shallow breathing index. The total breathing frequency (f_{Total}) divided by the exhaled tidal volume (V_{TE}). Because a patient with dyspnea typically takes faster and shallower breaths than a non-dyspnoeic patient, RSB is high in the dyspnoeic patient and low in the non-dyspnoeic patient. RSB is often used clinically as an indicator of a ventilated patient's readiness for weaning. RSB is only significant for spontaneously breathing patients weighing more than 40 kg and is only shown if 80% of the last 25 breaths were spontaneous.
Ventilation time	Displayed in the Controls > Patient window, shows how long the patient has been ventilated. For details, see Section 8.6.
CO₂ related	
F _{et} CO ₂ (%)	Fractional end-tidal CO₂ concentration. Permits assessment of PaCO₂ (arterial CO₂). Note that it is inaccurate in pulmonary embolism. Available when a CO₂ sensor is connected and enabled.
P _{et} CO ₂ (mmHg)	End-tidal CO₂ pressure. The maximum partial pressure of CO₂ exhaled during a tidal breath (just before the start of inspiration). It represents the final portion of air that was involved in the exchange of gases in the alveolar area, thus providing a reliable index of CO₂ partial pressure in the arterial blood under certain circumstances. P_{et}CO₂ does not reflect PaCO₂ in the case of a pulmonary embolism. Available when a CO₂ sensor is connected and enabled. If the P_{et}CO₂ value falls below 10 mmHg, the display shows dashes (---).
slopeCO ₂ (%CO ₂ /l)	Slope of the alveolar plateau in the P_{et}CO₂ curve, indicating the volume/flow status of the lungs. Available when a CO₂ mainstream sensor is connected and enabled.

Parameter (unit)	Definition
V'alv (ml/min)	Alveolar minute ventilation. Permits assessment of actual alveolar ventilation (as opposed to minute ventilation). $V_{alv} * f$ (normalized to 1 min) Available when a CO2 mainstream sensor is connected and enabled.
V'CO2 (ml/min)	CO2 elimination. Net exhaled volume of CO2 per minute. Permits assessment of metabolic rate (for example, it is high with sepsis) and treatment progress. Available when a CO2 mainstream sensor is connected and enabled.
VDaw (ml)	Airway dead space. Gives an effective, in-vivo measure of volume lost in the conducting airways. A relative increase in dead space points to a rise in respiratory insufficiency and can be regarded as an indicator of the current patient situation. Patients with high dead space values are at particular risk if the muscles also show signs of fatigue. Available when a CO2 mainstream sensor is connected and enabled.
VDaw/VTE (%)	Airway dead space fraction at the airway opening. Available when a CO2 mainstream sensor is connected and enabled.
VeCO2 (ml)	Exhaled CO2 volume, updated breath by breath. Available when a CO2 mainstream sensor is connected and enabled.
ViCO2 (ml)	Inspired CO2 volume, updated breath by breath. Available when a CO2 mainstream sensor is connected and enabled.
Vtalv (ml)	Alveolar tidal ventilation. $VTE - V_{Daw}$ Available when a CO2 mainstream sensor is connected and enabled.

8.6 Viewing patient ventilation time

The **Controls > Patient** window displays a timer that shows how long the patient has been ventilated.

Figure 8-21. Ventilation time

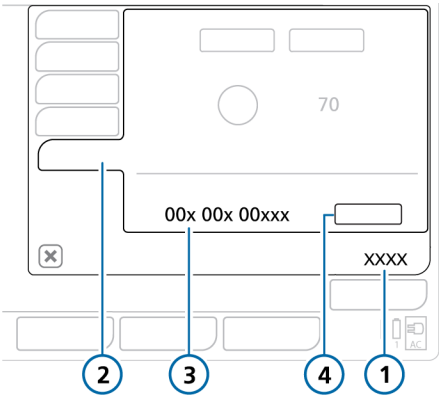

1 Controls	3 Ventilation time (days, hours, minutes)
2 Patient	4 Reset

The timer records time as follows:

- The timer starts when you start ventilation.
- When you enter **Standby**, the timer pauses. It picks up again from the last value when you exit **Standby** and return to active ventilation.
- When you set up a new patient in the **Standby** window, and start ventilation, the timer resets to 0.

- When you select **Last patient** in the **Standby** window, the timer continues from the last total time recorded.
- When you touch **Reset**, the timer resets to 0.

When the timer is reset, an entry is made to the **Event** log recording the time of the reset, as well as how long the ventilator had been running prior to the reset.

To reset the timer to 0

1. Touch **Controls**.
 2. In the Controls window, touch the **Patient** tab.
 3. Touch **Reset**.
- The timer starts again at 00d 00h 00min.

8.7 Viewing device-specific information

The **System > Info** window displays device-specific information including serial number, model, operating hours, hours since startup, time to next service, battery capacity, software version, and installed options.

To view device-specific information

1. Touch **System**.
2. If needed, touch the **Info** tab.

9

Responding to alarms

9.1	Overview.....	164
9.2	About the alarm buffer	168
9.3	Adjusting alarm loudness (volume)	169
9.4	Troubleshooting alarms.....	170

9.1 Overview

Operator-adjustable and nonadjustable alarms together with a visual alarm indicator notify you of conditions that require your attention.

These alarms are categorized as high, medium, or low priority, as described in Table 9-1. The ventilator's visual alarm indications are described in Figure 9-1.

Additional alarms conditions are associated with technical fault and technical note alarms, as well as informational messages.

You can view active alarms in the **alarm buffer** (Figure 9-2). Information about the alarm is also stored in the **Event log**.

Alarms are indicated in the color associated with the alarm priority as follows:

- The alarm lamp on top of the monitor lights and flashes.
- The message bar on the ventilator display is shown in color and displays the alarm text.
- An MMP associated with an active alarm, as well as the affected alarm limit, is shown in the associated color.
- In the **Monitoring** window, a parameter associated with an active alarm is shown in the associated color.
- Any affected parameter shown in the **Dynamic Lung** is shown in color.
- The alarm text is displayed in the **alarm buffer**.

When an alarm condition is serious enough to possibly compromise safe ventilation, the device defaults to the **Ambient** state (Section 7.7). The inspiratory valve closes, and the ambient and expiratory valves are opened, letting the patient breathe room air unassisted.

When reviewing alarms, you can access on-screen alarm troubleshooting help in the **Alarms > Buffer** window. See Section 9.2.1.

For details on setting alarm limits, see Section 5.6.


Table 9-1 describes the audio and visual characteristics of these types of alarms and provides guidance on how to respond.

Table 9-1. Alarm indicators

Alarm type	Message bar	Alarm lamp / Alarm status indicator	Audio	Action required
High priority	Red, with alarm message	Red, flashing	A sequence of 5 beeps, repeated until the alarm is reset. If the audible alarm is not silenced during the first minute, the continuous-tone buzzer also sounds.	The patient's safety is compromised. The problem needs immediate attention.
Medium priority	Yellow, with alarm message	Yellow, flashing	A sequence of 3 beeps, repeated periodically.	The patient needs prompt attention.
Low priority	Yellow, with alarm message	Yellow, solid	Two sequences of beeps. This is not repeated.	Operator awareness is required.
Technical fault	Red, with the text, <i>Safety ventilation, Safety mode, or Technical fault: xxxxxx</i>	Red, flashing	Same as for high-priority alarm, if technically possible. At a minimum, a continuous buzzer tone. The buzzer cannot be silenced.	The ventilator enters Safety ventilation, or, if it cannot safely ventilate, the Ambient state. • Provide alternative ventilation. • Turn off the ventilator. • Have the ventilator serviced.
Technical event	Depends on severity of the event. Can be low, medium, or high.	Same as the associated alarm level	Same as the associated alarm level.	A technical alarm cannot typically be corrected by the operator. Ventilation continues. Have the ventilator serviced.

Alarm type	Message bar	Alarm lamp / Alarm status indicator	Audio	Action required
Technical note	Provides technical information about a hardware or software issue, displayed only in the Event log.	--	--	No action is required.

Figure 9-1. Visual alarm indications

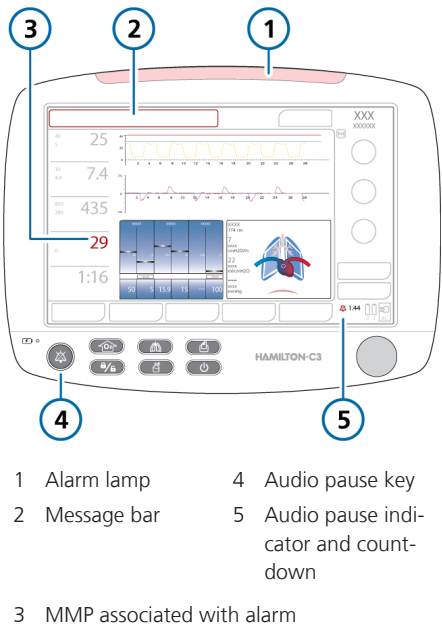

9.1.1 Alarm limit indicators

Alarm limits are shown in the Alarms > Limits windows. For details about setting alarm limits, see Section 5.6.

9.1.2 Responding to an alarm

WARNING

When an **Audio pause** is active, the following critical alarms still generate an audible alarm:

- Apnea
- External power loss
- Oxygen supply failed
- Technical events: 231003, 243001, 243002, 283007, 284003, and 285003
- All technical faults

CAUTION

Carefully set alarm limits according to the patient's condition. Setting limits too high or too low defeats the purpose of the alarm system.

Alarms may result from either a clinical condition or an equipment issue. In addition, a single alarm condition can generate multiple alarms.

Your search for the causes of the alarm condition should be assisted by, but not limited to, the alarm messages displayed.

To respond to an alarm

1. Approach the patient immediately.
2. Secure sufficient and effective ventilation for the patient.
You can pause the audible alarm, if appropriate and available. See Section 9.1.3.
3. Correct the alarm condition from the alarm messages. See Section 9.4.
For a technical fault, remove the ventilator from use, note the fault code, and have the ventilator serviced.
4. If appropriate, readjust the alarm limit.

9.1.3 Temporarily silencing an alarm

One component of an alarm is the audible alarm sound. With most alarms, you can pause (silence) the alarm sound for two minutes at a time.

To temporarily silence an alarm

- ▶ Press  (**Audio pause**) on the front of the ventilator monitor.
The audible ventilator alarm is muted for two minutes. Pressing the key a second time cancels the **Audio pause**.

The **Audio pause** key backlight is continuously lit in red while an **Audio pause** is active.

The display also indicates an **Audio pause** is engaged as follows (Figure 9-1):

- The **Audio pause** indicator is displayed.
- A countdown timer on the main display shows the remaining time for the **Audio pause**.

When the time expires and the issue has not yet been resolved, an audible alarm sounds again.

9.2 About the alarm buffer

The **alarm buffer** shows up to 5 active alarm messages or up to 7 inactive alarm messages:

- The **alarm buffer** shows active alarms as they are generated (Figure 9-2). The alarm messages also alternate in the message bar. Active alarms are shown in wide color-coded boxes.
- If no alarms are active, the **alarm buffer** shows the most recent inactive alarms (Figure 9-3). Inactive alarms are shown in narrow color-coded boxes. In addition, the **i**-icon is visible on the display.
- Touch an alarm entry to view troubleshooting help directly on the display.

To view alarms


- ▶ Open the **Alarms > Buffer** window by doing one of the following:
 - Touch an active alarm in the message bar at the top of the display (Figure 9-2).
 - Touch the inactive alarm indicator (the **i**-icon) (Figure 9-3).
 - Touch **Alarms > Buffer**.

The most recent alarm is at the top of the list.

To clear the list of inactive alarms


- ▶ Touch the **Reset** button (Figure 9-3).
Closing the alarm buffer does not erase its contents.

Figure 9-2. Alarm buffer with active alarms

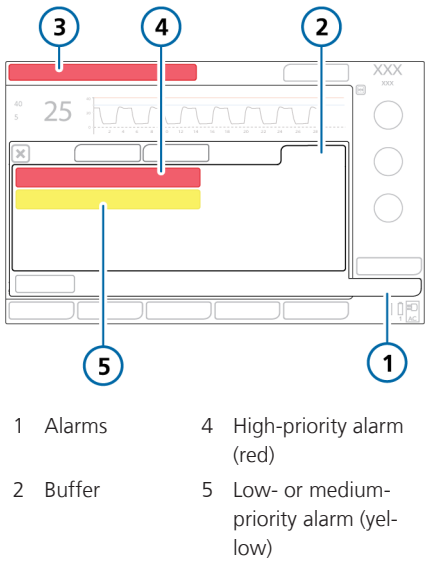

- | | |
|----------|--|
| 1 Alarms | 4 High-priority alarm (red) |
| 2 Buffer | 5 Low- or medium-priority alarm (yellow) |

Figure 9-3. Alarm buffer with inactive alarms

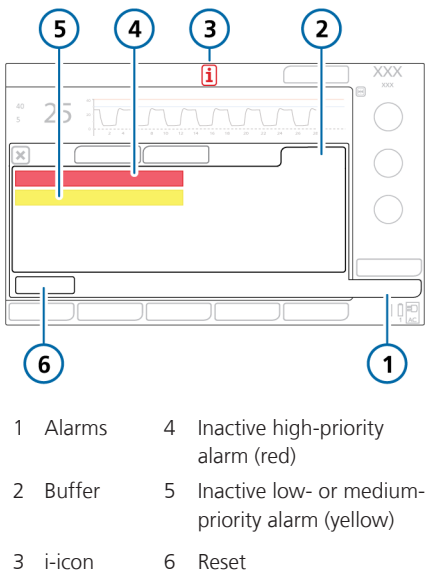

- | | |
|----------|---|
| 1 Alarms | 4 Inactive high-priority alarm (red) |
| 2 Buffer | 5 Inactive low- or medium-priority alarm (yellow) |
| 3 i-icon | 6 Reset |


9.2.1 Accessing on-screen troubleshooting help

Troubleshooting help is available for alarms.

To view the help for an alarm

1. Touch the alarm message in the buffer.
A **Help** window appears in the buffer, providing troubleshooting information for the selected alarm.
2. To view help for another alarm, touch the next alarm message.
The contents of the **Help** window refresh with the new information.
The alarm is displayed as long as the window is open even if the alarm is no longer active.
3. Touch **X** to close the **Help** window.

Figure 9-4. On-screen help window

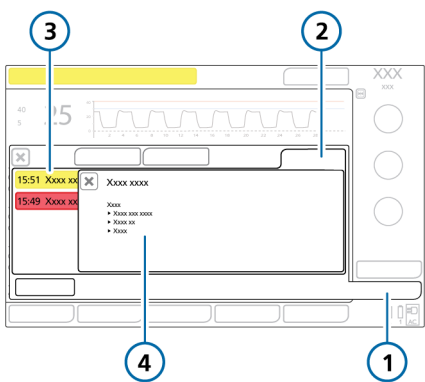

- | | |
|----------|--|
| 1 Alarms | 3 Selected alarm |
| 2 Buffer | 4 Alarm text and troubleshooting information |

9.3 Adjusting alarm loudness (volume)

 **WARNING**

Be sure to set the auditory alarm loudness above the ambient sound level. Failure to do so can prevent you from hearing and recognizing alarm conditions.

You can set the loudness of the audible alarm.

By default, the loudness is set to 5 (**Adult/Ped**) or 3 (**Neonatal**).

If you set the loudness below the default value during a patient session, the value is reset to the default upon:


- Setting up a new patient
- Turning the ventilator off and on again

You cannot set the loudness below the minimum level configured for the device (Chapter 13).

To adjust the alarm loudness

1. Touch **System > Settings**.
2. Touch the **Loudness** button if the **Loudness** window is not already displayed.
3. Activate and adjust the **Loudness** control, as needed.
4. Touch **Test** to check the loudness level.
Ensure the loudness level is above the ambient sound level.
5. Repeat the process as required, and close the window.

Figure 9-5. Alarm loudness control

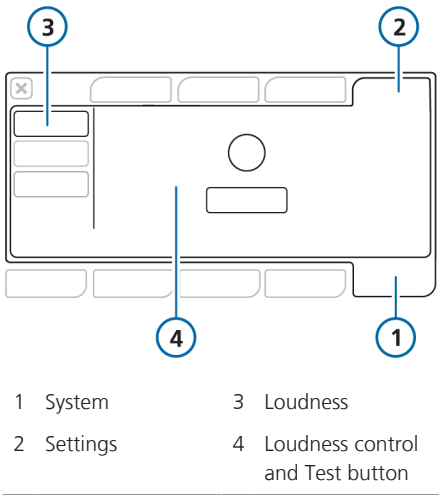

9.4 Troubleshooting alarms

Table 9-2 is an alphabetical list of the alarm messages displayed by the HAMILTON-C3, along with their definitions and suggested corrective actions.

These corrective actions are sequenced to correct the most probable issue or to present the most efficient corrective action first. The proposed actions, however, may not always correct the particular problem.

If your issue is not resolved after performing the recommended tasks, contact your Hamilton Medical authorized service personnel.

For SpO2-related alarms, see the *Pulse Oximetry Instructions for Use*.

Table 9-2. Alarms and other messages

Alarm	Definition	Action needed
Ambient state	The inspiratory and expiratory channels are opened, letting the patient breathe room air unassisted. See Section 7.7.	Provide alternative ventilation immediately.
Apnea ventilation ended	<i>Low priority.</i> Backup mode was reset, and ventilator is again ventilating in its original support (pre-apnea) mode.	No action required.
Apnea ventilation	<i>Low priority.</i> Apnea backup ventilation has started. No breath delivered for the operator-set apnea time. Apnea backup ventilation is on.	• Check patient condition. • Check trigger sensitivity. • Check the control settings for the backup mode. • Consider changing the mode.
Apnea	<i>High priority.</i> No patient trigger within the operator-set apnea time in APVsimv, SIMV, SPONT, DuoPAP, APRV, or NIV mode. Apnea backup is off.	• Check patient condition. • Check trigger sensitivity. • Consider changing the mode.
ASV: Cannot meet target	<i>Low priority.</i> The operator-set %MinVol cannot be delivered, possibly due to setting conflicts or lung-protective rules.	• Check patient condition. • Check the Pasvlimit settings and adjust if appropriate. • Consider a mode change. However, be aware that other modes may not enforce lung-protective rules.
Battery 1, 2: Calibration required	<i>Low priority.</i> The battery requires calibration. You may continue to use the battery.	Replace the battery with a properly calibrated battery to continue ventilation.
Battery 1, 2: Defective	<i>High priority.</i> Battery is defective. Ventilation continues if an alternative power source is connected.	• Replace battery. • Prepare alternative ventilation. • If the problem still persists, have the ventilator serviced.

Alarm	Definition	Action needed
Battery 1, 2: Replacement required	<i>Low priority.</i> Battery capacity is insufficient for reliable operation and must be replaced immediately.	• Connect the ventilator to primary power (AC or DC). • Replace the battery. • If a replacement is not available, provide alternative ventilation until the issue is resolved. • If the problem still persists, have the ventilator serviced.
Battery 1, 2: Temperature high	<i>High priority.</i> The battery temperature is higher than expected.	• Remove the ventilator from the sun or other heat source. • Replace the battery. • Provide alternative ventilation until the issue is resolved. • If the problem still persists, have the ventilator serviced.
Battery 1, 2: Wrong battery	<i>Low priority.</i> The battery in use is not the correct battery for this ventilator.	• Replace the battery with the correct Li-ion battery. • Connect the ventilator to primary power (AC or DC). • Provide alternative ventilation until the issue is resolved.
Battery communication error	<i>High priority.</i> Battery data is not available. Ventilation continues.	• Check the battery connectors and that the battery is installed correctly. • Make sure the battery lock is properly closed. • If the problem persists, replace the battery. • If the problem still persists, have the ventilator serviced.

Alarm	Definition	Action needed
Battery low	The Battery low alarm has different levels of priority depending on battery age and condition. The alarm priority levels are defined as follows: High priority. The ventilator is running on battery power, and the battery charge is critically low. You have a minimum of 5 minutes operating time left. If the high-priority Battery low alarm occurs when starting up the ventilator, you may have less than 5 minutes of operating time remaining. Medium priority. The ventilator is running on battery power and the battery charge is low. Low priority. The ventilator is running on primary power and the battery charge is low.	• Connect the ventilator to a primary power source. • Install charged battery. • If necessary, be prepared to provide alternative ventilation.
Battery power loss	<i>High priority.</i> No battery is present.	• Connect the ventilator to primary power (AC or DC). • Insert a battery.
Battery totally discharged	<i>High priority.</i> The battery charge level is below 5%. The ventilator switches to the Ambient state.	• Connect the ventilator to primary power (AC or DC). Connecting to primary power also charges the battery. • Immediately provide alternative ventilation until the issue is resolved. • If the problem still persists, have the ventilator serviced.
Blower fault	<i>High priority.</i> A blower malfunction was detected. A technical alarm cannot typically be corrected by the operator. The ventilator switches to the Ambient state.	• Immediately provide alternative ventilation. • Have the ventilator serviced.
Blower service required	<i>Low priority.</i> Blower has reached the end of its lifespan.	Have the ventilator serviced.

Alarm	Definition	Action needed
Buzzer defective	<i>High priority.</i> A buzzer malfunction was detected. A technical alarm cannot typically be corrected by the operator.	• Restart device. • Provide alternative ventilation until the issue is resolved. • If the problem persists, have the ventilator serviced.
Check CO2 airway adapter	<i>Low priority.</i> Adapter disconnection, optical block, or adapter type changed.	• Check patient condition. • Check the airway adapter for excess moisture accumulation /contamination by secretions. • Replace / perform zero calibration on airway adapter.
Check CO2 sampling line	<i>Low priority.</i> The CO2 sidestream sensor sampling line is occluded by water.	• Check patient condition. • Replace sampling line.
Check flow sensor	<i>High priority.</i> Flow sensor measurements are out of the expected range. If the alarm continues for 3 consecutive breath cycles, the External flow sensor failed alarm is generated and the ventilator switches to Sensor Failure mode (Section 7.7.1).	• Make sure the flow sensor is the correct type for the patient (Adult/ Ped or Neonatal). • Check the flow sensor connection to the ventilator. • Connect and calibrate a new flow sensor.
Check flow sensor tubing	<i>High priority.</i> The flow sensor tubes are disconnected or occluded. If the alarm continues for 3 consecutive breath cycles, the External flow sensor failed alarm is generated and the ventilator switches to Sensor Failure mode (Section 7.7.1).	• Check the flow sensor connection to the ventilator. • Connect and calibrate a new flow sensor.

Alarm	Definition	Action needed
Check for blockage	<i>High priority.</i> Internal pressure is too high in HiFlowO2. Flow cannot be delivered to the patient.	• Observe the patient • Check patient interface for blockage. If no blockage is observed, consider reducing the flow to decrease pressure. • Check breathing circuit limbs and tubing for kinks.
Check settings	<i>Low priority.</i> A change to a control or alarm setting was not saved.	Check and confirm settings, including alarms.
CO2 calibration needed	<i>Low priority.</i> A previous sensor zero calibration failed.	Perform the following checks, repeating the calibration after each one, until calibration is successful: • Clean or replace airway adapter. • Perform a zero calibration of the sensor, making sure there is no source of CO2 near the airway adapter. • Replace the airway adapter. • Replace the CO2 sensor. • If the problem persists, have the ventilator serviced.
CO2 sensor defect	<i>Low priority.</i> The CO2 sensor signal indicates a hardware error or a third-party sensor is installed.	• Disconnect the sensor from the CO2 module. Wait a few seconds, and reconnect. • Perform a zero calibration of the sensor. Ensure the sensor is attached to the airway adapter during zero calibration. • Replace the CO2 sensor. Make sure the sensor is a genuine Hamilton Medical part.

Alarm	Definition	Action needed
CO2 sensor disconnected	<i>Low priority.</i> The CO2 module is installed, but there is no signal from the CO2 sensor. CO2 monitoring is enabled.	• Make sure a CO2 sensor is connected. • Check CO2 sensor connections (CO2 sensor cable to module, CO2 module to ventilator). • If the problem persists, have the ventilator serviced.
CO2 sensor over temperature	<i>Low priority.</i> The temperature at the CO2 sensor is too high.	• Check whether the sensor is affected by an external heating source. • Remove the sensor from the airway, and disconnect the sensor from the CO2 module. Reconnect. • Verify that system is running within the specified environmental conditions. Check for excessive airway temperature, which could be caused by defective humidifier, heater wire, or probe.
CO2 sensor warmup	<i>Low priority.</i> CO2 operating temperature not yet reached or unstable.	Wait for sensor to warm up.
CO2: Poor signal	<i>Low priority.</i> The CO2 sensor signal quality is poor.	• Check patient condition. • Check CO2 sensor and adapter connections. • Ensure that airway adapters are not in a horizontal position relative to the floor to reduce accumulation of patient secretions. If accumulation occurs, remove the adapter, rinse with water, and reconnect.
Device temperature high	<i>High priority.</i> The internal temperature of the ventilator is higher than expected.	• Remove the ventilator from the sun or other heat source. • Check the cooling fan filter and fan. • Prepare alternative ventilation. • Have the ventilator serviced.

Alarm	Definition	Action needed
Disconnection on patient side	<i>High priority.</i> VTE is less than one-eighth of the delivered VTi, and delivered VTi exceeds 50 ml. Applicable in invasive modes. For APRV and DuoPAP modes, only applicable during the pressure phase.	• Check patient condition. • Check the breathing circuit for a disconnection between the patient and the flow sensor, or for other large leaks (for example, ET tube).
Disconnection on ventilator side	<i>High priority.</i> Measured VTi at the flow sensor is less than one-half of the delivered VTi, and delivered VTi exceeds 50 ml.	• Check the expiratory valve: – Check the condition of the expiratory valve set. If anything is defective, replace. – Check whether the expiratory valve is affected by any nebulizing agent. – Make sure that the expiratory valve is properly installed. – Check whether there is a disconnection at the expiratory valve. • Replace the expiratory valve. • Check the flow sensor. If needed, replace the flow sensor.
Exhalation obstructed	<i>High priority.</i> Either the end-expiratory pressure is too high or the end-expiratory flow is too low. Note that you must use an inspiratory filter to prevent contamination. The ventilator may be contaminated if no inspiratory filter is used. Not active when using HiFlowO2.	• Check patient condition. • Check the expiratory limb for occlusion. • Check the expiratory valve set. Replace if needed. • Check the flow sensor tubes for occlusion. • Adjust breath timing controls to increase the expiratory time. • Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.

Alarm	Definition	Action needed
External flow sensor failed	<i>High priority.</i> The external flow sensor does not work properly. The alarm is generated when either the Check flow sensor or Check flow sensor tubing alarm is active for 3 consecutive breath cycles. The ventilator switches to Sensor Failure mode (Section 7.7.1).	• Check flow sensor for excessive secretions and/or water accumulation. • Provide alternative ventilation and clean the flow sensor with sterile water. • Connect and calibrate a new flow sensor.
Fan failure	<i>Medium priority.</i> There is a problem with the cooling fan.	• Provide alternative ventilation until the issue is resolved. • Disconnect the ventilator from the patient. • Have the ventilator serviced.
Flow sensor calibration needed	<i>High priority during ventilation, low in Standby.</i> The ventilator does not have correct calibration data or automatic recalibration of the flow sensor is impossible. In Standby, may indicate that the patient group has changed. Note that flow, volume, and pressure measurements are less accurate with an uncalibrated flow sensor.	• Ensure the correct flow sensor for the selected patient group is attached to the breathing circuit. • Calibrate the flow sensor as soon as possible.
Function key not operational	<i>Medium priority.</i> Function key is defective. Ventilation continues.	• Turn off the ventilator using the Power/Standby button on the back of the device. • Have the ventilator serviced.
High frequency	<i>Medium priority.</i> The measured fTotal exceeds the set alarm limit.	• Check the patient for adequate ventilation (VTE). • Check alarm limits. • Check the trigger sensitivity. • If the ventilator is in ASV mode, see Section 7.9.
High minute volume	<i>High priority.</i> The measured ExpMinVol exceeds the set alarm limit.	• Check patient condition. • Check and confirm settings, including alarms.

Alarm	Definition	Action needed
High oxygen	<i>High priority.</i> If LPO is selected, the measured oxygen exceeds the set high Oxygen alarm limit. If HPO is selected, the measured oxygen is more than 5% (absolute) above the current Oxygen control setting.	• Calibrate the O2 cell. • Install a new O2 cell. • Check alarm limits (if set manually).
High PEEP	<i>Medium priority.</i> Monitored PEEP exceeds (set PEEP + 5 cmH2O) for two consecutive breaths. <i>For DuoPAP and APRV only:</i> Alarm applies to both P high and P low settings. The alarm sounds when the monitored P high exceeds (set P high + 5 cmH2O) or monitored P low exceeds (set P low + 5 cmH2O) for two consecutive breaths. If T low is set to < 3 seconds, the High PEEP alarm is disabled for P low settings. This reduces the incidence of false positive alarms.	• Check patient condition. • Check and confirm settings, including alarms. • Check the expiratory valve set for possible obstructions. • Check for obstructions in the expiratory limb.
High pressure during sigh	<i>High priority.</i> A sigh cannot be fully delivered because excessive inspiratory pressure would be required. The sigh is partially delivered.	• Check patient condition. • Check the artificial airway of the patient for kinks and occlusions. • Check the breathing circuit limbs and flow sensor tubes for kinks and occlusions. • Consider disabling the Sigh function.

Alarm	Definition	Action needed
High pressure	<i>High priority, Low after Audio pause is activated.</i> The measured inspiratory pressure exceeds the set high Pressure alarm limit. The ventilator immediately closes the inspiratory valve to stop gas flow to the patient and opens the expiratory valve to reduce pressure to the PEEP/CPAP level. If the pressure reaches 15 cmH₂O above the high Pressure alarm limit for longer than 5 seconds, the ventilator opens the release valve. If the pressure reaches 15 cmH₂O above the high Pressure alarm limit for longer than 7 seconds, the ventilator enters the Ambient state.	• Check patient condition. • Adjust the Pressure alarm limit. • Check the artificial airway of the patient for kinks and occlusions. • Check the breathing circuit limbs and flow sensor tubes for kinks and occlusions. • Provide alternative ventilation once the ventilator enters the Ambient state.
Inspiratory volume limitation	<i>Medium priority.</i> The delivered Vt is more than 1.5 times the set high Vt alarm limit. Pressure is reduced to PEEP level. The APV controls reduce the pressure for the next breath by 3 cmH₂O. Disabled in noninvasive modes.	• Reduce the Psupport setting. • Adjust the high Vt alarm limit.
Invalid option board	<i>Low priority.</i> The installed communication board is invalid.	• Contact your Hamilton Medical technical representative. • Have the ventilator serviced.
IRV	<i>Low priority.</i> The set I:E ratio is above 1:1, leading to inverse ratio ventilation. Does not apply in PSIMV+PSync, SPONT, NIV, or NIV-ST modes, or in HiFlowO2.	Check the timing control settings.

Alarm	Definition	Action needed
Loss of external power	<i>Low priority.</i> The ventilator is running on battery power due to loss of a primary power source.	• Silence the alarm. • Check integrity of connection to primary power source. • Check battery status. • Prepare for possible power loss. • Provide alternative ventilation until the issue is resolved.
Loss of PEEP	<i>Medium priority.</i> One of the following conditions is in effect: • Pressure during exhalation is below (set PEEP/CPAP – 3 cmH₂O) for more than 10 seconds • Measured end-expiratory pressure is below (set PEEP/CPAP – 3 cmH₂O) for two consecutive breaths	• Check patient condition. • Check the breathing circuit for leaks. Replace the breathing circuit, if necessary. • Check the condition of the expiratory valve set. If anything is defective, replace.
Loudspeaker defective	<i>High priority.</i> A loudspeaker malfunction was detected. A technical alarm cannot typically be corrected by the operator. Ventilation continues.	• Check patient condition. • Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Low frequency	<i>Medium priority.</i> Measured f _{Total} is below the set alarm limit.	• Check patient condition. • Adjust the low f_{Total} alarm limit.
Low minute volume	<i>High priority.</i> Measured ExpMinVol is below the set alarm limit.	• Check patient condition. • Check the breathing circuit and artificial airway of the patient for leaks and/or disconnection. • Check and confirm settings, including alarms.
Low oxygen	<i>High priority.</i> If LPO is selected, the measured oxygen is below the set low Oxygen alarm limit. If HPO is selected, the measured oxygen is more than 5% (absolute) below the current Oxygen control setting.	• Check patient condition. • Check the oxygen supply. Provide an alternative source of oxygen, if necessary. • Calibrate the O₂ cell. • Provide alternative ventilation and install a new O₂ cell.

Alarm	Definition	Action needed
Low pressure	<i>High priority.</i> The set pressure during inspiration was not reached.	• Check patient condition. • Check the breathing circuit for a disconnection between the patient and the flow sensor, or for other large leaks.
O2 cell calibration needed	<i>Low priority.</i> O2 cell calibration data is not within the expected range, or the sensor is new and requires calibration.	• Calibrate the O2 cell. • Verify temperature settings are within environmental specifications. • Replace O2 cell if required. • Have the ventilator serviced.
O2 cell defective	<i>Low priority.</i> The O2 cell is depleted.	Install a new O2 cell.
O2 cell missing	<i>Low priority.</i> There is no signal from the O2 cell.	Install an O2 cell or use an external monitor, according to ISO 80601-2-55.
O2 cell not system compatible	<i>Low priority.</i> The incorrect type of O2 cell is installed.	Ensure a Hamilton Medical O2 cell is used and it is properly installed.
Options not found	<i>High priority.</i> Options were not found during startup.	• Restart device. • If the problem persists, have the ventilator serviced.
Oxygen supply failed	<i>High priority.</i> The oxygen source flow is lower than expected.	• Check patient condition. • Check the oxygen supply. Provide an alternative source of oxygen, if necessary. • Check the oxygen source/supply for potential leakage. • Provide alternative ventilation until the issue is resolved.
Performance limited by high altitude	<i>Medium priority, Low after silence.</i> The airway pressure cannot be reached at the current altitude. As long as the device remains above the altitude limit, the pressure cannot be reached, and the alarm is active.	• Check patient condition. • If at all possible, consider lowering altitude to reach the target performance. • Provide alternative ventilation until the issue is resolved.

Alarm	Definition	Action needed
PetCO ₂ high	<i>Medium priority.</i> PetCO ₂ exceeds the set alarm limit.	• Check patient condition. • Check and confirm settings, including alarms.
PetCO ₂ low	<i>Medium priority.</i> PetCO ₂ is below the set alarm limit.	• Check patient condition. • Check the breathing circuit and flow sensor/artificial airway of the patient for leaks. • Check and confirm settings, including alarms.
Pressure limit has changed	<i>Low priority.</i> Applies in ASV mode. The P _{asv} limit was changed. When this setting is changed, the device automatically adjusts the high Pressure alarm limit to 10 cmH ₂ O above the specified P _{asv} limit setting.	Make sure the pressure limit is high enough so that sufficient pressure can be applied for adequate breath delivery.
Pressure limitation	<i>Medium priority, Low after silence.</i> Inspiratory pressure, including PEEP/CPAP, is 10 cmH ₂ O below Pressure. The ventilator limits applied pressure, so the target pressure or volume may not be achieved.	• Check the patient for adequate ventilation. • Check and confirm settings, including alarms.
Pressure not released	<i>High priority.</i> Airway pressure has exceeded the Pressure limit, and the pressure was not released via the expiratory valve after 5 seconds. The ventilator enters the Ambient state.	• Check expiratory valve and breathing circuit for kinks and occlusions. • Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Preventive maintenance required	<i>Low priority.</i> The device was last serviced more than 1 year ago. The ventilator requires preventive maintenance.	Have the ventilator serviced as soon as possible.
Real-time clock failure	<i>Medium priority.</i> The date and time are not set.	Set the date and time (System > Settings window).

Alarm	Definition	Action needed
Release valve defective	<i>Low priority.</i> During the routine check of the ambient valve during a tightness test, the valve was found to be defective. The alarm is reset when a Tightness test is successfully passed. Ventilation is not necessarily affected.	If the problem still persists, have the ventilator serviced as soon as possible.
Replace HEPA filter	<i>Low priority.</i> The air inlet HEPA filter shows increased resistance.	Replace the HEPA filter as soon as possible.
Replace O2 cell	<i>High priority.</i> Communication error, O2 cell is defective. Ventilation is not necessarily affected. Oxygen concentration should not be affected by this issue. Ventilation can continue.	• Replace O2 cell. • If you cannot replace the O2 cell, consider disabling it.
Safety mode	<i>Technical fault.</i> A hardware or software issue was detected when using HiFlowO2. The ventilator switches to Safety mode.	• Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Safety ventilation	<i>Technical fault.</i> A hardware or software issue was detected. The ventilator switches to Safety ventilation.	• Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Self test failed	<i>High priority.</i> The self test failed during startup. The Start ventilation button is unavailable. Note that if this error occurs when the device is restarting from a complete power loss, the device enters the Ambient state.	• Restart device. • If the problem persists, have the ventilator serviced. • If the device enters the Ambient state, provide alternative ventilation and have the ventilator serviced.
Suctioning maneuver	<i>Low priority.</i> Ventilation suppression is active, and ventilator settings are being maintained, although the ventilator is not delivering breaths.	Resume ventilation when desired by first reconnecting the patient.

Alarm	Definition	Action needed
Technical event: xxxxxx	<i>Low, medium, or high priority.</i> A hardware or software issue was detected. A technical alarm cannot typically be corrected by the operator. Ventilation continues.	Have the ventilator serviced.
Technical fault: xxxxxx	<i>Technical fault.</i> A hardware or software issue was detected. The ventilator switches to the Ambient state or to Safety ventilation.	• Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Technical state failed	<i>Technical fault.</i> There is a problem with the hardware configuration. Ventilation is not possible.	Have the ventilator serviced.
Touch not functional	<i>Low priority.</i> The touch screen is defective.	• Turn the ventilator off and on again. • If the problem persists, have the ventilator serviced.
Turn flow sensor	<i>Medium priority.</i> Either the flow sensor is connected to the breathing circuit facing the wrong direction or the flow sensor connections to the ventilator are reversed. Ventilation continues, but the ventilator corrects for the reversed signal.	• Check the flow sensor. The end marked PATIENT faces the patient. • Reverse the flow sensor tube connections on the ventilator. • The blue tube attaches to the blue connector. The clear tube attaches to the silver connector.
Unknown part number	<i>Technical fault.</i> A hardware or software issue was detected. The ventilator switches to the Ambient state.	• Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced.
Vent outlet temperature high	<i>High priority.</i> Inspiratory temperature is too high. Ventilation continues, but if temperature stays high, the ventilator may enter the Ambient state.	• Check whether the room temperature exceeds the ventilator's operating temperature limit. • Check that the air intake on the device is not obstructed. • Provide alternative ventilation until the issue is resolved. • Have the ventilator serviced if temperature cannot be reduced.

Alarm	Definition	Action needed
Ventilation canceled	<i>Technical fault.</i> A hardware or software issue was detected. The ventilator switches to the Ambient state.	• Provide alternative ventilation until the issue is resolved. • Contact your Hamilton Medical representative. • Have the ventilator serviced.
Vt high	<i>Medium priority.</i> Measured VTE exceeds the set limit for 2 consecutive breaths. In invasive modes, if the delivered tidal volume exceeds 150% of set high Vt alarm limit ($Vt > 1.5 * \text{high Vt alarm limit}$), the Inspiratory volume limitation alarm is generated.	• Check the pressure and volume settings for potential leaks and/or disconnections. • Check and confirm settings, including alarms.
Vt low	<i>Medium priority.</i> Measured VTE is below the set limit for 2 consecutive breaths.	• Check patient condition. • Check and confirm settings, including alarms. • Check the breathing circuit and artificial airway of the patient for leaks, kinked limbs or tubing, or disconnection.
Wrong flow sensor	<i>High priority.</i> The type of flow sensor connected does not match the selected patient group.	• Check the patient group selection. • Connect and calibrate the correct flow sensor.

10

Ventilation settings and functions

10.1	Overview.....	188
10.2	Accessing settings during ventilation	188
10.3	Entering/exiting Standby	190
10.4	Oxygen enrichment.....	191
10.5	High flow oxygen therapy	192
10.6	Manual breath	193
10.7	Inspiratory and expiratory hold	194
10.8	Working with a nebulizer	195
10.9	Locking and unlocking the touch screen.....	195
10.10	Capturing a screenshot	196
10.11	Setting display options	196
10.12	About the Event log	197

10.1 Overview

Before proceeding, review the safety information in Chapter 1.

This chapter describes changing ventilation settings during active ventilation, as well as how to perform special functions on the ventilator.

10.2 Accessing settings during ventilation

You can change patient data and ventilation control settings during ventilation, as needed.

10.2.1 Accessing patient data during ventilation

NOTICE

Changing the patient height (Adult/Ped.) or weight (Neonatal) automatically adjusts the following settings based on the recalculated IBW or updated Weight:

- Apnea backup setting (when set to Automatic)
- Safety ventilation startup values

Other settings and alarm limits are not adjusted.

During ventilation, the Controls > Patient window displays the basic patient profile, including sex, height, and ventilation time (Section 5.2).


When the ventilator is in Standby, the patient controls are accessible in the Standby window.

Note that if you are ventilating using the Last patient setup, these controls are greyed out and unavailable.

To change patient data during ventilation

- ▶ Touch **Controls > Patient** and adjust settings as needed.

Figure 10-1. Controls > Patient window (Adult/ Ped shown)

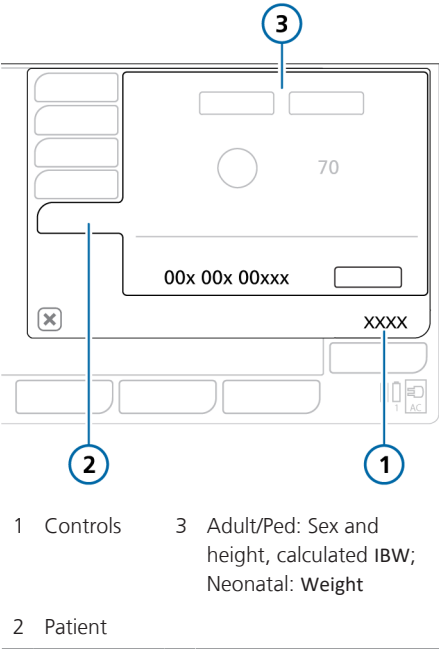

10.2.2 Accessing settings during ventilation


At any time during ventilation, you can adjust settings, as needed. Changes are applied immediately.

- Touch **Alarms** to access the alarm limit controls.
- Touch **Controls** to access the mode controls. Some controls are also available on the right side of the main display.
- Touch **Modes** to change the selected ventilation mode.
The mode changes at the end of the current breath cycle.
Note that you can only select the HiFlowO2 and nCPAP-PS modes when in **Standby**.
- Touch **Controls > Patient** to access patient settings.

The ventilator monitor also provides access to key functions.

Keys on the front of the ventilator provide access to important functions, including entering **Standby** mode and pausing the audible alarm.

Figure 10-2. Function keys

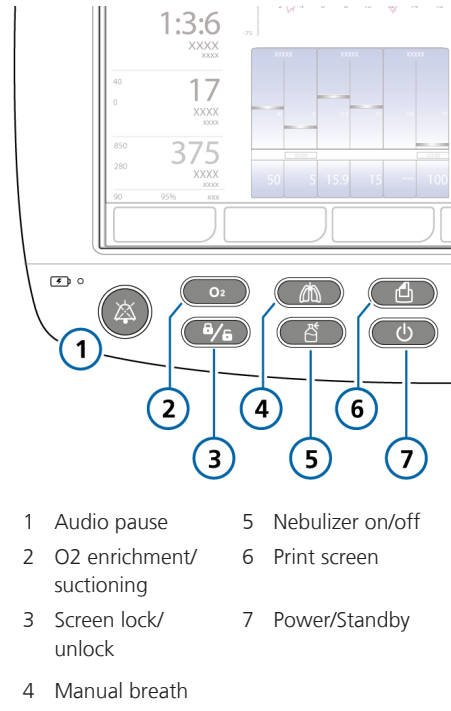

10.3 Entering/exiting Standby


WARNING

When in **Standby**, the ventilator does *not* automatically resume ventilation when the patient is reconnected. You must manually restart ventilation.



NOTICE

- Patient alarms are suppressed in **Standby**.
- Acoustic patient alarms are suppressed for 1 minute after starting ventilation from **Standby**.

Standby is a waiting mode that lets you maintain ventilator settings while the ventilator is not performing any ventilatory functions.

To put the ventilator into Standby


1. Press and quickly release  (Power/Standby) while the ventilator is turned on (Figure 10-2).
The **Activate Standby** window (1) opens.

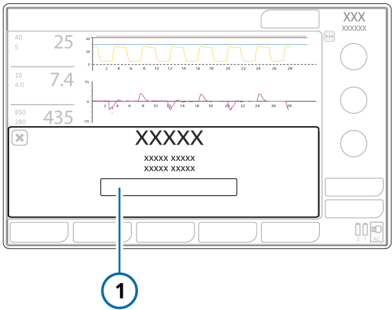

2. Touch **Activate standby**.
The **Standby** window opens (Figure 10-3).

While in **Standby**, the window shows the elapsed time the ventilator has been in **Standby**.

Figure 10-3. Standby window

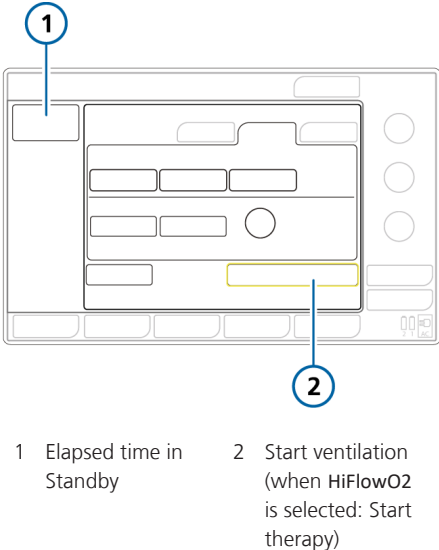

To end Standby and start ventilation

- Do either of the following:
 - Touch **Start ventilation**.
 If **HiFlowO2** is selected, the button is labeled **Start therapy**.
 - Press and quickly release .

Ventilation resumes with the previous settings.

10.4 Oxygen enrichment

NOTICE

- Oxygen alarms are suppressed while O2 enrichment is active.
- O2 enrichment is not available when using low-pressure oxygen.
- The **Disconnection on patient side** alarm is suppressed while O2 enrichment is active.

Oxygen enrichment is useful before or after tracheal/endotracheal suctioning and for other clinical applications.

The device delivers the following oxygen concentration for 2 minutes depending on the selected patient group:

- **Adult/Ped.** 100% oxygen
- **Neonatal.** 125% of the current **Oxygen** setting

To start oxygen enrichment

- ▶ Press  (O2 enrichment) (Figure 10-2).

After a short time, the ventilator starts delivering increased oxygen (see above).

When active, the key backlight is green. The **Oxygen** control turns green and displays the currently applied concentration, with a countdown timer.



When finished, the ventilator resets the concentration to the previous operator-set value.

To stop O2 enrichment manually

- ▶ Do either of the following:

- Press .

Ventilation resumes at the previous operator-set oxygen concentration.

- Change the O2 concentration using the **Oxygen** control.

Ventilation resumes at the set oxygen concentration.

10.4.1 Performing an open-suctioning maneuver

NOTICE

Note that the Suctioning tool is *only* available if the option is enabled on your device.

The Suctioning tool is intended to protect the operator from possible contamination, as well as ensure the patient's safety during an open-suctioning maneuver. Note that the Suctioning tool stops ventilation when a patient disconnection is detected by the ventilator.

Suctioning may affect measured values.

Note that suctioning is disabled when using:

- HiFlowO2
- NIV or NIV-ST modes
- LPO

To perform an open suctioning maneuver

1. Press  (O2 enrichment) for pre-oxygenation.
2. Disconnect the patient.

The text **Suctioning maneuver** is displayed in the message bar.

Disconnecting the patient stops ventilation so that no gases are blown through the breathing circuit. All alarms are suppressed for one minute.

3. Use a suctioning catheter (not included) to suction all secretions out of the patient's airway.
4. Reconnect the patient to the ventilator.

Ventilation resumes, post-oxygenation starts, and all acoustic alarms are again suppressed for one minute. Alarm messages and the alarm lamp are still active.

To stop the maneuver manually

- ▶ Press  again.

10.4.2 About closed-suctioning maneuvers

NOTICE

When performing a closed-suctioning maneuver, follow your institution's protocols.

Verify alarm limit settings and consider whether O₂ enrichment should be used prior to performing a closed-suctioning maneuver.

If the Suctioning tool is enabled on your device, ensure O₂ enrichment is *not* active when performing the closed-suctioning maneuver.

When performing a closed-suctioning maneuver, ventilation continues and the current settings do *not* need to be adjusted.

You can perform a closed-suctioning maneuver with the following pressure-controlled ventilation modes: APVcmv, APVsimv, PCV+, PSIMV+, DuoPAP, APRV, SPONT, or ASV.

10.5 High flow oxygen therapy

⚠ WARNING

- Excessive high flows through the nasal cannula could lead to adverse clinical events such as barotrauma or pneumothorax.
- Do not use high flow oxygen therapy during intrahospital transport.
- HiFlowO₂ is not available when using low-pressure oxygen (LPO).

NOTICE

Be sure to use the appropriate cannula size for the patient. For details, see the cannula *Instructions for use*.

High flow oxygen therapy (HiFlowO₂³⁴) continuously delivers an air/gas mixture to the patient and monitors the delivered oxygen concentration.

HiFlowO₂ is indicated for adult, pediatric, infant, and neonatal patients who can breathe spontaneously. HiFlowO₂ is not intended to be life-supporting.

The operator sets the oxygen concentration and flow rate. The set flow can vary from 2 to 60 l/min for adult and pediatric patients, and 2 to 12 l/min for neonatal patients.

³⁴ HiFlowO₂ may also be referred to as cFlow (continuous flow).

When using **HiFlowO2**, the following parameters are monitored: **Oxygen** and **Control flow** (in trend and as an MMP), as well as **SpO2**, if enabled.

Pressure is measured at the ventilator's pressure release valve. If pressure exceeds the high pressure limit of 50 cmH2O, the flow stops and the **Check for blockage** alarm is generated. Flow resumes shortly after the pressure is released.

Note that during **HiFlowO2**, disconnection and apnea alarms are inactive.

10.5.1 Working with high flow oxygen therapy

You must be in **Standby** to select **HiFlowO2**.

To deliver **HiFlowO2**

1. Place the ventilator into **Standby**.
2. Touch **Modes**.
3. Touch **HiFlowO2**, then touch **Confirm**.
The **Controls** window opens. Be sure to read the safety information.
4. Set the desired values for **Oxygen** and **Flow**, then touch **Confirm**.
You can change these settings anytime.
5. Touch **Start therapy**.

The **HiFlowO2** Trend graphs and plethysmogram (if **SpO2** is enabled) are displayed.

10.6 Manual breath

You can prolong inspiration as well as deliver a manually triggered breath.

When active, the **Manual breath** key back-light is green.

Note that manual breath is disabled during **HiFlowO2**.

To deliver a manual breath

- ▶ Press and release  (**Manual breath**) during exhalation (Figure 10-2).

The manual breath uses the mandatory breath settings (standard or operator set).

If you try to initiate a manual breath during the early stage of inspiration or the early stage of exhalation, the breath will not be delivered.

To deliver a prolonged inspiration

- ▶ Press and hold  (**Manual breath**) during any breath phase.

If the ventilator is in exhalation, the device applies a minimum exhalation phase and then switches to inspiration. The device maintains the inspiration pressure until you release the key, or for a maximum of 15 seconds.

10.7 Inspiratory and expiratory hold


The ventilator supports both inspiratory and expiratory holds.

Note that holds are disabled in HiFlowO2.

10.7.1 Inspiratory hold

An inspiratory hold closes the inspiratory and expiratory valves for a short time. Perform this maneuver to calculate true plateau airway pressure.

Figure 10-4. Hold window

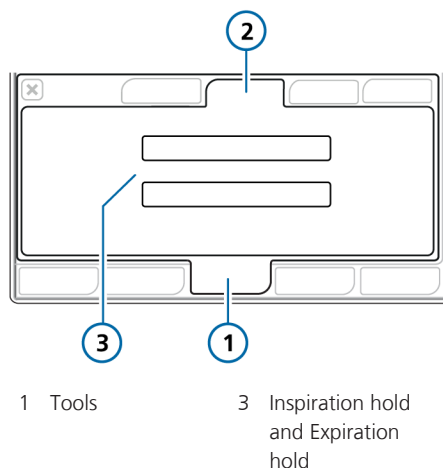

1 Tools

3 Inspiration hold and Expiration hold

2 Hold

To perform an inspiratory hold

1. Touch **Tools** > **Hold**.
2. Touch **Inspiration hold**.

The ventilator performs an inspiratory hold as follows:

- **Adult/Ped.** 10-second hold
- **Neonatal.** 3-second hold

To stop the inspiratory hold early, touch **Inspiration hold** again.

A progress bar appears for the length of the hold.

At the end of the hold, the window closes. The waveforms are frozen on the display.

3. Review the waveforms as appropriate.
4. Touch the **Freeze** button or press the P&T knob to unfreeze the display.

10.7.2 Expiratory hold

Perform this maneuver to measure the pressure within the patient airways and the patient's effort and strength for inspiration. It is used to calculate intrinsic PEEP.

The ventilator ambient valve opens at 3 cmH₂O below ambient pressure. Note that pressure values below -3 cmH₂O are not displayed.

To perform an expiratory hold

1. Touch **Tools** > **Hold**.
2. Touch **Expiration hold**.

The ventilator performs an expiratory hold as follows:

- **Adult/Ped.** 10-second hold
- **Neonatal.** 3-second hold

To stop the expiratory hold early, touch **Expiration hold** again.

A progress bar appears for the length of the hold.

At the end of the hold, the window closes. The waveforms are frozen on the display.

3. Review the waveforms as appropriate.
4. Touch the **Freeze** button or press the P&T knob to unfreeze the display.

10.8 Working with a nebulizer

The ventilator supports the use of Aerogen and pneumatic nebulizers for adult and pediatric patients.³⁵

For neonatal patients, use an Aerogen nebulizer system.³⁶

For connection, positioning, and use details, see the *Nebulizer Positioning Guidelines* (ELO2020-124-TW) available on **MyHamilton**, as well as the manufacturer's *Instructions for use*.

10.8.1 Working with a pneumatic nebulizer

Before proceeding, review the safety information in Chapter 1.

Nebulization with a pneumatic nebulizer is available in all ventilation modes *except* during neonatal ventilation or when using **HiFlowO2**.

For delivery of prescribed medications in the ventilator circuit, the ventilator provides a stable pressure source to power a standard inline pneumatic nebulizer connected to the **Nebulizer** port. The pressure delivered allows for an optimum flow of approximately 8 l/min.

The ventilator automatically compensates for the additional volume provided by the pneumatic nebulizer to deliver the set tidal volume.

For effective nebulization, use a pneumatic nebulizer jar.

For additional information about nebulizer use, including adding medication, refer to the manufacturer's *Instructions for use*. For connection and setup details, see Section 4.6.

To start and stop nebulization

1. Press  (**Nebulizer**) (Figure 10-2).
When active, the key backlight is green.
The fixed nebulizer flow, using 100% O₂, is synchronized with the inspiratory phase of each breath for 30 minutes.
2. To stop nebulization at any time, press  again.
The key backlight turns white and nebulization stops.

10.9 Locking and unlocking the touch screen

You can lock the touch screen to prevent inadvertent entries.

When screen lock is active:

- The key backlight is green.
- Touching the screen generates an audible beep and the message, **Screen is locked!**, is displayed.
- Some device controls remain available, while others are disabled, as follows:
 - **Active controls.** Audio pause, Manual breath, O₂ enrichment, Nebulizer
 - **Inactive controls.** Touch screen, Power/Standby, Print screen, P&T knob

³⁵ See the Hamilton Medical e-catalog for compatible devices.

³⁶ Aerogen nebulization is not supported for patients younger than 28 days old in the USA.

To lock or unlock the screen

- ▶ Press  (Screen lock/unlock) (Figure 10-2).

10.10 Capturing a screenshot

Before using a USB memory device with the ventilator, review the safety information in Section 1.4.4.

The  (Print screen) key saves a JPG file of the current ventilator display to a USB memory drive.

To capture a screenshot of the display

1. Insert a USB memory drive into the USB port (Figure 2-4).
2. Press  (Figure 10-2) when the desired display is shown.

The device saves the image to the screenshots folder on the memory drive. The key backlight is green while the device saves the image.

The filename uses the following format:

screenshot_yyyy-mm-dd_hh-mm-ss.jpg

where:

yyyy is the year
mm is the month
dd is the date
hh is the hour (in 24-hour format)
mm is the minute
ss is the second

10.11 Setting display options

You can set the day and night display brightness, as well as the device date and time.


10.11.1 Setting date and time

You set the date and time for the ventilator in the **System > Settings** window. Ensure the date and time are set correctly so that event log entries have accurate time and date stamps.

To set the date and time

1. Touch **System > Settings** (Figure 10-5).
2. Touch **Date & Time**.
3. Adjust the date and time, then touch **Apply** to save the changes.

Figure 10-5. Date & Time settings

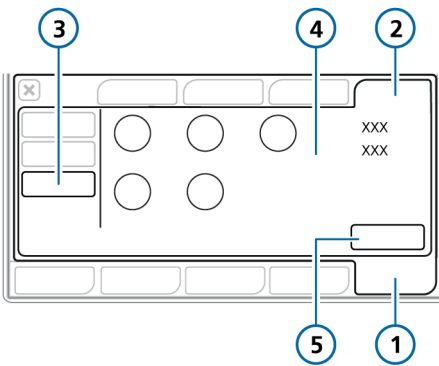

- | | |
|---------------|--------------------------|
| 1 System | 4 Date and time settings |
| 2 Settings | 5 Apply |
| 3 Date & Time | |


10.11.2 Day and night display brightness

Use these settings to set the brightness of the display for use during the day and night.

To set the display brightness

1. Touch **System** > **Settings** (Figure 10-6).
2. Touch **Day & Night**.
3. To select Day mode with a bright display, touch the **Day** button.
To select Night mode with a dimmer display, touch the **Night** button.
4. Adjust the brightness of the display in each mode using the **Brightness** control. The setting you choose becomes the new default for that mode.

Figure 10-6. Day & Night window

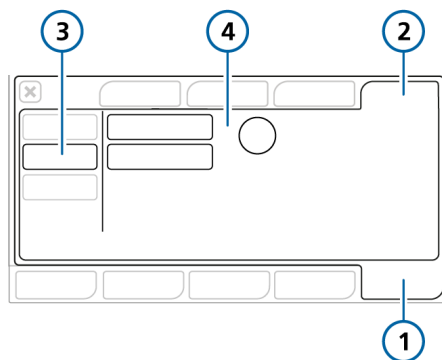

- | | |
|------------|--|
| 1 System | 3 Day & Night |
| 2 Settings | 4 Day, Night, and
Brightness settings |

10.12 About the Event log

Once the ventilator is turned on, event logs collect data about clinically relevant ventilator activities, including alarms, technical notes, setting changes, calibrations, maneuvers, and special functions.

The date, time, and a unique identification reference (ID) for event classification is included.

Alarms are shown in color, depending on priority level (yellow for low or medium, red for high).

A more extensive log including technical and configuration details is available to service engineers.

When setting up a new patient:

- Data is appended to the existing event log when you select the **Last patient** tab.
- The event log is cleared and starts again when you select a different patient group tab (**Adult/Ped** or **Neonatal**).

Event log data persists after shutting off the ventilator or in the event of a power loss. A maximum of 10,000 events is stored. When a log buffer is full, new events overwrite the oldest log entries.

You can copy Event log data. See Section 10.12.1.


To display the Event log

- Touch **Events**.

Table 10-1. Day and Night settings

Setting	Brightness range	Default
Day	10% to 100%	80%
Night	10% to 100%	40%

Figure 10-7. Events window

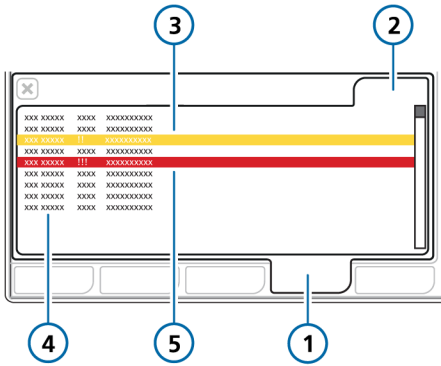

- | | |
|---------------------------------------|-----------------------------|
| 1 Events | 4 Informational message |
| 2 All | 5 High-priority alarm (red) |
| 3 Low-/medium-priority alarm (yellow) | |

10.12.1 Copying Event log data


Before using a USB memory device with the ventilator, review the safety information in Section 1.4.4.

You can save the Event and Service logs to a USB memory device. The device must have a FAT or FAT32 format and it must not have an operating system or a security system installed.

To copy the log

1. Place the ventilator into **Standby** and insert a memory device into the USB port (Figure 2-4).
2. Touch **Tools** > **Utilities** (Figure 10-8).
3. Touch **Export Logs**.
4. Remove the memory device when the text **Export successful** is displayed.
A folder named C3-sn<serial number> is created on the memory device containing all Event and Service log files.

Figure 10-8. Data transfer window

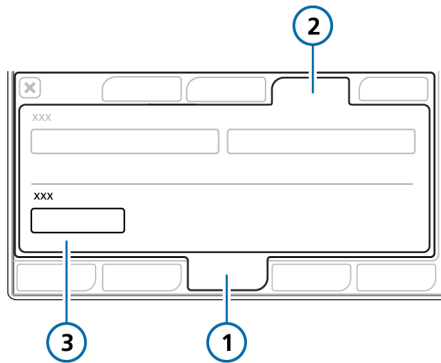

- | | |
|-------------|---------------|
| 1 Tools | 3 Export Logs |
| 2 Utilities | |

11

Working with P/V Tool

11.1	Overview.....	200
11.2	Using the P/V Tool.....	201
11.3	Opening the P/V Tool	202
11.4	Adjusting the control settings.....	203
11.5	Performing a P/V Tool maneuver	204
11.6	Analyzing the data	207
11.7	Using reference curves	207
11.8	Performing a recruitment maneuver	208

11.1 Overview

Before proceeding, review the safety information in Chapter 1.

P/V Tool™ and P/V Tool Pro are available for use with the HAMILTON-C3. This chapter describes the use of P/V Tool Pro.

P/V Tool Pro (referred to as *P/V Tool*) is a diagnostic and recruitment tool. It allows you to perform a maneuver to assess the total compliance for the entire respiratory system, including the lungs and the chest wall. Lung compliance is recorded in a quasi-static pressure volume curve.

P/V Tool helps the clinician:

- Determine the patient's lung characteristics and lung compliance.
- Define the maximum plateau pressure for ventilation.
- Determine the positive end expiratory pressure (PEEP) that will improve oxygenation, reduce end tidal CO₂, avoid alveoli collapse after a recruitment maneuver, and improve lung compliance.
- Perform a P/V Tool maneuver to assess the total compliance for the entire respiratory system, including the lungs and the chest wall. Lung compliance is recorded in a quasi-static pressure volume curve.
- Perform a recruitment maneuver to open or reinflate collapsed alveoli in the lungs.
- Define recruited volume and calculate when there is no longer extra lung to recruit.

11.1.1 Conditions for use

The following conditions must be met before performing a P/V Tool maneuver:

- The patient is intubated and passive, that is, *not* breathing spontaneously.
- The breathing circuit is gas tight.
There must be no gas leak throughout the entire system of the ventilator, the breathing circuit, or at the ventilated patient.
- Nebulization is deactivated.
P/V Tool is disabled during nebulization and for five breaths following nebulization.
- The flow sensor must perform optimally.
The accuracy of the information provided depends on the quality of the flow sensor connection. P/V Tool is disabled when the **Flow sensor calibration needed** alarm is active.
- P/V Tool is *enabled* in the following modes: (S)CMV, SIMV, APVcmv, APVsimv, PCV+, PSIMV+, DuoPAP, APRV, and ASV.
- P/V Tool is *disabled* when using the following modes/features: SPONT, NIV, NIV-ST, nCPAP-PS, Apnea backup modes, and HiFlowO2.
- The patient has received at least five breaths between P/V Tool maneuvers.
- The P/V Tool option is activated on the ventilator.

11.1.2 Indications for use

Use of the P/V Tool is indicated for adult, pediatric, and neonatal patients provided that the required conditions are met as described in Section 11.1.1.

11.1.3 Contraindications for use

Use of the P/V Tool is contraindicated if *any* of the following conditions apply:

- Air leaks
- Pregnancy
- Lung emphysema
- Hemodynamic instability
- Confirmed or suspected intracranial hypertension
- Patients who cannot tolerate high intra-pulmonary pressure (e.g., right heart failure)

11.2 Using the P/V Tool

Before proceeding, review the information in Sections 11.1.1 through 11.1.3.

Using the P/V Tool involves the following steps:

To ...	See ...
Open the P/V Tool	Section 11.3
Adjust control settings	Section 11.4
Perform a P/V Tool maneuver	Section 11.5
View the data	Section 11.5.1
Use reference curves	Section 11.7
Perform a recruitment maneuver	Section 11.8

Using the P/V Tool does not require any disconnection of the breathing circuit or changes to ventilation settings.


You can use the P/V Tool during active ventilation.

11.3 Opening the P/V Tool

To open the P/V Tool

1. Touch **Tools** > **P/V Tool**.
 2. Review the safety information, then touch **Confirm** to continue.
- The P/V Tool window opens (Figure 11-1).

Figure 11-1. P/V Tool window

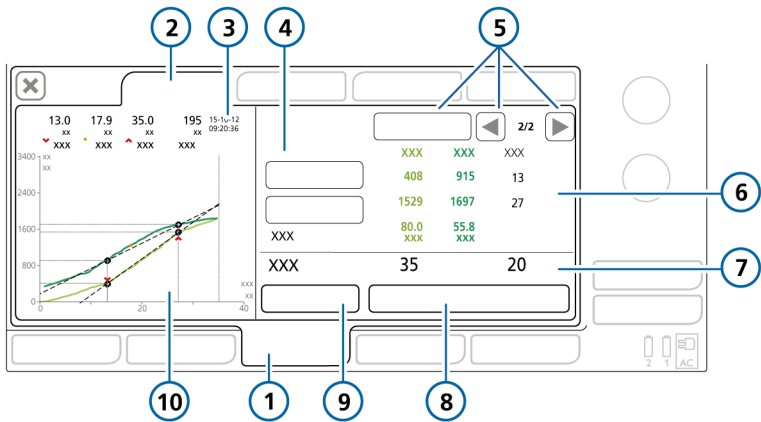

1	Tools	6	Numerical data related to graph
2	P/V Tool	7	Current settings
3	Date and time of maneuver	8	Start/Stop maneuver
4	Cursors 1 and 2	9	Settings
5	Reference button and history navigation arrows	10	P/V Tool Graphics panel

The next step is to adjust the control settings.

11.4 Adjusting the control settings

NOTICE

- Set **Ptop** to a low value to prevent generation of excessive volumes when performing a maneuver on patients with obstructive “soft lung” diseases, such as COPD.
- Set a low ramp speed to ensure accurate data when performing a P/V Tool maneuver. The ramp speed also dictates the length of the maneuver.

You can configure the control parameters listed in Table 11-1 for a P/V Tool maneuver.

To adjust control settings


1. In the P/V Tool window, touch **Settings**.
The Settings window opens (Figure 11-2).
2. Review and, if needed, adjust the settings.
The controls **Ptop**, **Tpause**, and **End PEEP** may require extra steps when adjusting them, as described in the following sections.

Table 11-1. P/V Tool control settings

Control	Description
Pstart (cmH2O)	Starting pressure. Default value: Current PEEP
Ptop (cmH2O)	Target high pressure during the maneuver. Default value: 35
End PEEP (cmH2O)	End pressure and PEEP to be applied after the maneuver. Default value: Current PEEP

Control	Description
Ramp speed (cmH2O/s)	Rate of pressure change; the time taken to reach the target pressure. Default value: 3
Tpause (s)	Length of the pause during the P/V Tool maneuver; time during which the target pressure will be applied. Default value: 0
Tmaneuver (s)	The length of the maneuver. This is a calculated value based on the settings of the above-listed controls. Default value: --

Figure 11-2. P/V Tool control settings

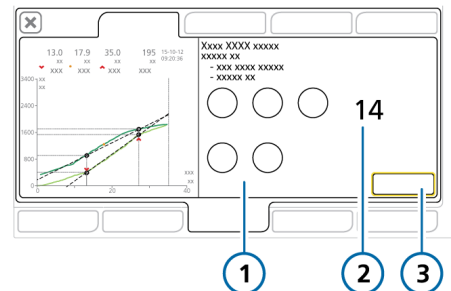

- 1 Control settings (Table 11-1)
- 2 Calculated Tmaneuver value
- 3 Close

To set Ptop > 40 cmH2O or Tpause > 5 seconds

- 1. Touch the appropriate control to activate it and set it to the maximum allowed value (40 for Ptop, 5 for Tpause).
- 2. Press the P&T knob to accept the setting.
- 3. To set either parameter beyond this limit, touch the control again and turn the P&T knob to set the value as desired.
- 4. Press the P&T knob to accept the changed value.

To set End PEEP to a different setting than PEEP/CPAP

- 1. If setting End PEEP to a different value than PEEP/CPAP, the device prompts you to confirm the new setting.
- 2. Touch **Yes** or **No** to confirm the setting.

The next step is to perform a P/V Tool maneuver. See Section 11.5.

11.5 Performing a P/V Tool maneuver

NOTICE

To avoid the risk of infection, if Intelli-Cuff is connected and being used, prior to performing a recruitment maneuver, inflate the cuff pressure controller to keep the airway tight.

To perform a P/V Tool maneuver

- 1. Touch **Start/Stop maneuver**.
The device performs a recruitment maneuver for the length of time defined by the settings.
- 2. To stop the P/V Tool maneuver early, touch **Start/Stop maneuver** again.
At the end of the P/V Tool maneuver, ventilation continues and the results of the maneuver are displayed. See Figure 11-1.

The next step is to review the resulting data.

11.5.1 Viewing data

Data gathered during the P/V Tool maneuver is displayed both graphically and numerically.

To ...	See ...
Choose the data to display	Section 11.5.2
Display numerical data	Section 11.5.2.1
Analyze the curves	Section 11.6
Use a previous curve as reference for comparison	Section 11.7

11.5.2 Choosing the data to display

In the P/V Tool window, you can select from the following graph types:

Table 11-2. P/V Tool graph types

Graph type	Description
Paw/V	Airway pressure to airway volume. The airway pressure in relation to the lung volume. It shows how much pressure is required to inflate the lung at each volume step. See Figure 11-3.
Paw/V + Paw/dV	Airway pressure to airway volume and the difference in airway volume between the inspiratory limb and the expiratory limb. When this view is selected, the difference in airway volume values are displayed in orange on the right side of the P/V Tool window. See Figure 11-4.
Paw/Flow	Airway pressure to airway flow. See Figure 11-5.

Figure 11-3. Paw/V graph

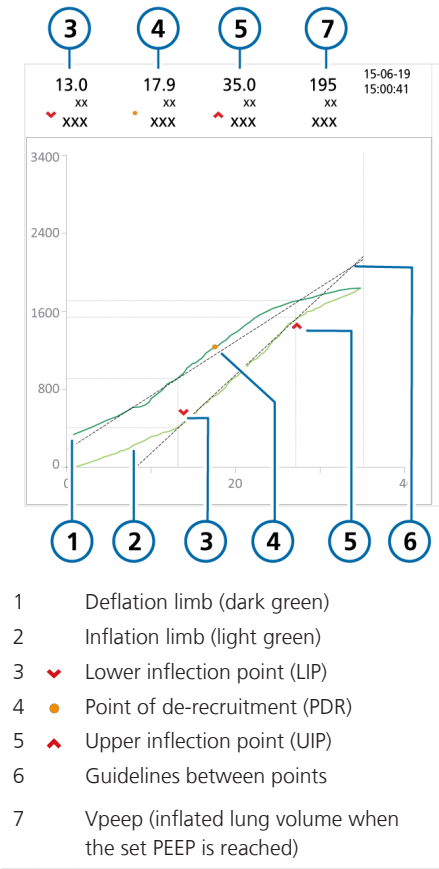


Figure 11-4. Paw/V + Paw/dV (1) graph


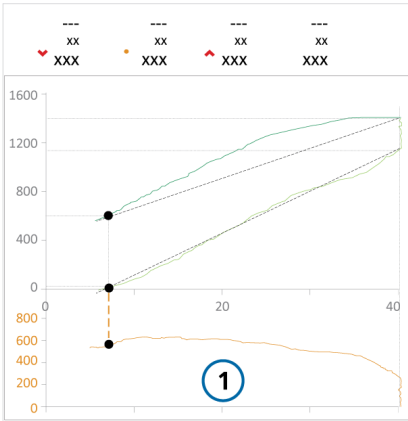


Figure 11-5. Paw/Flow graph

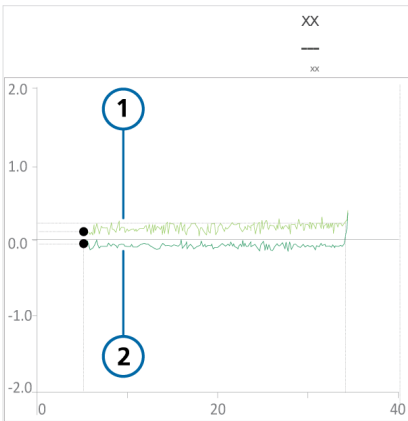

- 1 Inflation limb (light green)
- 2 Deflation limb (dark green)


11.5.2.1 Numerical data

Data is also displayed numerically (Figure 11-6).

The data is dynamic. Depending on what you select in the P/V Tool window, values will change, allowing you to analyze data based on precise values.

For parameter specifications, including ranges and accuracy, see Table 15-6.

Figure 11-6. Reviewing the data

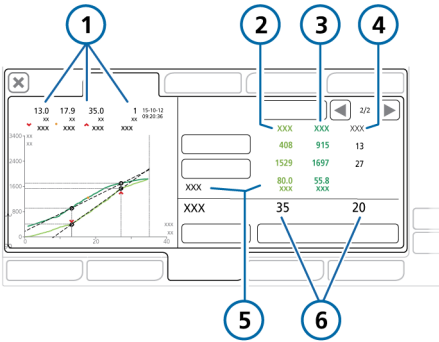

- 1 LIP, UIP, PDR, Vpeep values
Includes dV when an appropriate graph is selected.
- 2 Inflation limb data (light green)
- 3 Deflation limb data (dark green)
- 4 Airway pressure data
- 5 Compliance
- 6 Current settings data

11.6 Analyzing the data

Once the P/V Tool maneuver is complete, the inflation and deflation limbs of the maneuver are displayed in the P/V Tool Graphics panel.

Use the cursors to move up and down the recorded curves to analyze in precise detail the recorded values on the inflation and deflation limbs.

To move the cursors

1. Touch the **Cursor 1** or **Cursor 2** button (Figure 11-1).
2. Move the cursor using the P&T knob. The displayed data is automatically updated as you move the cursor.
3. Touch the button again to deselect the cursor.

11.7 Using reference curves


The reference curve is used to compare a patient's progress over time or before and after a recruitment maneuver.

Between 3 and 20 curves can be stored depending on the length of the stored maneuvers. The oldest curves are deleted as new recruitment maneuvers are performed.

You can select one inflation/deflation curve as the reference curve, which you can change at any time. This curve is overlaid in the P/V Tool Graphics panel.

Stored settings, reference curves, and data are deleted when the device is restarted or when you start ventilation with a new patient.

Figure 11-7. Displaying a reference curve

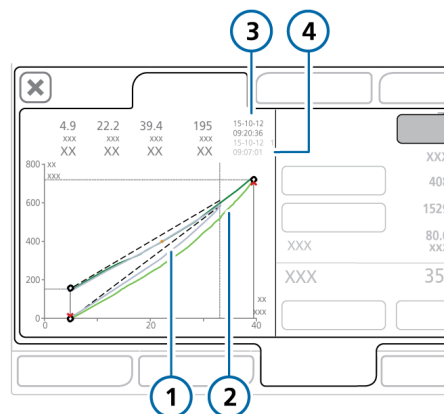

- | | |
|--------------------------|--|
| 1 Reference curve (gray) | 3 Time and date associated with the current (green) curve |
| 2 Current curve (green) | 4 Time and date associated with the reference (gray) curve |

To display a reference curve

1. Touch the left or right navigation arrow keys (Figure 11-1) to scroll through the stored curves. As you scroll through the stored curves, each curve is displayed in gray in the P/V Tool Graphics panel (Figure 11-7).
2. Touch the **Reference** button to set the displayed curve as the reference.

The reference curve is displayed in gray. The current inflation limb, deflation limb, and associated values are displayed in green.

To deselect a reference curve

- ▶ Touch the **Reference** button again to deselect a reference curve.

11.8 Performing a recruitment maneuver

The P/V Tool can also be used to perform a recruitment maneuver. For details, see Section 11.5.

Set **P_{top}** to the desired pressure to perform a recruitment maneuver. The duration for the maneuver is determined by the P/V Tool control settings (Table 11-1).

Upon completion of the recruitment maneuver, the resulting graph shows the volume of the lung that has been recruited.

12

Maintenance

12.1	Overview.....	210
12.2	Cleaning, disinfection, and sterilization	210
12.3	Preventive maintenance	214
12.4	Performing maintenance tasks	215
12.5	Repacking and shipping	218

12.1 Overview

NOTICE

(USA only) Only use EPA-registered and approved surface cleaning/disinfection agents.

Before proceeding, review the safety information in Chapter 1.

This chapter provides information about ventilator maintenance procedures and schedule, as well as cleaning and disinfection instructions.

All of the procedures in this chapter are to be performed by the operator.

For additional maintenance requirements, contact your Hamilton Medical service representative. Any documents referenced in this chapter are available on the MyHamilton website: <https://www.hamilton-medical.com/MyHamilton>

12.2 Cleaning, disinfection, and sterilization

Ventilator components must be regularly cleaned and disinfected, using the cleaning methods and solutions specific to the individual components.

It is important that you use the appropriate method and materials when cleaning and disinfecting the ventilator and its components, not only to avoid damaging the equipment, but also to avoid cross-contamination.

Cleaning and disinfection information is presented as follows:

- Table 12-1 lists the applicable ventilator-related components, and indicates which cleaning and disinfection methods can be used for each one, the frequency with which the component must be cleaned/disinfected, and any other relevant information.
- Table 12-2 lists the supported cleaning and disinfection agents, as well as the concentration to be used for the ventilator.
- Table 12-3 lists the supported cleaning and disinfection agents for the CO₂ sensors.
- Table 12-4 provides cleaning and disinfection information for ventilator-compatible external devices and sensors.

When working with the ventilator components, cleaning methods, and cleaning agents, keep the following in mind:

- Do *not* attempt decontamination procedures unless specified by Hamilton Medical or the original manufacturer.
- While we provide guidelines for agents and concentrations to use, if you have specific questions about the use of a particular cleaning or disinfection agent, contact the manufacturer of the agent.
- After cleaning and decontaminating parts, be sure to perform any required tests and calibrations described in Chapter 5.

Table 12-1. Ventilator cleaning and disinfection methods

Part	Frequency	Cleaning/disinfection method	Remarks
<i>For supported cleaning and disinfection agents, see Table 12-2.</i>			
Ventilator exterior including: • Housing • Power cables • Gas supply hoses • Mounting systems	After each patient use or as needed.	Wipe with a damp cloth using a registered and approved cleaning/disinfection solution.	Do not clean the ventilator interior to avoid damaging internal components.
Touch screen	After each patient use or as needed.	Wipe with a damp cloth using a registered and approved cleaning/disinfection solution or a nonabrasive glass cleaner.	• Lock the touch screen before cleaning. See Section 10.9. • Do not use any vinegar based solutions. • Avoid using a gritty cloth.
Trolley-related accessories including: • Trolley • Basket • O2 cylinder holding system	After each patient use or as needed.	Wipe with a damp cloth using a registered and approved cleaning/disinfection solution.	
Autoclavable expiratory valve	After each patient use or as needed.	Clean and sterilize according to the instructions in the <i>Expiratory Valve Reprocessing Guide</i> (PN 624591).	For details about assembly, installation, and disassembly of the expiratory valve, see Section 3.4.2.
CO2 sensors	After each patient use or as needed.	Wipe with a damp cloth using a registered and approved cleaning/disinfection solution (Table 12-3). Dry before use.	• Ensure that the module/sensor is disconnected and cooled to room temperature before cleaning. • Do not immerse the module/sensor in liquid.

Table 12-2. Cleaning/disinfection agents for the ventilator

Cleaning/disinfection agent	Concentration
EPA-registered cleaning/disinfection agents	
Sani-Cloth Active wipes	n/a
Approved cleaning/disinfection agents	
Mikrobac Tissues wipes	n/a
mikrozid sensitive wipes	n/a
mikrozid AF liquid	Ready for use
Bacillol 30 Foam	Ready for use
Ethanol	--
Incidin Foam	Ready for use
Incidin Pro	0.25% to 4%
Incidin Rapid	0.25% to 2%
Isopropyl alcohol	--
Mikrobac forte	0.25% to 4%
perform	3%
terralin protect	2%

Table 12-3. Cleaning/disinfection agents for CO2 sensors

Cleaning/disinfection agent	LoFlo (side-stream)	CAPNO-STAT 5 (main-stream)
EPA-registered cleaning/disinfection agents		
Steris Coverage ^s Spray	X	X
PDI Sani Cloth Bleach ^s		X
PDI Sani Cloth AF ^s		X
Approved cleaning/disinfection agents		
Ammonia	X	
2% glutaraldehyde solution	X	
Isopropyl alcohol 70%	X	X
A 10% aqueous solution of chlorine bleach	X	X
Clinell Wipes ^s		X
Speedy Clean ^s		X
Tuffie ^s		X
Tuffie 5 ^s		X
WIP Anios ^s		X

Table 12-4. Cleaning and disinfection methods for external devices

Device	Frequency	Remarks
IntelliCuff	After each patient use or as needed.	Refer to the <i>IntelliCuff Instructions for Use</i> .
HAMILTON-H900 humidifier	After each patient use or as needed.	Refer to the <i>HAMILTON-H900 Instructions for Use</i> .
Third-party humidifiers	After each patient use or as needed.	Refer to the humidifier <i>Instructions for Use</i> .
SpO2 sensors	After each patient use or as needed.	Refer to the <i>Pulse Oximetry Instructions for Use</i> and the sensor manufacturer's <i>Instructions for Use</i> .

12.3 Preventive maintenance

Perform preventive maintenance on your ventilator according to the schedule shown in Table 12-5.

The **System > Info** window shows the number of hours the ventilator has been in operation.

Table 12-5. Preventive maintenance schedule

Interval	Part/accessory	Procedure
Between patients and according to hospital policy	Breathing circuit (including mask, inspiratory or expiratory filter, flow sensor, nebulizer jar, expiratory valve set)	Replace with sterilized or new single-patient use parts and run the preoperational checks (Section 5.4).
	Entire ventilator	Run the preoperational checks (Section 5.4).
Every month (or more often if required)	Fan filters (rear panel), air intake filters (white filters on outside of HEPA filter)	Check for dust and lint. If needed, replace. See Section 12.4.1.
Every 6 months	Batteries	Recharge batteries by plugging the ventilator into a primary power source for at least 4 hours.
Yearly or as necessary	Galvanic O2 cell	Replace if depleted. See Section 12.4.2.
	Air intake HEPA filter	Replace. See Section 12.4.1.
	Ventilator	Perform service-related preventive maintenance. ³⁷
	CO2 sensor	If the CO2 option is installed, have a CO2 accuracy check performed. ³⁷

³⁷ Must be performed by Hamilton Medical authorized service personnel according to instructions in the *Service Manual*.


12.4 Performing maintenance tasks

The following sections describe how to clean and replace filters, batteries, and a galvanic O₂ cell.


12.4.1 Maintaining the filters

Figure 12-1 summarizes the steps to exchange the HEPA and fan filters in the back of the ventilator.


Figure 12-1. Removing and replacing air, fan, and HEPA filters

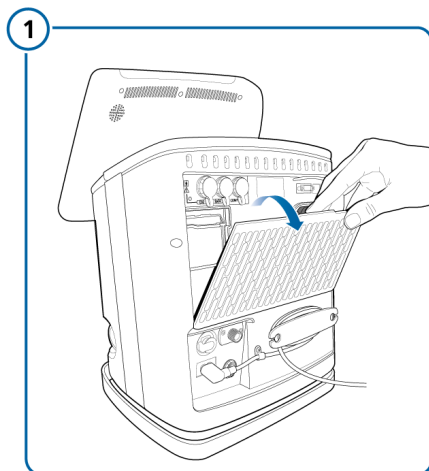

Remove back panel.

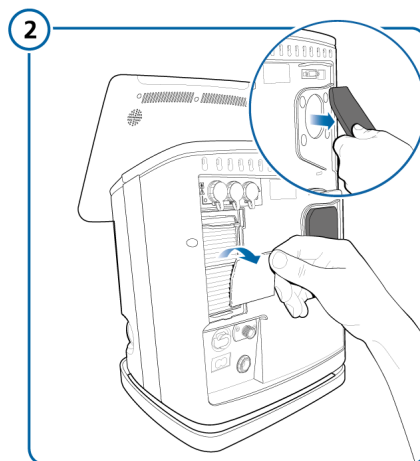

Remove and replace air/fan filters.

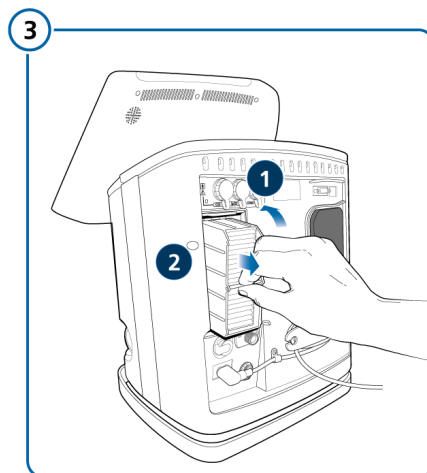


Release filter clip (1).
Remove and replace HEPA filter (2).

12.4.2 Replacing the galvanic O2 cell


Before proceeding, review the safety information in Chapter 1.

Figure 12-2 summarizes the steps to remove a galvanic O2 cell. To replace the cell, reverse the steps.


Figure 12-2. Replacing the O2 cell

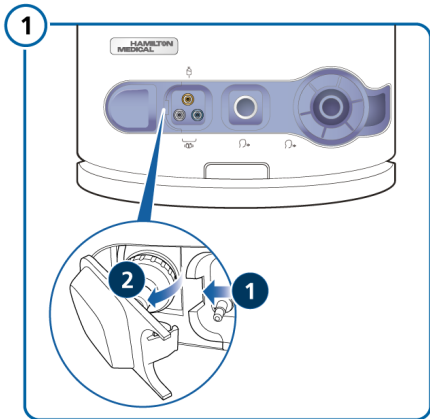

Push in latch (1) and remove cover (2).

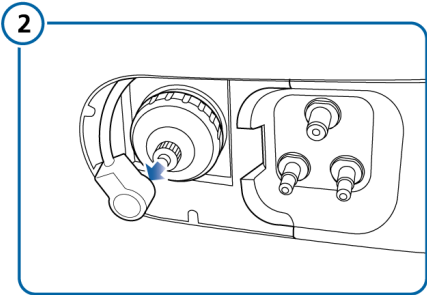

Unplug the connection cable.

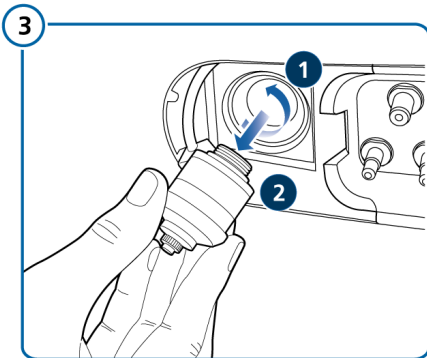

Unscrew cell counterclockwise (1) and remove (2).

12.4.3 Charging and storing batteries


To maintain the battery charge and to prolong the life of the battery, keep the ventilator connected to its primary power source.

Have the battery recharged every 6 months, depending on storage conditions. For details, see Section 15.4.


12.4.4 Replacing batteries

Figure 12-3 summarizes the steps to replace a battery.


Figure 12-3. Replacing the battery

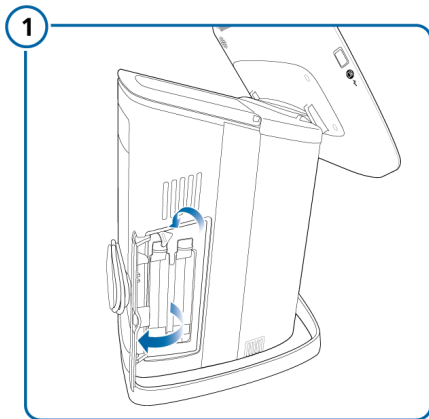


Open battery door.

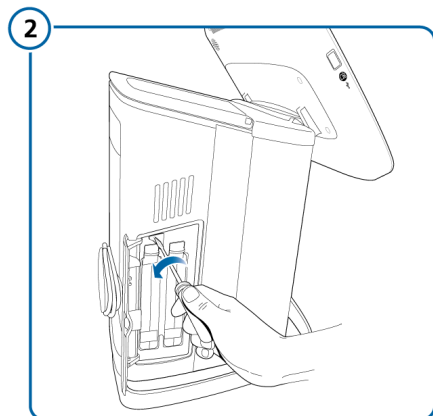

With screwdriver, open locking clip.

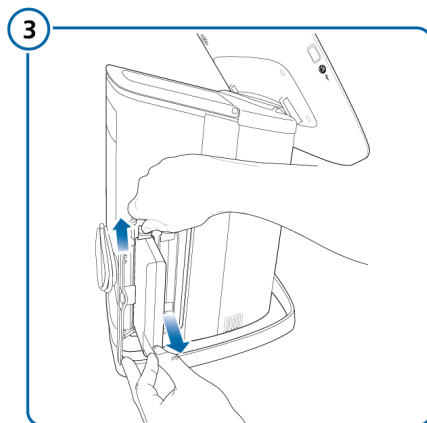

Pull up clip, exchange battery.

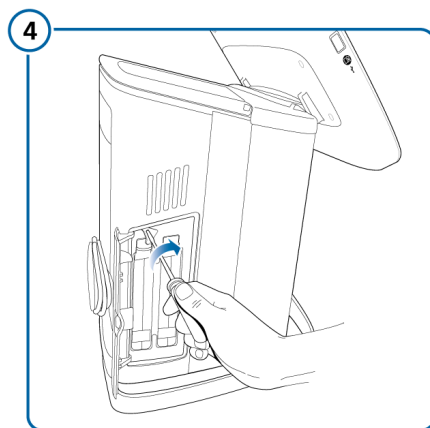

Close locking clip.

12.5 Repacking and shipping

CAUTION

Inform Hamilton Medical if you are shipping a contaminated (nonsterilized and nondisinfected) device for service.

If you must ship the ventilator, use the original packing materials. If these materials are not available, contact your Hamilton Medical representative for replacement materials.

13

Configuration

13.1	Overview.....	220
13.2	Accessing Configuration mode.....	220
13.3	Configuring general settings	220
13.4	Selecting mode options.....	221
13.5	Configuring MMPs.....	222
13.6	Defining Quick setups	222
13.7	Activating SpO2 and CO2 measurement	223
13.8	Copying configuration settings.....	223
13.9	Configuring device options	224

13.1 Overview

During configuration, you set up the ventilator with a default language, main monitoring parameter display, startup settings for a new patient, and units of measure, among other settings.

13.2 Accessing Configuration mode

You can access all Configuration mode settings when the ventilator is in **Standby**. Access requires a configuration code; contact your administrator.

To access Configuration mode

1. Touch **Tools > Configuration**.
2. Using the keys on the onscreen keypad, type the configuration code; then touch **Enter**.

The **Configuration** button is enabled.

3. Touch **Configuration**.

The **Configuration** window appears, displaying the **Language** window.

You can now define settings and add options.

13.3 Configuring general settings

You can configure some general default settings for the ventilator, including language, units of measure, communication interface to use, and minimum loudness for alarms.

13.3.1 Selecting the default language

To select the user interface language

- ▶ Touch **General > Language** and select the desired language.

13.3.2 Selecting the units of measure

To select the units of measure

- ▶ Touch **General > Units** and select the unit of measure for pressure, length, and CO₂.

13.3.3 Enabling the communication interface

You can connect external devices to the ventilator using the communication interface. For a list of the communication protocols, see Table 2-2.

To select the communication protocol

- ▶ Touch **General > More** and select the desired protocol for use, then restart the ventilator.

The ventilator must be restarted to establish communication using the selected protocol.

For setup and configuration details, see the *Communication Interface User Guide*, available on MyHamilton.

13.3.4 Setting the minimum alarm loudness (volume)

You can specify a minimum alarm loudness (volume) setting for the ventilator. Once set, the ventilator operator cannot set the alarm volume below the value set here in **Configuration**.

To set the minimum alarm loudness

1. Touch **General** > **More**.
2. Touch the **Min. loudness** button and choose the minimum alarm volume to allow on the device.

The setting is applied to the ventilator. Note that if the new minimum is greater than the currently set alarm volume, the alarm volume is reset to the new minimum level.

To verify the setting, check the **Loudness** value in the **System** > **Settings** window.

13.4 Selecting mode options

You can set the following:

- Mandatory breath timing philosophy to use for PCV+, APVcmv, (S)CMV, and SIMV modes
- Naming convention for volume-controlled, pressure-adaptive modes
- ASV version

13.4.1 Setting breath timing options

The ventilator controls mandatory breath timing using a combination of inspiratory time (TI) and **Rate**.

For the modes PCV+, APVcmv, (S)CMV, and SIMV, you can set the ventilator to use any of the following combinations to control breath timing: I:E/Pause, TI/Pause, or Peak flow/Tip

To change the breath timing selection

- ▶ In the **Modes** > **General** > **Philosophy** window, touch the desired breath timing option.

13.4.2 Choosing the mode naming convention

You can select the naming convention used for adaptive modes: *APVcmv* / *APVsimv* or *(S)CMV+* / *SIMV+*.

By default, *APVcmv/APVsimv* are used.

To select the mode naming convention

- ▶ In the **Modes** > **General** > **Philosophy** window, select the desired option.

13.4.3 Choosing the ASV version

By default, the device uses ASV version 1.1. For details about the different ASV versions, see Section 7.5.1.1.

To select the ASV version

- ▶ In the **Modes** > **General** > **Philosophy** window, select the desired version.

13.5 Configuring MMPs

You can specify which MMPs are displayed on the ventilator.

The list of entries in the **Configuration** window is shown in the same order as the MMPs appear on the main display.

Ppeak must always be displayed as an MMP, but you can choose where to display it. By default, it is shown as the top entry.

To select the MMPs to display

1. In **Configuration**, touch **Graphics**.
The MMP window opens.
2. In each dropdown list, select the desired parameter to show in that position in the MMP list on the main display.

13.6 Defining Quick setups

A *Quick setup* refers to a group of settings you define, including patient characteristics, mode selection and control settings, alarm limit settings, and weaning zone limits.

The settings saved with a *Quick setup* are automatically applied when the setup is selected in the **Standby** window.

For each patient group, you can configure up to three **Quick setups**, and can specify a setup to be selected by default when the ventilator is turned on.

13.6.1 Configuring individual setup settings

To configure a Quick setup

1. In **Standby** mode, configure the ventilator with the parameters you will save as a **Quick setup**.

Select:

- Patient group and sex/height (**Adult/Ped**) or weight (**Neonatal**)
- Ventilation mode
- Mode control settings
- Alarm limits

2. Touch **Start ventilation** and select the desired graphic layout and graphics to display. See Section 8.3.
3. Return to **Standby**.
4. Access **Configuration** mode.
5. In the **Configuration** window, touch **Setups**, and then touch the button (1, 2, or 3, or your custom-defined labels) for the setup to configure.

The **General setup configuration** window is displayed. Note that the buttons in the left panel now change to provide access to the setup options.

6. Touch **Rename setup** to give the setup a meaningful name.

You must define a name as it is used as the **Quick setup** button label in **Standby**, as well as in this **Configuration** window.

7. Select the configuration settings to apply to this setup by touching the appropriate button:
 - To apply the ventilator settings you selected in step 1, touch **Use current settings**.
 - To apply factory settings, touch **Use factory settings**.

8. Touch **Mode Ctrl** > **Controls** to review patient parameter settings.

Some parameters are not displayed, as they are based on weight:

- The following parameters are set based on ideal body weight (IBW) (Adult/Ped): Vt, Rate, T low, T high, and TI.

- The following parameters are set based on body weight (Neonatal): Vt, Rate, T low, T high, TI, and TI max.

9. Touch **Vt/IBW** (Adult/Ped) or **Vt/Weight** (Neonatal) to set the tidal volume per IBW or weight, respectively.

The ventilator uses the Vt/IBW or Vt/Weight setting in calculations for the following:

- To set the initial delivered Vt in volume-controlled modes
- To set the initial high and low alarm limits for Vt and ExpMinVol

10. Review the alarm settings in the **Alarms** window.
11. In **Vent Status**, set patient parameters manually.

The **Vent Status** window allows you to configure the weaning zone ranges shown in the **Vent Status** panel according to your institution's protocol.

12. Touch the **Back** button to return to the **Default setup** window.

Configuration of the **Quick setup** is complete.

13.6.2 Selecting a default Quick setup

A **Default setup** comprises a group of settings that are automatically loaded when turning on the ventilator.

After you have configured one or more **Quick setups**, select the default to use.

To set a Quick setup as the default

- In **Configuration**, touch **Setups** and select the setup to use as the default.

13.7 Activating SpO2 and CO2 measurement

To enable SpO2 and/or CO2 measurement on the ventilator, you must activate the associated hardware option in **Configuration**. See Section 13.9.3.

You must also enable each sensor in the **System** window. See Section 4.5.

13.8 Copying configuration settings

Before proceeding, review the safety information in Chapter 1.

You can copy the configuration settings to a USB drive and quickly transfer the settings to other HAMILTON-C3 devices. For details about configuration settings, ranges, and defaults, see Table 15.8.

If you remove the USB drive before the files are successfully transferred, you must start over and repeat the export.

To copy configuration settings to a memory device

1. Insert a USB drive into the USB port on the side of the ventilator monitor. See Figure 2-4.
2. In Configuration, touch **Transfer**.
3. In the Transfer window, touch **Import** or **Export** to transfer configuration data to or from a USB drive.

13.9 Configuring device options

Before use, you must enable any installed hardware options (for example, CO₂ and SpO₂), and add and enable software options.

13.9.1 Reviewing installed options

To view installed options

1. In Configuration, touch **Options**.
2. Touch **SW options** for software or **HW options** for hardware.
3. Scroll through the options to review, as needed.

13.9.2 Adding software options

Software options are added using license keys.

Trial versions of software options may be available. Trial options expire and are automatically deactivated after 30 days.

Have all required keys available before proceeding.

To add a software option

1. In Configuration, touch **Options**.
2. In the Options window, touch **SW options**.
3. Touch **Add options**.
4. Type the activation code exactly as provided into the field and touch **Enter**.
If the message *Option code invalid!* appears, re-enter the code.
The message *Option valid* indicates the code is correct and the option has been added.
5. Repeat until all desired software options are added.
6. Touch the **X** to close the window.
7. Restart the ventilator to enable the options.

Upon turning on the ventilator, the added options are available for use.

13.9.3 Activating hardware options

Communication board-related functions (CO₂, SpO₂) are activated at two levels:

- The hardware itself must be activated in configuration to make the functionality available to the user, described in this section.
- Sensors that plug into the hardware are individually enabled by the user, as needed, in the **System** window. See Chapter 4.

To activate hardware options in Configuration

1. Touch **Options**.
2. In the **Options** window, touch the **HW options** tab.
The window lists hardware that requires activation.
3. Select the checkbox for options to activate.
A checkmark indicates the option is activated.

Upon exiting **Configuration**, the activated hardware is available for use.

SpO2 and CO2 sensors require an additional step, and must also be enabled in the **System > Sensors** window.

13.9.4 Removing options

Note the following:

- Trial options are automatically removed at the end of the trial period.
- Selecting **Clear options** removes *all* non-trial options.
- The patient groups on the ventilator, **Adult/Ped** and **Neonatal**, are also treated as options. Clearing options removes them and the associated ventilation modes. You must re-add them before using the ventilator on a patient.

To remove software options

You can remove all non-trial software options from the ventilator.

1. In the **SW options** window, touch **Clear options**.
You are prompted to confirm deletion of all non-trial options. See the previous notes.
2. Touch **Clear options** to remove the options.
Touch **Cancel** to leave the options installed.
3. Restart the ventilator.
Once you restart the ventilator, all options (including patient groups) listed in the window are cleared.
4. To re-add the patient groups and any other desired options, re-enter **Configuration** mode.
5. Add software options (including the patient groups), as appropriate.

13.9.4.1 Deactivating hardware options

To deactivate hardware options

- In the **HW options** window, clear the checkboxes to deactivate the hardware.

14

Parts and accessories

14.1	Overview.....	228
------	---------------	-----

14.1 Overview

This chapter lists the parts available for the HAMILTON-C3 ventilator. Note that not all parts are available in all markets.

For additional parts and accessories and ordering information, refer to the e-catalog on the Hamilton Medical website or contact your Hamilton Medical representative.

Figure 14-1. Ventilator parts and accessories

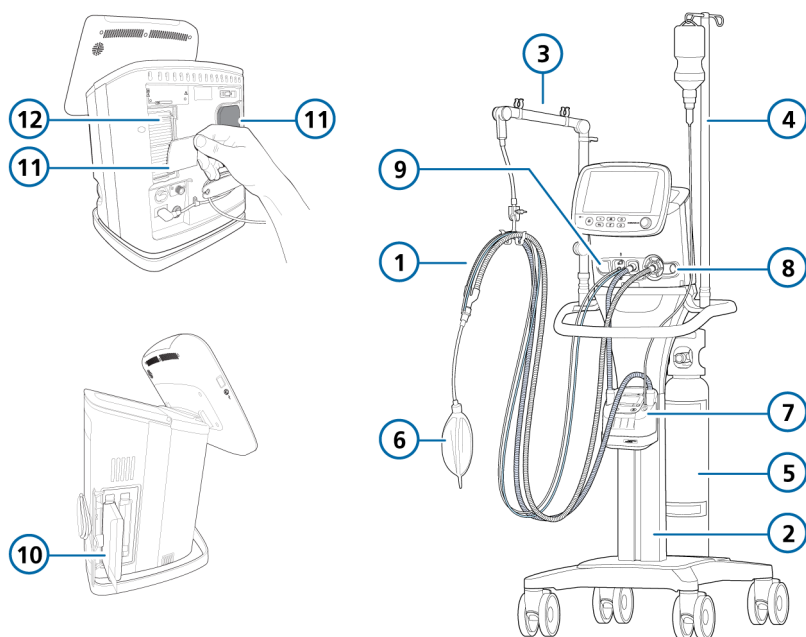


Table 14-1. Ventilator parts and accessories

Item no. (ref to Fig 14-1)	Description	PN
1	HAMILTON-H900 breathing circuit set, adult/pediatric	
	Breathing circuit set BC8022, dual limb, single use, preassembled, box of 15	260161
	Breathing circuit set BC8022-A, dual limb, preassembled, box of 1	260188
	Breathing circuit set BC4022, single limb, single use, preassembled, box of 15	260186
	HAMILTON-H900 breathing circuit set, neonatal	
	Breathing circuit set BC8010, dual limb, single use, preassembled, box of 15	260185
	Breathing circuit set BC8010-A, dual limb, autoclavable, pre-assembled, box of 1	260189
	Breathing circuit set BC4010, single limb, single use, preassembled, box of 15	260187
1	Breathing circuit set, coaxial, single use, adult/pediatric	
	Length 1.80 m, box of 20	260206
	Preassembled with flow sensor, length 1.80 m, box of 20	260207
	Length 2.40 m, box of 10	260239
	Preassembled with flow sensor, length 2.40 m, box of 10	260240
	Preassembled, with expiratory valve set and flow sensor, length 1.80 m, box of 20	260257
1	Breathing circuit sets, dual limb, single use, neonatal	
	With Y-piece, flow sensor, flow sensor calibration adapter, and pressure line with T-piece connectors, length 1.50 m, box of 20	260180
1	Breathing circuit sets, autoclavable <i>See the online Hamilton Medical e-catalog.</i>	

Item no. (ref to Fig 14-1)	Description	PN
1	Flow sensors, adult/pediatric	
	Flow sensor, single use, adult/pediatric, 1.88 m, box of 10	281637
	Flow sensor, single use, adult/pediatric, 2.60 m, box of 10	282049
	Flow sensor, autoclavable, adult/pediatric, 1.88 m, box of 1	950185
	Flow sensor calibration adapter, autoclavable, adult/pediatric, box of 10	282323
1	Flow sensors, neonatal	
	Flow sensor, single use, neonatal, 1.60 m, box of 10	260177
	Flow sensor, single use, neonatal, 1.88 m, box of 10	155500
	Flow sensor, single use, neonatal, 3.10 m, box of 10	260179
	Flow sensor calibration adapter, single use, neonatal, box of 10	279964
8	Expiratory valve	
	Expiratory valve set, autoclavable, box of 1	160245
	Membrane, expiratory valve, autoclavable, box of 5	160500
	Expiratory valve set, single use, box of 10	160176
<i>not shown</i>	Circuit adapter	
	Adult/Ped	160960
	Neonatal	160595
<i>not shown</i>	Nasal cannulas (adult/pediatric/neonatal) <i>See the Hamilton Medical e-catalog.</i>	
<i>not shown</i>	Masks and accessories, adult/pediatric <i>See the Hamilton Medical e-catalog.</i>	
<i>not shown</i>	Masks and accessories, neonatal	
	nCPAP-PS Starter kit, large (10 sets, incl. mask, prongs, and bonnets)	281975
	nCPAP-PS Starter kit, small (1 set, incl. mask, prongs, and bonnets)	282330

Item no. (ref to Fig 14-1)	Description	PN
<i>not shown</i>	CO2 mainstream measurement	
	HAMILTON CAPNOSTAT-5 CO2 sensor	281718
	CO2 mainstream airway adapter, single use, adult/pediatric, box of 10	281719
	CO2 mainstream airway adapter, single use, neonatal, box of 10	281720
	CO2 mainstream airway adapter, reusable, adult/pediatric, box of 1	281721
	CO2 mainstream airway adapter, reusable, neonatal, box of 1	281722
	OD15/ID15 adapter, single use, neonatal, box of 25	281803
<i>not shown</i>	CO2 sidestream measurement	
	HAMILTON LoFlo sidestream CO2 sensor	281928
	CO2 sidestream adapter, single use, adult/pediatric, box of 10	281929
	CO2 sidestream adapter, single use, adult/pediatric, box of 10	281931
	CO2 sidestream adapter, single use, neonatal/pediatric, box of 10	281930
	CO2 sidestream adapter, single use, neonatal, box of 10	281932
7	Humidifier	
	HAMILTON-H900 humidifier <i>See the Hamilton Medical e-catalog.</i>	
<i>not shown</i>	IntelliCuff	
	IntelliCuff cuff pressure controller <i>See the Hamilton Medical e-catalog.</i>	
2	Trolley	
	Trolley	160170
	Humidifier mount	160091
3	Tubing support arm, for use with quick lock	160153
	Quick lock mount	160154
4	Water bottle holder with quick lock (max. 1 kg per side)	160162
5	Oxygen cylinder holder	160090

Item no. (ref to Fig 14-1)	Description	PN
6	Demonstration lung	
	IntelliLung, maximum 1 liter	281869
	Demonstration lung assembly with endotracheal tube, adult, 2 liter, with OD15 connector	151815
	Demonstration lung assembly with endotracheal tube, 0.5 liter, with OD15/OD22 connector (pediatric)	151816
	Demonstration lung, neonatal, OD15 <i>A passive lung simulator with two independent compartments for simulating neonatal patients.</i>	R53353
11	Filter	
	Filter set <i>Includes 5 sets. Each set includes 2 air intake dust filters and a fan filter for each fan.</i>	160215
12	Filter, air intake (HEPA)	160216
<i>not shown</i>	Patient filter	
	HME filter (HMEF), single use, adult/pediatric	279963
	HME filter (HMEF), single use, adult/pediatric	279974
	Expiratory bacteria filter	279204
	Inspiratory bacteria filter	279211
<i>not shown</i>	Power cord	
	Power cord with US plug, 2-pin, 2.5 m	355198
	Power cord with British angled plug, 2.5 m	355199
	Power cord with continental European plug, 2-pin, 2.5 m	355200
	Power cord with Chinese plug, 2-pin, 2.5 m	355308
9	Oxygen cell	
	Galvanic O2 cell	396200
<i>not shown</i>	DC input cables	
	Car adapter for HAMILTON-C3	160187

Item no. (ref to Fig 14-1)	Description	PN
not shown	Communication	
	Extended communication board SpO2, CO2, Nurse call	160140
	Cable, Nurse Call	160166
	Cable, RS-232 serial connector, 2.5 m (8.2 ft) <i>Shielded on male (ventilator) side only.</i>	160366
10	Battery	
	Li-Ion battery	369106
	Battery charger/calibrator	369104
not shown	High-pressure oxygen connector	
	DISS – diameter index safety standard	160470
	NIST – no interchangeable screw thread	160471
not shown	Gas supply hoses and parts	
	Coupling insert for low pressure O2 inlet, 4.8 mm	279913
not shown	Equipotential grounding cable	
	Equipotential cable, POAG EU	160374
	Equipotential cable, USA	160577
not shown	SpO2 sensors and accessories (Masimo) <i>See the Hamilton Medical e-catalog.</i>	
	SpO2 sensors and accessories (Nihon Kohden) <i>See the Hamilton Medical e-catalog.</i>	
not shown	Nebulizer and accessories <i>See the Hamilton Medical e-catalog.</i>	
not shown	Tools and test equipment <i>See the Hamilton Medical e-catalog.</i>	
	Ventilator hardware and mounting options	
	Universal bed mount kit	160148
	Quick-lock mounting plate	160466

Item no. (ref to Fig 14-1)	Description	PN
	Language kit	
	English	160033
	US-English	10105011
	German	160034
	Spanish	160035
	French	160036
	Italian	160037
	Russian	160040
	Chinese	160041
	Portuguese	160042
	Extended warranty	
	Extended warranty of 1 year	700703
	Extended warranty of 2 years	700704
	Extended warranty of 3 years	700705

15

Specifications


15.1	Physical characteristics.....	236
15.2	Environmental requirements.....	237
15.3	Pneumatic specifications	238
15.4	Electrical specifications	239
15.5	Control settings	241
15.6	Monitored parameters	247
15.7	Alarms	254
15.8	Configuration	257
15.9	ASV technical data	259
15.10	Ventilator breathing system specifications	261
15.11	Technical performance data	262
15.12	Functional description of ventilator system	267
15.13	Symbols used on device labels and packaging	271
15.14	Standards and approvals	273
15.15	Disposal and year of manufacture	274
15.16	Warranty.....	275

15.1 Physical characteristics

Table 15-1. Physical characteristics

Dimension	Specifications
Weight	Ventilation unit: 9.5 kg (21 lb) Ventilation unit with standard trolley: 37 kg (81.6 lb) The trolley can accommodate a maximum safe working load of 80 kg (176 lb). ³⁸
Dimensions	See Figure 15-1.

Figure 15-1. HAMILTON-C3 dimensions

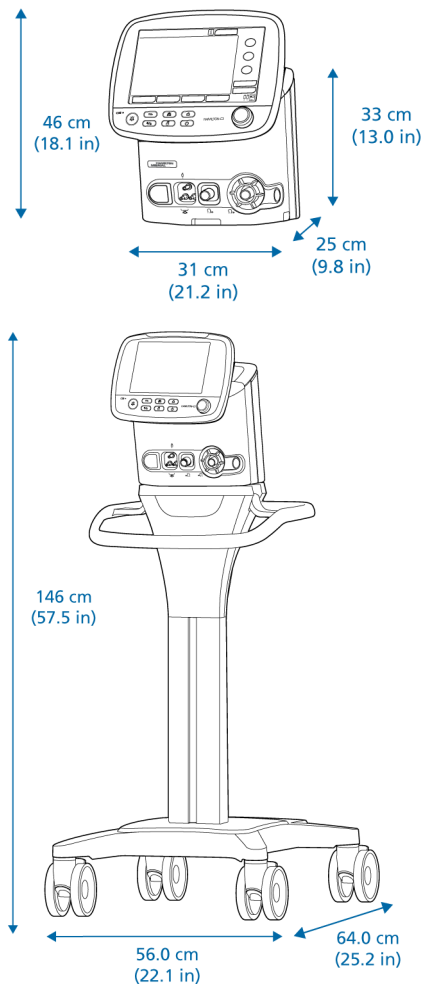

³⁸ The maximum safe working load applies to a stationary, properly load-balanced trolley.

15.2 Environmental requirements

Table 15-2. Environmental requirements

Environment		Specifications
Temperature	Operation: ³⁹	5°C to 40°C (41°F to 104°F)
	Shipment/storage:	-20°C to 60°C (-4°F to 140°F), in original packaging
Altitude		-650 to 4000 m (-2,132 to 13,123 ft) Note that at higher altitudes the ventilator performance may be limited. The Performance limited by high altitude alarm is generated and a message is shown on the display. See Table 9-2.
Atmospheric pressure	Operation ³⁹ , shipment, and storage:	620 to 1100 hPa
Relative humidity	Operation ³⁹ , shipment, and storage:	10% to 95%, noncondensing
Water protection		IP22
For specifications related to any external devices and sensors, refer to the manufacturer's <i>Instructions for Use</i> .		
For specifications related to the mainstream and sidestream CO2 sensor, see Section 15.11.		

³⁹ The stated operating conditions apply to operation of the ventilator within the limitations specified in the Intended use.

15.3 Pneumatic specifications

Table 15-3. Pneumatic specifications

Component	Specifications	
High-pressure oxygen inlet ⁴⁰	Pressure:	2.8 to 6 bar / 41 to 87 psi
	Flow:	Maximum of 200 l/min
	Connector:	DISS (CGA 1240) or NIST
Low-pressure oxygen inlet ⁴⁰	Peak pressure:	Maximum 6 bar / 87 psi
	Flow:	≤ 15 l/min
	Connector:	Quick-coupling system, compatible with Colder Products Company (CPC) PMC series
Air supply	Integrated blower	
Gas mixing system	Delivered flow:	• > 240 l/min ±10% against ambient pressure (at sea level) • > 150 l/min with 100% oxygen
	Delivered pressure:	0 to 60 cmH2O
	Flow accuracy:	±10% or ±300 ml/min (whichever is greater)
Inspiratory outlet (To patient port)	Connector:	ISO ID15/OD22 conical
Expiratory outlet (From patient port)	Connector (on expiratory valve):	ISO ID15/OD22 conical

⁴⁰ Measurement expressed in STPD (standard temperature and pressure, dry).

15.4 Electrical specifications

Table 15-4. Electrical specifications

Element	Specifications
Input power	100 to 240 VAC $\pm 10\%$, 50/60 Hz 12 to 24 VDC ^{41, 42} , $\pm 10\%$
Power consumption	50 VA typical, 150 VA maximum
Battery	Hamilton Medical provides a high-capacity ⁴³ battery. An optional second battery is available.
	Electrical specifications: 14.4 V DC, 6.8 Ah, 98 Wh ⁴³
	Type: Lithium-ion, supplied by Hamilton Medical only
	Recharge time: While ventilator is connected to primary power, approximately 2.25 h to fully recharge one battery, approximately 4.5 h to fully recharge two batteries. At temperatures over 43°C, the charge time is doubled (a minimum of 5 hours to charge one battery, 10 hours to charge two).
	Storage: -20°C to 50°C, $\leq 95\%$ relative humidity. The storage location should be free from vibration, dust, direct sunlight, moisture, and corrosive gases, and with a recommended temperature range $< 21^\circ\text{C}$. Extended exposure to temperatures above 45°C can degrade battery performance and life.

⁴¹ Batteries are charged when power is > 20 VDC. Only use of the Hamilton Medical DC adapter ensures that the internal batteries are charged.

⁴² When the voltage exceeds 27.5 VDC, the device automatically switches to battery power, and continues ventilation as set.

⁴³ Battery revision 3 and later.

Element	Specifications
Battery	Normal operating time: Approximately 2.4 hours with one battery, 5 hours with two batteries. Operating times⁴⁴ are measured with one or two fully charged batteries, the blower in use, without communication board, and with the following settings: Mode = PCV+, Rate = 10 b/min, Pcontrol = 10 cmH2O, I:E = 1:4, PEEP = 5 cmH2O, Flow trigger = 5 l/min, FiO2 = 40%. Approximate operating times under these conditions are as follows: • One battery, display brightness = 80%: 2.4 h • One battery, display brightness = 20%: 3 h • Two batteries, display brightness = 80%: 5 h • Two batteries, display brightness = 20%: 6 h This operating time applies to new, fully charged Li-ion batteries that have not been exposed to extreme temperatures. The actual operating time depends on battery age and on how the battery is used and recharged. To ensure maximum battery life, maintain a full charge and minimize the number of complete discharges.

⁴⁴ The listed operating times and conditions apply to batteries revision 3 and later. For earlier battery revisions, the following specifications apply: Operating time with one battery in use (with turbine in use and the following settings: C = 15 ml/cmH2O, Rate = 10 b/min, Pinsp = 10 cmH2O, PEEP = 5 cmH2O): 2.5 h minimum, 3 h typical.

15.5 Control settings

Table 15-5. Control settings, ranges, and accuracy

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
%MinVol ⁴⁶ (%)	25 to 350	--	100	--	--
Apnea backup	On, Off	On, Off	On	On	--
End PEEP (cmH ₂ O)	0 to 35	0 to 35	Startup setting = PEEP	Startup setting = PEEP	--
ETS ^{47, 48} (%)	5 to 80	5 to 80	25 <i>In noninvasive modes: 35</i>	25 <i>In noninvasive modes: 35</i>	--
Flow Pattern ⁴⁹	Square, 50% decelerating, Sine, 100% decelerating	--	50% decelerating	--	--
Flow ⁵⁰ (l/min)	2 to 60	2 to 12	15	2	±10% or ±1 l/min, whichever is greater
I:E ⁵¹	1:9 to 4:1	1:9 to 4:1	1:4	1:3	
IBW ⁵² (kg)	3 to 139	--	70	--	--

⁴⁵ The stated accuracy includes the tolerance interval for each measurement.

⁴⁶ Only in ASV mode.

⁴⁷ Expiratory trigger sensitivity, in % of inspiratory peak flow.

⁴⁸ When selecting a noninvasive mode, the device uses the ETS value used in the previous mode, if available. If the previous mode did not use ETS, the device sets ETS to default values.

⁴⁹ Parameter depends on selected ventilation timing philosophy, set in Configuration.

⁵⁰ Only when using HiFlowO2.

⁵¹ In PCV+, (S)CMV, SIMV, and APVcmv modes, mandatory breath timing can be controlled by using a combination of inspiratory time (TI) and Rate, or by the I:E ratio; set the method in Configuration. All other modes are controlled by using a combination of inspiratory time (TI) and Rate.

⁵² IBW is calculated using height and sex, and is used for adult and pediatric patients. Actual body weight is used for neonates.

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
Oxygen (%)	21 to 100	21 to 100	50	40	± (volume fraction of 2.5% + 2.5% gas level)
P high (cmH ₂ O) <i>in APRV</i>	0 to 60	0 to 60	20	20	±5% or ±1 cmH ₂ O, whichever is greater
P high (cmH ₂ O) <i>in DuoPAP</i>	0 to 60	0 to 60	20	20	±5% or ±1 cmH ₂ O, whichever is greater
P low (cmH ₂ O) <i>in APRV</i>	0 to 35	0 to 25	5	5	±5% or ±1 cmH ₂ O, whichever is greater
Pasvlimit ⁴⁶ (cmH ₂ O)	5 to 60	--	30	--	±5% or ±1 cmH ₂ O, whichever is greater
Pat. height (cm) (in)	30 to 250 12 to 98	-- --	174 69	-- --	-- --
Pause ⁵³ (%)	0 to 70	--	0	--	--
Pcontrol ⁵⁴ (cmH ₂ O)	5 to 60	3 to 60	15 startup setting = PEEP + 15	15 startup setting = PEEP + 15	±5% or ±1 cmH ₂ O, whichever is greater
Peak flow ⁵⁵ (l/min)	1 to 195	--	60	--	--

⁵³ Limited to 25% of TI.⁵⁴ Control pressure, added to PEEP/CPAP.⁵⁵ Limitation changes based on flow pattern and Vt.

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
PEEP/CPAP (cmH ₂ O)	0 to 35	0 to 25	5	5	±5% or ±1 cmH ₂ O, whichever is greater
P _{insp} ⁵⁶ (cmH ₂ O)	3 to 60	3 to 60 nCPAP-PS: 0 to 60	15	15	±5% or ±1 cmH ₂ O, whichever is greater
P-ramp ⁵⁷ (ms)	0 to 2000 ASV, NIV, NIV-ST, SPONT, SIMV: max = 200	0 to 600 NIV, NIV-ST, SPONT, nCPAP-PS: max = 200	100	50	±10
P _{start} (cmH ₂ O)	0 to 35	0 to 35	startup setting = PEEP	startup setting = PEEP	--
P _{support} ⁵⁸ (cmH ₂ O)	0 to 60	0 to 60	15	15	±5% or ±1 cmH ₂ O, whichever is greater
P _{top} (cmH ₂ O)	25 to 60	25 to 60	35	35	--
Ramp speed (cmH ₂ O/s)	2 to 5	2 to 5	3	3	--

⁵⁶ Inspiratory pressure, added to PEEP/CPAP.

⁵⁷ P-ramp is limited to one-third (1/3) of TI time. Adjustment of TI time can override the P-ramp setting.

⁵⁸ Pressure support, added to PEEP/CPAP.

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
Rate ⁵⁹ (b/min)	1 to 80 APVcmv, PCV+, (S)CMV: 4 to 80 PSIMV+, NIV- ST: 5 to 80	1 to 150 nCPAP-PS: 5 to 150 APVcmv, PCV+, PSIMV+, PSIMV+Psync, NIV-ST, APVsimv + Apnea Backup: 15 to 150	38 (3.0 to 5.8 IBW) 32 (5.9 to 8.0 IBW) 25 (8.1 to 20.0 IBW) 19 (20.1 to 29.9 IBW) 17 (30 to 39 IBW) 15 (40 to 59 IBW) 12 (60 to 139 IBW)	60 (0.2 to 1.25 kg) 45 (1.26 to 3.0 kg) 35 (3.1 to 5.9 kg) 30 (6.0 to 8.9 kg) 25 (9.0 to 20.5 kg) 20 (21 to 30 kg)	Adult/Ped: ±1 Neo: ±1 (< 100) ±3 (≥ 100)
Sex	Male, Female	--	Male	--	--
Sigh ⁶⁰	On, Off	--	Off	--	--
T high ⁵⁹ (s) in APRV	0.1 to 40	0.1 to 40	Based on rate (IBW)	Based on rate (Weight)	±0.01
T high ⁵⁹ (s) in DuoPAP	0.1 to 40	0.1 to 40	Based on rate (IBW)	Based on rate (Weight)	±0.01
T low (s) in APRV	0.2 to 40	0.2 to 40	Based on rate (IBW)	Based on rate (Weight)	±0.01
Ti max ⁶¹ (s)	1.0 to 3	0.25 to 3	1.5	1.0 (≤ 10 kg) 1.5 (> 10 kg)	±0.1
Ti ^{51, 59, 62} (s)	0.1 to 12	0.1 to 12	Based on rate (IBW)	Based on rate (Weight)	±0.01
Tip ⁶³ (s)	0 to 8	--	0	--	--
Tpause (s)	0 to 30	0 to 30	0	0	--

⁵⁹ Startup setting derived from IBW (adult/pediatric), body weight setting (neonatal). Does not apply in ASV mode.

⁶⁰ Sigh is disabled in DuoPAP and APRV modes, when using HiFlowO2, and for neonates.

⁶¹ Maximum inspiratory time for spontaneous breaths during noninvasive ventilation.

⁶² Inspiratory time; used with Rate to set the breath cycle time.

⁶³ Applicable only when the Peak flow - Tip breath timing option is selected.

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
TRC Compensation level ⁶⁴ (%)	0 to 100	0 to 100	80	80	--
TRC Expiration	On, Off	On, Off	On	On	--
TRC Tube size (mm)	3 to 10	2.5 to 5	7	3.5	--
TRC Tube type	ET tube, Trach tube, Disable TRC	ET tube, Trach tube, Disable TRC	Disable TRC	Disable TRC	--
Trigger, flow ⁶⁵ (l/min)	1.0 to 20 APVcmv, (S)CMV, PCV+: 1 to 20 / Off	0.1 to 5 APVcmv, PCV +: 0.1 to 5.0 / Off	5	0.5	±10%
Trigger, inspiratory	Flow trigger, Pressure trigger	Flow trigger	Flow trigger	Flow trigger	--
Trigger, pressure (cmH ₂ O)	-0.1 to -15 APVcmv, (S)CMV, PCV+: -0.1 to -15.0 / Off	-0.1 to -15 APVcmv, PCV+: -0.1 to -15.0 / Off	-2	-1	±10%
Vt/IBW ⁶⁶ Vt/Weight ⁶⁶ (ml/kg)	5 to 12	5 to 12	8	5	--

⁶⁴ Set to 0% to have Ptrachea displayed without compensation.

⁶⁵ Flow trigger is leak compensated.

⁶⁶ Set in configuration. IBW is calculated using height and sex, and is used for adult and pediatric patients. Actual body weight is used for neonates.

Parameter or setting (unit)	Range: Adult/Ped	Range: Neonatal	Default settings: Adult/Ped	Default settings: Neonatal	Accuracy ⁴⁵
Vt ⁵⁹ (ml)	20 to 2000	2 to 300	Based on IBW	Based on Weight	Adult/Ped: ±10% or ±10 ml, whichever is greater Neo: ±10% or ±2 ml, whichever is greater
Weight (kg)	--	0.2 to 30	--	2.0	--

15.6 Monitored parameters

Table 15-6 provides monitored parameter details. Tables 15-7 and 15-8 list the ranges of the real-time curves and loops.

Pressure, flow, and volume measurements are based on readings from the flow sensor, and are expressed in BTPS (body temperature and pressure saturated).

The monitored parameters displayed on the ventilator are rounded to the nearest whole number, when required. Waveforms displayed on the ventilator are not filtered and represent the actual monitored values.

Table 15-6. Monitored parameters, ranges, and accuracy

Parameter (units)	Range: Adult/Ped	Range: Neonatal	Accuracy ⁶⁷
Pressure			
AutoPEEP (cmH ₂ O)	0 to 80	0 to 80	±2 cmH ₂ O + 4% of the actual reading
PEEP/CPAP (cmH ₂ O)	0 to 80	0 to 80	±2 cmH ₂ O + 4% of the actual reading
Pinsp ⁶⁸ (cmH ₂ O)	0 to 80	--	±2 cmH ₂ O + 4% of the actual reading
Pmean (cmH ₂ O)	0 to 80	0 to 80	±2 cmH ₂ O + 4% of the actual reading
Ppeak (cmH ₂ O)	0 to 80	0 to 80	±2 cmH ₂ O + 4% of the actual reading
Pplateau (cmH ₂ O)	0 to 80	0 to 80	±2 cmH ₂ O + 4% of the actual reading
Flow			
Insp Flow (peak) (l/min)	0 to 260	0 to 260	Adult/Ped: ±10% or ±20 ml/s, whichever is greater Neo: ±10% or ±2 ml/s, whichever is greater

⁶⁷ The stated accuracy includes the tolerance interval for each measurement, except for measurements displayed from external sensors (CO₂). See Section 15.11.1 for details.

⁶⁸ Inspiratory pressure displayed in the Vent Status panel.

Parameter (units)	Range: Adult/Ped	Range: Neonatal	Accuracy ⁶⁷
Exp Flow (peak) ⁶⁹ (l/min)	0 to 260	0 to 260	Adult/Ped: ±10% or ±20 ml/s, whichever is greater Neo: ±10% or ±2 ml/s, whichever is greater
Control Flow ⁷⁰ (l/min)	2 to 60	2 to 12	--
Volume			
ExpMinVol ⁷¹ MinVol NIV ⁷² (l/min)	0 to 99.9	0 to 99.9	±10% or ±0.3 l/min, whichever is greater
MVSpont ⁷¹ MVSpont NIV ⁷² (l/min)	0 to 99.9	0 to 99.9	±10% or ±0.3 l/min, whichever is greater
VTE ⁷¹ VTE NIV ⁷² (ml)	0 to 9000	0 to 9000	Adult/Ped: ±10% or ±10 ml, whichever is greater Neo: ±10% or ±2 ml, whichever is greater
VTESpont (ml)	0 to 9000	0 to 9000	±10% or ±10 ml, whichever is greater
VTI (ml)	0 to 9000	0 to 9000	Adult/Ped: ±10% or ±10 ml, whichever is greater Neo: ±10% or ±2 ml, whichever is greater
Vt/IBW (ml/kg)	2 to 20	--	--
Vt/Weight (ml/kg)	--	2 to 20	--

⁶⁹ Not available in HiFlowO2.⁷⁰ Only in HiFlowO2.⁷¹ Only for invasive modes.⁷² NIV is used with noninvasive modes.

Parameter (units)	Range: Adult/Ped	Range: Neonatal	Accuracy ⁶⁷
VLeak (%)	0 to 100	0 to 100	±10% (VLeak > 100 ml and < 2000 ml)
MVLeak (l/min)	0 to 99.9	0 to 99.9	±10% or ±0.3 l/min whichever is greater
Time			
I:E	9.9:1 to 1:99	9.9:1 to 1:99	--
fControl (b/min)	0 to 999	0 to 999	±1 b/min
fSpont (b/min)	0 to 999	0 to 999	±1 b/min
fTotal (b/min)	0 to 999	0 to 999	±1 b/min
TI (s)	0 to 60	0 to 60	±100 ms
TE (s)	0 to 60	0 to 60	±100 ms
Pause (s)	0 to 60	0 to 60	--
Other calculated and displayed parameters			
Cstat (ml/cmH ₂ O)	0 to 300	0 to 300	--
Oxygen (%)	18 to 105	18 to 105	± (volume fraction of 2.5% + 2.5% gas level)
P0.1 (cmH ₂ O)	-99 to 0	-99 to 0	--
PTP (cmH ₂ O*s)	0 to 99	0 to 99	--
RCexp ⁷³ (s)	0 to 99.9	0 to 99.9	--
Rinsp (cmH ₂ O / (l/s))	0 to 999	0 to 999	--
RSB (1 / (l*min))	0 to 400	0 to 400	--

⁷³ Least square fit method.

Parameter (units)	Range: Adult/Ped	Range: Neonatal	Accuracy ⁶⁷
Ventilation counter (days/hours/minutes)	0 to 999	0 to 999	--
CO2 related⁷⁴			
FetCO2 (%)	0 to 20	0 to 20	CO2 (BTPS): 0 to 40 mmHg: ± 2 mmHg 41 to 70 mmHg: $\pm 5\%$ of reading 71 to 100 mmHg: $\pm 8\%$ of reading 101 to 150 mmHg: $\pm 10\%$ of reading For sidestream CO2 sensor above 80 b/min: $\pm 12\%$ of reading
PetCO2 ⁷⁵ (mmHg)	0 to 150	0 to 150	
slopeCO2 ⁷⁶ (%CO2/l)	0 to 99.9	0 to 99.9	--
Vtalv ⁷⁶ (ml)	0 to 9999	0 to 9999	--
V'alv ⁷⁶ (l/min)	0 to 20	0 to 20	--
V'CO2 ⁷⁶ (ml/min)	50 to 9999	50 to 9999	--
VDaw ⁷⁶ (ml)	0 to 999	0 to 999	--
VDaw/VTE ⁷⁶ (%)	0 to 100	0 to 100	--
VeCO2 ⁷⁶ (ml)	0 to 999	0 to 999	--
ViCO2 ⁷⁶ (ml)	0 to 999	0 to 999	--

⁷⁴ Only available if the CO2 communication board is installed and the CO2 sensor is enabled.

⁷⁵ If the PetCO2 value falls below 10 mmHg, the display shows dashes (---).

⁷⁶ Only for mainstream CO2.

Parameter (units)	Range: Adult/Ped	Range: Neonatal	Accuracy ⁶⁷
P/V Tool Pro related			
Pressure at cursors (cmH ₂ O)	0 to 99	0 to 99	--
Volume at cursors (ml)	0 to 9999	0 to 9999	--
Volume difference at cursors (ml)	0 to 9999	0 to 9999	--
Flow at cursors (l/min)	-300 to 300	-300 to 300	--
Compliance at cursors (ml/cmH ₂ O)	0 to 999	0 to 999	--
P _{top} (cmH ₂ O)	0 to 99	0 to 99	--
T _{maneuver} (s)	0 to 99	0 to 99	--
Lower inflection point (cmH ₂ O)	0 to 99	0 to 99	--
Upper inflection point (cmH ₂ O)	0 to 99	0 to 99	--
Point of derecruitment (cmH ₂ O)	0 to 99	0 to 99	--
V _{peep} (ml)	0 to 9999	0 to 9999	--

Table 15-7. Real-time waveforms

Parameter	Range	Y-axis scale
<i>All waveforms show time, in seconds, on the x-axis. Full-screen waveforms: 7, 14, 21, 28, 56; Half-screen waveforms: 3.5, 7, 14, 21, 28</i>		
Volume ⁷⁷ (V) (ml) / time (s)	0 to 3200	0 to 5, 0 to 10, 0 to 25, 0 to 50 (<i>Neonatal default</i>), 0 to 100, 0 to 200, 0 to 400, 0 to 800 (<i>Adult/Ped default</i>), 0 to 1600, 0 to 3200
Flow ⁷⁷ (l/min) / time (s)	-300 to 300	±2.5, ±5, ±10 (<i>Neonatal default</i>), ±15, ±25, ±45, ±75 (<i>Adult/Ped default</i>), ±150, ±300
Airway pressure (Paw) (cmH2O) / time (s)	-10 to 80	-10 to 20, -10 to 40 (<i>default</i>), -10 to 80
FCO2 ⁷⁸ (%) / time (s)	0 to 10	0 to 6 (<i>default</i>), 0 to 10
PCO2 ⁷⁸ (mmHg) / time (s)	0 to 100	0 to 60 (<i>default</i>), 0 to 100
Ptrachea ⁷⁹ (cmH2O) / time (s)	-10 to 100	-10 to 20, -10 to 40, -10 to 80, -10 to 100

⁷⁷ Scaled automatically. Not leak compensated.

⁷⁸ Available with CO2 option.

⁷⁹ Scaled automatically. Shown together with the pressure/time waveform in the same window (different color waveform). Only active when TRC is enabled.

Table 15-8. Real-time graphics and loops

Parameter	X-axis scale	Y-axis scale
ASV graphs		
ASV target graphics: Vt/Rate x-axis: l/min y-axis: ml	0 to 60	0 to 5, 0 to 10, 0 to 25, 0 to 50, 0 to 100, 0 to 200, 0 to 400, 0 to 800 (<i>default</i>), 0 to 1600, 0 to 3200
Loops		
Pressure/Volume x-axis: cmH2O y-axis: ml	-10 to 80	0 to 3200
Volume/Flow x-axis: ml y-axis: l/min	0 to 3200	-300 to 300
Pressure/Flow x-axis: cmH2O y-axis: l/min	-10 to 80	-300 to 300
Volume/PCO ₂ ⁸⁰ x-axis: ml y-axis: mmHg	0 to 3200	0 to 100
Volume/FCO ₂ ⁸⁰ x-axis: ml y-axis: %	0 to 3200	0 to 10

⁸⁰ Available with CO₂ option.

15.7 Alarms

Table 15-9. Adjustable alarm priority, range, defaults, and resolution

Alarm (units)	Priority	Range: Adult/Ped	Range: Neo	Default: Adult/ Ped	Default: Neo	Resolution
Apnea time (s)	High	15 to 60	5 to 60 nCPAP- PS: 5 to 60 / Off	20	15	<i>Adult/Ped:</i> 5 <i>Neonatal:</i> 1 (< 15) 5 (≥ 15)
ExpMinVol (high) ⁸¹ (l/min)	High	0.1 to 50 NIV, NIV-ST: 0.1 to 50 / Off	0.03 to 10 / Off	Based on Rate and Vt 1.5 * Rate * Vt	Based on Rate and Vt 1.5 * Rate * Vt	<i>Adult/Ped:</i> 0.1 (< 1) 0.5 (≥ 1) 1 (≥ 10) <i>Neonatal:</i> 0.01 (< 1) 0.1 (≥ 1)
ExpMinVol (low) ⁸¹ (l/min)	High	0.1 to 50 NIV, NIV-ST: Off / 0.1 to 50	Off / 0.01 to 10	Based on Rate and Vt 0.6 * Rate * Vt	Based on Rate and Vt 0.6 * Rate * Vt	<i>Adult/Ped:</i> 0.1 (< 1) 0.5 (≥ 1) 2 (≥ 10) <i>Neonatal:</i> 0.01 (< 1) 0.1 (≥ 1)
fTotal (high) (b/min)	Medium	0 to 99	2 to 210	40	70	1
fTotal (low) (b/min)	Medium	0 to 99	0 to 200	0	0	1

⁸¹ Startup setting derived from IBW (adult/pediatric), body weight setting (neonatal). Does not apply in ASV mode.

⁸² Active only when O2 monitoring is enabled.

⁸³ The high and low oxygen alarm limits are automatically set in relation to the current oxygen setting: O2 setting + 5 (high Oxygen limit) and O2 setting - 5 (low Oxygen limit). For example, if the Oxygen setting is 70%, the high Oxygen limit is set to 75 and the low limit is set to 65.

Alarm (units)	Priority	Range: Adult/Ped	Range: Neo	Default: Adult/ Ped	Default: Neo	Resolution
Oxygen (high) ^{82,83} (%)	High	18 to 105	18 to 105	55	55	1
Oxygen (low) ^{82,83} (%)	High	18 to 97	18 to 97	45	45	1
PetCO2 (high) ⁸⁴ (mmHg)	Medium	1 to 100	1 to 100	60	60	1
PetCO2 (low) ⁸⁴ (mmHg)	Medium	Off / 0 to 100	Off / 0 to 100	30	30	1
Pressure (high) (Pmax) (cmH2O)	High	15 to 70	15 to 70	40	40	1
Pressure (low) (cmH2O)	High	4 to 60	4 to 60 nCPAP- PS: 2 to 60	PEEP	PEEP nCPAP- PS: 5	1
Pressure limitation ⁸⁵ (cmH2O)	Medium, Low after silence	5 to 60	5 to 60	Pmax -10	Pmax -10	1

⁸⁴ CO2 option required.

⁸⁵ Can also be adjusted using Psvlimit. Pressure limitation is always 10 cmH2O below the pressure high limit.

⁸⁶ In ASV mode, this alarm only applies for spontaneous breaths.

Alarm (units)	Priority	Range: Adult/Ped	Range: Neo	Default: Adult/ Ped	Default: Neo	Resolution
Vt (high) ⁸⁶ (ml)	Medium	10 to 3000 / Off	0.1 to 300 / Off	Vt is based on IBW 1.5 * Vt	Vt is based on Weight 1.5 * Vt	<i>Adult/Ped:</i> 5 (< 100) 10 (< 500) 50 (≥ 500) <i>Neonatal:</i> 0.1 (< 10) 1 (≥ 10) 5 (≥ 100)
Vt (low) ⁸⁶ (ml)	Medium	Off / 10 to 3000	Off / 0.1 to 300	Vt is based on IBW 0.5 * Vt	Vt is based on Weight 0.5 * Vt	<i>Adult/Ped:</i> 5 (< 100) 10 (< 500) 50 (≥ 500) <i>Neonatal:</i> 0.1 (< 10) 2 (≥ 10) 6 (≥ 100)

15.8 Configuration

Table 15-10. Configuration specifications

Parameter	Configuration range	Default setting
General		
Language	English, Chinese, Croatian, Czech, Danish, Dutch, Finnish, French, German, Greek, Hungarian, Indonesian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Romanian, Russian, Serbian, Slovak, Spanish, Swedish, Turkish	English
Units	Pressure: hPa, mbar, cmH2O CO2: mmHg, Torr, kPa Length: cm, in	cmH2O mmHg cm
More	Communication protocol: Hamilton, GALILEO compatible, Hamilton P2, Philips VueLink Open, DrägerTestProtocol, Hamilton Block Protocol	GALILEO
	Min. loudness	1
Modes		
Philosophy	Inspiratory time philosophy: I:E/Pause, TI/Pause, Peak flow/Tip Mode label: APVcmv/APVsimv or (S)CMV+/SIMV+ ASV: ASV, ASV 1.1	I:E/Pause APVcmv/APVsimv ASV 1.1

Parameter	Configuration range	Default setting
Graphics		
Main monitoring parameters (MMP) ⁸⁷	MMP 1 to 5: Pmean, PEEP/CPAP, Ppeak, ExpMinVol, VTI, VTE, VLeak, fTotal, fSpont, Oxygen, Cstat, Rinsp, I:E, TI, TE, MVSpont, AutoPEEP, P0.1, PTP, RCexp, Pplateau, VTESpont, MVLeak, Insp Flow, Exp Flow, Vt/IBW, Vt/Weight	Ppeak ⁸⁸ , ExpMinVol, VTE, fTotal, I:E
Settings	For all mode, control, and alarm settings, see the appropriate tables in this chapter.	
Setups	This information applies to the default adult Quick setup configurations. You can also specify default neonatal settings.	
Mode Ctrls	Vt/IBW (Adult/Ped): 5 to 12 ml/kg Vt/Weight (Neonatal): 5 to 12 ml/kg	Adult/Ped: 8 ml/kg Neonatal: 5 ml/kg
Vent Status		
Oxygen ⁸⁹ (%)	22 to 80	40
PEEP ⁹⁰ (cmH2O)	1 to 20	8
Pinsp (cmH2O)	1 to 50	10
%MinVol high (%)	100 to 250	150
%MinVol low (%)	25 to 99	50
RSB high (1 / (l*min))	50 to 150	100
RSB low (1 / (l*min))	0 to 49	10
%fSpont ⁹¹ (%)	0 to 99	75

⁸⁷ Additional parameters available when the CO2 or SpO2 options are installed.

⁸⁸ The default setting is configurable. However, Ppeak is always set as an MMP.

⁸⁹ The low Oxygen setting is always 21%.

⁹⁰ The low PEEP setting is always 0 cmH2O.

⁹¹ The high %fSpont setting is always 100%.

15.9 ASV technical data

Table 15-11. ASV technical data

ASV-related data	Specifications
ASV-related operator settings	
%MinVol	25% to 350%
Patient height	Adults: 130 to 250 cm / 50 to 100 in Pediatric: 30 to 150 cm / 12 to 60 in
Internal calculations	
IBW	In kg, calculated based on patient height and sex (see Section 5.3)
MinVol (target)	In l/min, target minute volume is calculated as: $IBW \text{ (in kg)} \times \text{NormMinVent (in l/kg/min)} \times \%MinVol/100$ where NormMinVent is the normal minute ventilation from Figure 7-19.
fTotal	In b/min
VDaw	2.2 ml/kg IBW
Vt (target)	MinVol/ f(target)
ASV monitor	
Target values (numerical)	MinVol, Vt, fTotal
Current achieved values (numerical)	MinVol, Vt, fTotal, $Vt = (VTI+VTE)/2$
Status of patient (numerical)	fSpont, fControl, Pinsp
Graphics display (curve)	fTotal versus Vt, target value, current value, safety boundaries
Alarms	
All alarms are functional except apnea alarms	See Chapter 9
Special	ASV: Cannot meet target alarm

ASV-related data	Specifications
Performance specifications	
Response time (90% of steady state)	< 1 min (typical)
Overshoot/undershoot	< 25%
Maximum pressure change per breath	2 cmH ₂ O
Settling time	< 120 seconds
Steady state deviation	< 10%
Lung-protective rules	
Minimum V _t	4.4 ml/kg x IBW
Maximum V _t depends on	• High Pressure alarm limit • Volume/ pressure ratio (V/P) • Always < 15 ml/kg x IBW⁹² • Limited to 1.5 x high V_t limit
Maximum machine rate	The maximum rate in ASV is the smallest value of the following conditions: • 60 b/min • 23 b/min * %MinVol/100 / (IBW = 30 kg) • 23 b/min * %MinVol/ (0.5 to 100 depending on IBW) (IBW < 30 kg) • 20/RCexp
Minimum target rate	5 to 15 b/min (depending on IBW)
Minimum P _{insp}	5 cmH ₂ O above PEEP/CPAP
Maximum P _{insp}	High Pressure alarm limit – 10 cmH ₂ O – PEEP
Minimum inspiratory time (T _I)	0.5 s or RC _{exp} , whichever is longer
Maximum inspiratory time (T _I)	IBW = 30 kg: 2 seconds IBW < 30 kg: 1.5 seconds
Minimum expiratory time (T _e)	0.5 s or 2 x RC _{exp} , whichever is longer
Maximum expiratory time (T _e)	12 seconds
I:E range	1:4 to 1:1

⁹² Only applicable to ASV 1.1.

15.10 Ventilator breathing system specifications

Table 15-12. Ventilator breathing system specifications

Parameter	Specification	
Resistance ⁹³	Adult circuit (ID22, flow of 30 l/min)	Inspiratory limb: < 0.06 cmH ₂ O/l/min Expiratory limb: < 0.06 cmH ₂ O/l/min
	Pediatric circuit (ID15, flow of 15 l/min)	Inspiratory limb: < 0.12 cmH ₂ O/l/min Expiratory limb: < 0.12 cmH ₂ O/l/min
	Coaxial circuit (ID15, flow of 30 l/min)	Inspiratory limb: < 0.06 cmH ₂ O/l/min Expiratory limb: < 0.06 cmH ₂ O/l/min
	Neonatal circuit (ID12, flow of 2.5 l/min)	Inspiratory limb: < 0.74 cmH ₂ O/l/min Expiratory limb: < 0.74 cmH ₂ O/l/min
Compliance ⁹³	Adult circuit (ID22)	~ 2 ml/cmH ₂ O
	Pediatric circuit (ID15)	~ 1.5 ml/cmH ₂ O
	Coaxial circuit (ID15)	~ 2.5 ml/cmH ₂ O
	Neonatal circuit (ID12)	~ 0.8 ml/cmH ₂ O
Volume ⁹³	Adult circuit (ID22)	~127 ml
	Pediatric circuit (ID15)	~75 ml
	Coaxial circuit (ID15)	~150 ml
	Neonatal circuit (ID12)	~ 45 ml
Bacteria filter	Particle size	Captures particles of 0.3 mm (micron) with > 99.99% efficiency
	Resistance	< 1.3 cmH ₂ O at 20 l/min
Flow sensor dead space	Adult/pediatric	< 9 ml (single use)
		< 11 ml (reusable)
	Neonatal	< 1.3 ml

⁹³ As tested, the inspiratory limb includes ambient valve, flow sensor, inspiratory filter, inspiratory tubes, and humidifier. It does not include the heating wire. The expiratory limb includes expiratory tubes, water trap, expiratory valve, and flow sensor.

15.11 Technical performance data

Table 15-13. Technical performance data

Description	Specification
Patient ideal body weight (IBW, determined from Pat. height setting)	3 to 139 kg (6.6 to 306 lb) ⁹⁴
Weight (used for neonatal patients)	0.2 to 30 kg (0.44 to 66 lb)
Inspiratory pressure	0 to 60 cmH2O
Maximum limited pressure	70 cmH2O
Maximum working pressure	60 cmH2O (total inspiratory pressure). Ensured through pressure limiting
Maximum inspiratory flow	240 l/min (150 l/min with 100% O2)
Tidal volume/target tidal volume	<i>Adult/Ped.</i> 20 to 2000 ml <i>Neonatal.</i> 2 to 300 ml
Minute volume capability	Up to 60 l/min
Inspiratory time (spontaneous breaths)	0.2 to 3 seconds
Minimum expiratory time	20% of cycle time; 0.2 to 0.8 seconds
Automatic expiratory base flow	Fixed at 6 l/min
Means of inspiratory triggering	Flow trigger control, pressure trigger control
Oxygen mixer accuracy	± (volume fraction of 2.5% + 2.5% of actual reading)
O2 input flow	80 l/min (at 2.8 bar / 280 kPa / 41 psi input pressure)

⁹⁴ Actual patient weight can be much greater (e.g., 300 kg or 661 lb).

Description	Specification	
Measuring devices		
Continuous oxygen measurement	The delivered oxygen concentration is continuously measured when an O2 cell is enabled.	
	Type of sensor: Galvanic O2 cell	
	Sensing position:	Inspiratory pneumatics
	Measurement, delivered oxygen concentration, range:	18% to 105%
	Response time:	< 45 seconds to reach 90% of final oxygen concentration
	Initialization time (time from turning on device to operating performance):	< 40 seconds
	Drift:	≤ 2.5% at 60% Oxygen over 6 hours
	Storage temperature:	To maximize the shelf life of unused galvanic O2 cells, store them between 5°C and 15°C (41°F and 59°F).
Pressure and volume measurements	Type:	Differential pressure transducer, variable orifice
	Sensing position:	Patient Y-piece
	Measurements:	See Table 15-6
CO2 measurement	Two types of CO2 sensors are supported: CAPNOSTAT-5 (mainstream) and LoFlo (sidestream)	
	Type: CAPNOSTAT 5	
	Sensing position:	Mainstream
	Principle of operation:	Nondispersive infrared (NDIR) technology
	Measurements:	See Table 15-6
	Rise time:	< 60 ms
	Initialization time:	Capnogram displayed in < 15 seconds at an ambient temperature of 25°C, full specifications within 2 minutes
	Sampling frequency:	100 Hz

Description	Specification	
CO2 measurement	CO2 calculation method:	BTPS
	CO2 stability ⁹⁵ :	Short-term drift: ≤ 0.8 mmHg over 4 hours Long-term drift: Accuracy specification maintained over 120 hours
	CO2 noise (rms):	≤ 0.25 mmHg at 7.5% CO2
	Operating conditions:	Temperature: 0°C to 45°C (32°F to 113°F) Humidity: 10% to 90% relative humidity, non-condensing Pressure (barometric + airway pressure): 400 mmHg to 850 mmHg
	Storage conditions:	Temperature: -40°C to 70°C (-40°F to 158°F) Humidity: < 90% relative humidity, noncondensing Pressure (atmospheric): 375 mmHg to 795 mmHg
CO2 measurement	Type: LoFlo	
	Sensing position:	Sidestream
	Principle of operation:	Nondispersive infrared (NDIR) technology
	Measurements:	See Table 15-6
	Rise time:	200 ms for on-airway adapter kits Additional 30 ms for sidestream sampling cannulas. Additional 80 ms for extension line and dehumidification tubing.
	Initialization time:	Capnogram displayed in < 20 seconds at an ambient temperature of 25°C, full specifications within 2 minutes
	Sampling frequency:	100 Hz
	Gas sampling rate:	50 ml/min ±10 ml/min
	CO2 calculation method:	Actual, corrected for temperature and pressure in the sample cell

⁹⁵ Neither humidity (noncondensing) nor cyclical pressures have any effect on the stated accuracy of the device.

Description	Specification	
CO2 measurement	CO2 stability ⁹⁵ :	Short-term drift: ≤ 0.8 mmHg over 4 hours Long-term drift: Accuracy specification maintained over 120 hours
	CO2 noise (rms):	≤ 0.25 mmHg at 5% CO2
	Sensing position:	Inside ventilator
	Measurements:	See Table 15-6
	Operating conditions:	Temperature: 0°C to 40°C (32°F to 104°F) Humidity: 10% to 90% relative humidity, non-condensing Pressure (barometric + airway pressure): 400 mmHg to 800 mmHg
	Storage conditions:	Temperature: -40°C to 70°C (-40°F to 158°F) Humidity: 10% to 90% relative humidity, non-condensing Pressure (atmospheric): 400 mmHg to 800 mmHg
Tests and special functions	Tightness test, flow sensor/O2 cell/CO2 sensor zero calibration, O2 enrichment, manual breath, inspiratory/expiratory hold maneuver, nebulization, leak compensation, communication interface, compensation of breathing circuit resistance and compliance	
Display device	Display of settings, alarms, and monitored data Type: Color TFT Size: 1280 x 800 pixels, 12.1 in (307.3 mm) diagonal	
Brightness setting for display	The range is 10% to 100% brightness. By default, Day = 80%; Night = 40%.	
Alarm volume (Loudness ⁹⁶)	The range is 1 to 10. <i>Adult/Ped</i> : 5 (default); <i>Neonatal</i> : 3 (default)	
Sound power level ⁹⁷	51 dB(A) ± 3 dB(A)	
Sound pressure level ⁹⁷	43 dB(A) ± 3 dB(A)	

⁹⁶ Volume at 1 meter distance from ventilator. A setting of 1 = 60 dB(A), 5 = 70 dB(A), and 10 = 83 dB(A), with accuracy of ± 3 dB(A).

⁹⁷ Per ISO 80601-2-12.

15.11.1 Accuracy testing

The ventilator’s parameter and measurement accuracy is tested using an IMT FlowAnalyser⁵. The tolerance intervals for the data generated by the FlowAnalyser are as specified below, and are included in the accuracy information provided in this manual.

Table 15-14. Tolerance intervals for accuracy testing

Parameter type	Tolerance interval of measurement
Volume	≤ 50 ml: ±1% > 50 ml: ±1.75%
Pressure	±0.5% or ±0.1 cmH2O, whichever is greater
Flow	±1.75% or ±0.5 l/min, whichever is greater
O2	±1%

15.11.2 Essential performance

Table 15-15. Essential performance

Component	Requirement
Gas supply failure	Gas supply failure must be detected and the operator informed.
Oxygen level alarm condition	If O2 is higher or lower than the set alarm limits or the O2 sensor fails, this must be detected and the operator informed through an alarm.
CO2 level alarm condition ⁹⁸	If CO2 is higher or lower than the set alarm limits or the CO2 sensor fails, this must be detected and the operator informed through an alarm.

⁹⁸ If option is installed.

Component	Requirement
SpO2 level alarm condition ⁹⁸	If SpO2 is higher or lower than the set alarm limits or the SpO2 sensor fails, this must be detected and the operator informed through an alarm.
Pressure	The airway pressure must be monitored. If it is higher or lower than the set alarm limits, this must be detected and the operator informed through an alarm.
Volume	The applied and expired volumes must be monitored. If they are higher or lower than the set alarm limits, this must be detected and the operator informed through an alarm.
Electrical supply failure	An electrical supply failure must be detected and the operator informed.
Internal electrical power source nears depletion	The remaining battery capacity must be monitored and qualitatively indicated. At least 5 min prior to depletion, an alarm must be issued.

15.12 Functional description of ventilator system

The HAMILTON-C3 is an electronically controlled pneumatic ventilation system with an integrated air compressing system. It runs on AC or DC power with battery backup to protect against power failure or unstable power and to facilitate intra-hospital transport.

The user provides inputs to the HAMILTON-C3 microprocessor system through a touch screen, keys, and a press-and-turn knob. These inputs become instructions for the HAMILTON-C3's pneumatics to deliver a precisely controlled gas mixture to the patient. The ventilator receives inputs from the proximal flow sensor and other sensors within the ventilator. Based on this monitored data, the ventilator adjusts gas delivery to the patient. Monitored data is also displayed by the graphic user interface.

The ventilator's microprocessor system controls gas delivery and monitors the patient. The gas delivery and monitoring functions are cross-checked by an alarm controller. This cross-checking helps minimize the possible hazards of software failure.

A comprehensive system of visual and audible alarms helps ensure the patient's safety. Clinical alarms can indicate an abnormal physiological condition. Technical alarms, triggered by the ventilator's self-tests including ongoing background checks, can indicate a hardware or software failure. In the case of some technical alarms, a special safety ventilation ensures basic minute ventilation while giving the operator time for corrective actions.

When a condition is critical enough to possibly compromise safe ventilation, the HAMILTON-C3 is placed into the Ambient state. The inspiratory channel and expiratory valves are opened, letting the patient inspire room air through the inspiratory channel and exhale through the expiratory valve.

The HAMILTON-C3 has several means to ensure that safe patient or respiratory pressures are maintained. The maximum working pressure is ensured by the high pressure alarm limit. If the set high pressure limit is reached, the ventilator cycles into exhalation. The ventilator pressure cannot exceed 60 cmH₂O.


15.12.1 Gas supply and delivery

The HAMILTON-C3 uses room air and high- or low-pressure oxygen (Figure 15-2). The use of medical oxygen is mandatory. Air enters through a fresh gas intake port and is compressed together with the oxygen by the blower. Oxygen enters through a high⁹⁹- or low¹⁰⁰-pressure inlet.

⁹⁹ High-pressure oxygen: Maximum allowed pressure is 600 kPa.

¹⁰⁰ Low-pressure oxygen: Maximum allowed pressure is 600 kPa, maximum allowed flow 15 l/min.

Figure 15-2. Gas delivery in the HAMILTON-C3

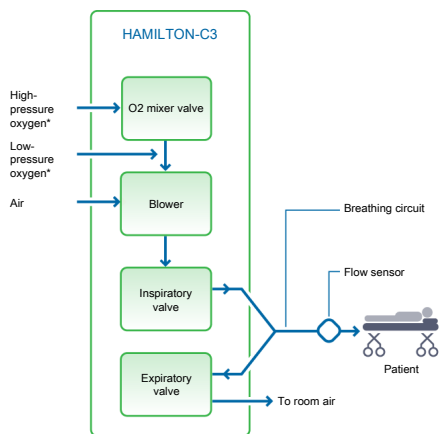

* only one oxygen source required

Within the ventilator, the gas enters the ventilator's pneumatic system. If high-pressure oxygen is supplied, a mixer valve provides for the operator-set concentration. If low-pressure oxygen is supplied, the delivered oxygen concentration is determined by the flow of the oxygen source.

Gas is supplied to the patient via the inspiratory valve. The microprocessor controls the inspiratory valve opening and the length of time it is open to meet the user settings.

The ventilator delivers gas to the patient through the inspiratory limb breathing circuit parts, which may include one or more of the following: inspiratory filter, flex tubes, humidification system, water traps, Y-piece, and flow sensor. An internal pneumatic nebulizer supplies the nebulizer flow.

Gas exhaled by the patient passes through the expiratory limb breathing circuit parts, which includes one or more of the following: flex tubes, flow sensor, Y-piece, and expiratory valve set. Gas is vented through the expiratory valve housing such that no exhaled gas comes into contact with any internal components of the ventilator. The expiratory valve is heated to reduce the possibility of rainout in the expiratory limb.

Measurements taken at the flow sensor are used in the pressure, flow, and volume measurements.

The ventilator monitors the oxygen concentration of the gas to be delivered to the patient using a galvanic O₂ cell. The galvanic O₂ cell generates a voltage proportional to the partial pressure of oxygen in the delivered gas.

 
The operations of the blower and expiratory valve are coordinated to maintain system pressure levels.

15.12.2 Gas monitoring with the flow sensor


The HAMILTON-C3 accurately measures flow, volume, and pressure in the patient's airway with the Hamilton Medical flow sensor. This proximal flow sensor lets the ventilator sense even weak patient breathing efforts. Between its highly sensitive flow trigger and fast response time, the ventilator helps minimize the patient's work of breathing.

The flow sensor contains a thin membrane within the outer housing and has a pressure port on either side. The membrane allows bidirectional flow through its variable orifice.

Adult/Ped




Neonatal

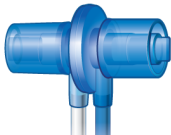

The area of the orifice changes depending on the flow rate. It opens progressively as the flow increases, creating a pressure drop across the orifice. The pressure difference is measured by a high-precision differential pressure sensor inside the ventilator. The pressure difference varies with flow (relationship determined during flow sensor calibration), so the patient's flow is determined from the pressure drop. The ventilator calculates volume from the flow measurements.

The flow sensor is highly accurate even in the presence of secretions, moisture, and nebulized medications. The ventilator flushes the sensing tubes with mixed gases (rinse flow) to prevent blockage.

15.12.3 Pneumatic diagram

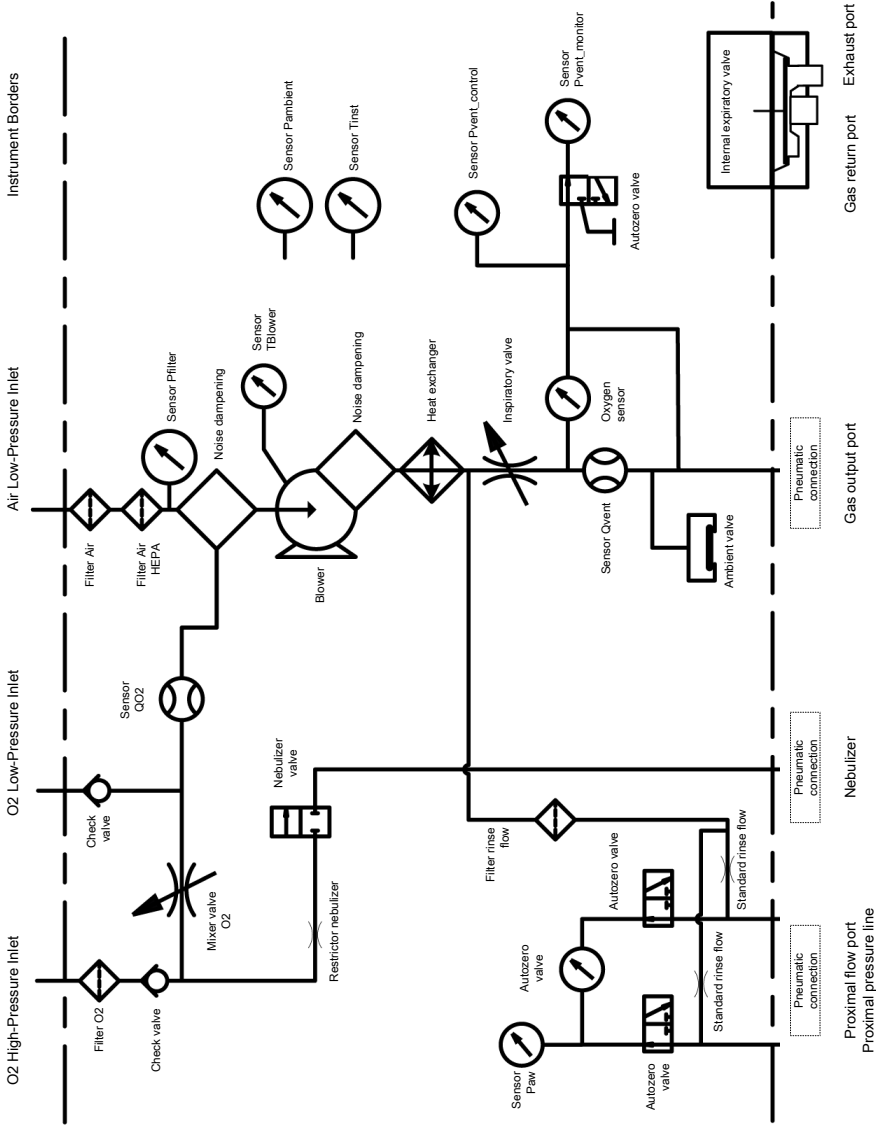

15.13 Symbols used on device labels and packaging

Table 15-16. Symbols used on device, device labels, and packaging


Symbol	Definition	Symbol	Definition
	Power/Standby key		Dispose according to Council Directive 2002/96/EC or WEEE (Waste Electrical and Electronic Equipment)
	To patient inspiratory port		Serial number
	From patient expiratory port		This way up at transport and storage
	Alarm Off		Fragile, handle with care at transport and storage
	Manufacturer		Keep dry at transport and storage
	Date of manufacture		Temperature limitations at transport and storage
	Refer to the operator's manual for complete information.		Humidity limitations at transport and storage
	Symbol for "Caution". Applied parts not protected against defibrillation.		Atmospheric pressure limitations at transport and storage
	CE Marking of Conformity, seal of approval guaranteeing that the device is in conformance with the Council Directive 93/42/EEC concerning medical devices		Stacking limitations at transport and storage
	The TÜV NRTL mark with the indicators "C" and "US" means that the product complies with Canadian requirements and the requirements of US authorities for safety.		Recyclable material
			Mass
			Single use

Symbol	Definition
	Autoclavable. Autoclavable parts can be used inside an autoclave (for example, a steam autoclave) without damage. These parts withstand temperatures up to approximately 134°C. The correct way to reprocess autoclavable parts is described in the <i>Reprocessing Guide</i> provided by the manufacturer. Parts that Hamilton Medical terms as <i>autoclavable</i> can undergo autoclaving with steam sterilization without damage.
	Reusable. A reusable part is a medical device or part of a medical device that can be reused if it undergoes some sort of reprocessing between use on different patients. The correct way to reprocess reusable parts is described in the <i>Reprocessing Guide</i> provided by the manufacturer. Parts that Hamilton Medical terms as <i>reusable</i> cannot be autoclaved with steam sterilization.
	Type B applied part (classification of medical electrical equipment, type B, as specified by IEC 60601-1)
	Type BF applied part (classification of medical electrical equipment, type BF, as specified by IEC 60601-1)

Symbol	Definition
	Applicable to neonatal patient group
	Applicable to pediatric patient group
	Applicable to adult patient group
	Applicable to neonatal/pediatric patient groups
	Applicable to pediatric/adult patient groups
	Applicable to all patient groups
	Indicates the degree of protection against electric shock according to IEC 60601-1. Class II devices have double or reinforced insulation, as they have no provision for protective grounding.
IP22	Protected against dripping water when the device is tilted to a maximum of 15 degrees, and from solid particles larger than 12.5 mm.
	HAMILTON-C3 poses unacceptable risks to the patient, medical staff, or other persons within the MR environment.
	Chinese RoHS

15.13.1 Symbols used on the trolley

 Table 15-17. HAMILTON-C3 trolley warning labels

Label	Description
	Make sure the wheel brakes are unlocked when moving the trolley.
	Do not lean on the trolley.
	Weight The maximum safe working load applies to a stationary properly load-balanced trolley.

15.14 Standards and approvals

The HAMILTON-C3 was developed in accordance with pertinent international standards and FDA guidelines.

The ventilator is manufactured within an EN ISO 13485 and EN ISO 9001, Council Directive 93/42/EEC, Annex II, Article 3 certified quality management system.

The ventilator meets the Essential Requirements of Council Directive 93/42/EEC, Annex I.

Where standards are mentioned, the HAMILTON-C3 complies with the versions listed in Table 15-19.

The ventilator meets relevant parts of the following standards, listed in Table 15-18.

Table 15-18. Standards

IEC 60601-1	Medical electrical equipment, Part 1: General requirements for basic safety and essential performance. The device classification is: Class II, Type B applied part (ventilator breathing system, VBS), type BF applied part (CO2 sensor including CO2 module connector, and SpO2 sensor including SpO2 adapter), continuous operation
IEC 60601-1-2	Medical electrical equipment - Part 1-2: General requirements for basic safety and essential performance. • Collateral standard: Electromagnetic disturbances • Requirements and tests
IEC 60601-1-10	Medical electrical equipment - Part 1-10: General requirements for basic safety and essential performance. Collateral Standard: Requirements for the development of physiologic closed-loop controllers
ISO 80601-2-12	Medical electrical equipment - Part 2-12: Particular requirements for the basic safety and essential performance of critical care ventilators
CAN/CSA-C22.2 No. 60601.1	Medical electrical equipment: General requirements for safety

ANSI/AAMI ES 60601-1	Medical electrical equipment - Part 1: General requirements for basic safety and essential performance	EN ISO 5359:2008 + A1: 2011
EN ISO 5356-1	Anaesthetic and respiratory equipment - conical connectors - Part 1: Cones and sockets	EN ISO 13485:2016
EN ISO 5359	Low-pressure hose assemblies for use with medical gases	IEC 60950-1:2005 + AMD1:2009 + AMD2:2013
EN ISO 80601-2-55	Medical electrical equipment - Part 2-55: Particular requirements for the basic safety and essential performance of respiratory gas monitors	ISO 15883-1:2006+A1:2014
		ISO 15883-2:2006
		ISO 15883-3: 2006
		ISO 15883-4:2008
		ISO 11607-1: 2006 + AMD1:2014
		EN ISO 9001:2008
		EN ISO 5356-1:2015
		ISO 4135:2001

Table 15-19. Standards and approvals, valid versions

IEC 60601-1:2005/A1:2012
ANSI/AAMI ES60601-1:2005(R)2012
CAN/CSA-C22.2 No. 60601-1:14
IEC 60601-1-2:2014
ISO 80601-2-12:2011 + Cor.:2011
ISO 80601-2-55:2018
IEC 61000-3-2:2005
IEC 61000-3-3:2008
IEC 61000-4-2:2008
IEC 61000-4-3:2006 + A1:2007+A2:2010
IEC 61000-4-4:2004
IEC 61000-4-5:2005
IEC 61000-4-6:2003+A1:2004+A2:2006
IEC 61000-4-8:2009
IEC 61000-4-11:2004

15.15 Disposal and year of manufacture

Disposal

The device must be disposed of according to your institution's protocols and Directive 2002/96/EC.

All parts removed from the device must be considered contaminated, and pose infection risk.

Dispose of all parts removed from the device according to your institution's protocol. Follow all local, state, and federal regulations with respect to environmental protection, especially when disposing of the electronic device or parts of it (for example, O2 cell, batteries).

Year of manufacture

The year of manufacture is shown on the serial number label on the HAMILTON-C3 ventilation unit.

15.16 Warranty

LIMITED WARRANTY

THE WARRANTY DESCRIBED IN THIS AGREEMENT IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HOWEVER, IMPLIED WARRANTIES ARE NOT DISCLAIMED DURING THE PERIOD OF THIS LIMITED WARRANTY.

Hamilton Medical guarantees its products to be shipped free from defects in material and workmanship.

The warranty does not include disposable items. Disposable items and consumable products are considered to be of single use or of limited use only and must be replaced regularly as required for proper operation of the product following the operator's manual.

Hamilton Medical shall have no obligations nor liabilities in connection with the product other than what is specified herein, including without limitation, obligations and/ or liabilities for alleged negligence, or for strict liability.

In no event shall the company be liable for incidental or consequential damages, either direct or contingent.

This Limited Warranty shall be void and not apply:

1. If the product has not been installed and connected by an authorized local representative of Hamilton Medical in accordance with the instructions furnished by Hamilton Medical and by a Hamilton Medical representative.
2. If replacements and/or repairs have not been performed by authorized or properly trained personnel.
3. If no evidence is present that the occurrence of damage/ repair happened within the certified warranty period.
4. If the serial number has been altered, effaced or removed and there is no bill of sale or evidence to verify the product's purchase date.
5. If the defects arise from misuse, negligence, or accidents or from repair, adjustment, modification or replacement made outside Hamilton Medical's factories or other than an authorized service center or authorized service representative.
6. If the product has been modified, or in any nature altered without prior written authorization from Hamilton Medical.
7. If yearly maintenance is not performed.
8. If the product is or has been used in any way that is not specified under "Intended Use" (see "General cautions and notes").
9. If the product has been used by anyone but properly trained personnel under the supervision of a physician. Replacements and/or repairs furnished under this Limited Warranty do not carry a new warranty, but carry only the unexpired portion of the original Limited Warranty. The warranty of repaired and/or replaced components does not exceed the Limited Warranty of the device.

To obtain service under this Limited Warranty, claimant must promptly notify the country's sales partner of Hamilton Medical regarding the nature of the problem, serial number and the date of purchase of the Product.

Except as stated above, Hamilton Medical shall not be liable for any damages, claims or liabilities including, but not limited to, personal bodily injury, or incidental, consequential, or special damages. Nor will Hamilton Medical be liable for any damages, claims or liabilities including, but not limited to, personal bodily injury, or incidental, consequential, or special damages resulting from misuse of the device or failure to comply with any of the provisions made in this manual.

The general terms and conditions of Hamilton Medical shall be applicable. This agreement shall be governed by and construed in accordance with the laws of Switzerland and may be enforced by either party under the jurisdiction of the court of Chur, Switzerland.

(S)CMV

Synchronized controlled mandatory ventilation, a ventilation mode

(S)CMV+

See APVcmv

alarm lamp

Lamp on top of the ventilator that lights in the color corresponding to the active alarm

ambient state

An emergency state in which the ventilator opens the inspiratory channel and expiratory valve; this allows the patient breathe room air unassisted by the ventilator

apnea

Cessation of breathing

APRV

Airway pressure release ventilation, a ventilation mode

APVcmv

Adaptive pressure ventilation with controlled mandatory ventilation, a ventilation mode; can also be shown as (S)CMV+ (configurable)

APVsimv

Adaptive pressure ventilation with synchronized intermittent mandatory ventilation, a ventilation mode; can also be shown as SIMV+ (configurable)

ASV

Adaptive support ventilation mode. ASV adjusts pressure and rate on a breath-by-breath basis, taking into account changing patient conditions and applying lung-protective strategies to meet the targets.

ASV Graph

An Intelligent panel that shows ASV target and patient data graphically, available in ASV mode

AutoPEEP

Unintended positive end-expiratory pressure, a monitored parameter

b/min

Breaths per minute

backup

Apnea backup ventilation

backup buzzer

A buzzer that sounds for at least 2 minutes in certain conditions; also functions as a backup for the ventilator loudspeaker

base flow

A continuous and constant gas flow from the inspiratory outlet to the expiratory outlet

breathing circuit

Breathing limbs and components used to deliver respiratory gases to the patient

BTPS

Body temperature, barometric pressure at sea level, saturated with water vapor

CE

A certification mark that indicates compliance with the Medical Device Directive, 93/42/EEC

control

A virtual dial, slider or other input icon on the display that allows you to specify the value of a setting

control setting, control parameter

Any setting that the ventilator uses as an input for the delivered ventilation therapy. For example, PEEP/CPAP, IBW or Weight, Vt, and so on. Note that some control settings, such as IBW, are not directly specified by the user.

COPD

Chronic obstructive pulmonary disease

CPAP

Continuous positive airway pressure

CSA

Canadian Standards Association

Cstat

Static compliance, a monitored parameter

DuoPAP

Duo positive airway pressure, a ventilation mode

Dynamic Lung

Intelligent panel that graphically represents tidal volume, lung compliance, patient triggering, and resistance in real time

EMC

Electromagnetic compatibility

EMI

Electromagnetic interference

EN

European norm, a European standard

ETS

Expiratory trigger sensitivity is the percent of peak inspiratory flow at which the ventilator cycles from inspiration to exhalation. Increasing the ETS setting results in a shorter inspiratory time. The ETS setting lets you match

the inspiratory time of pressure-supported breaths to the patient's neural timing.

event log

A record of clinically relevant ventilator occurrences, including alarms, settings changes, calibrations, maneuvers, and special function uses that have occurred since the ventilator was turned on

Exp Flow

Peak expiratory flow, a monitored parameter

ExpMinVol

Expiratory minute volume, a monitored parameter and alarm setting; in the Vent Status panel, ExpMinVol is the percentage of normal minute ventilation based on IBW

f

Respiratory rate

fControl

Mandatory breath frequency, a monitored parameter

FDA

United States Food and Drug Administration

FetCO2

Fractional end-tidal CO2 concentration, a monitored parameter

fSpont

Spontaneous breathing frequency, a monitored parameter

fTotal

Total breathing frequency, a monitored parameter and alarm setting

HEPA

High efficiency particle air filter

HiFlowO2

High flow oxygen therapy

HME, HMEF

Heat and moisture exchanger (artificial nose), heat and moisture exchanging filter

HPO

High-pressure oxygen

I:E

Ratio of inspiratory time to expiratory time, a setting, timing parameter, and monitored parameter

IBW

Ideal body weight, a calculated value for adult and pediatric patients based on the patient's sex and height; used as the basis for initial settings of various parameters

ID

Inner diameter

IEC

International Electrotechnical Commission

Insp Flow

Peak inspiratory flow, a monitored parameter

inspiratory hold

An inspiratory hold closes the inspiratory and expiratory valves for a short time. Perform this maneuver to calculate true plateau airway pressure.

Intelligent Panel

A type of graphic display on the ventilator

IntelliTrig

Intelligent trigger, a feature that ensures that the set trigger sensitivity can trigger a breath independent from leakage and breath pattern

IRV

Inverse ratio ventilation

ISO

International Organization for Standardization

Loops

A special graphic type

loudness

Sets the volume for the audible ventilator alarms

LPO

Low-pressure oxygen

LSF

Least squares fitting method; a mathematical procedure for finding the best fitting curve for a given set of points by minimizing the sum of the squares of the offsets of the points from the curve

mandatory breath

The start of inspiration (triggering) is determined by the ventilator or the patient. The end of inspiration (cycling) is determined by the ventilator.

manual breath

A user-triggered mandatory breath started by pressing the Manual breath key

MinVol

Minute volume, a calculated and monitored parameter used in ASV mode; based on the operator-set %MinVol, the ventilator calculates the target MinVol in l/min, then measures and displays this value in the ASV Graph

MVLeak

Total minute volume leakage; MVLeak shows VLeak * frequency (respiratory rate)

MVSpont

Spontaneous expiratory minute volume, a monitored parameter

nCPAP-PS

A neonatal ventilation mode that offers nasal continuous positive airway pressure - pressure support through a nasal interface (mask or prongs) for infants and neonates

NIST

Noninterchangeable screw thread, a standard for high-pressure gas inlet fittings

NIV

Noninvasive ventilation, a ventilation mode

NIV-ST

Spontaneous/timed noninvasive ventilation, a ventilation mode

NPPV

Noninvasive positive pressure ventilation

OD

Outer diameter

Oxygen

Oxygen concentration of the delivered gas, a control setting and a monitored parameter

P high

High pressure in APRV and DuoPAP modes

P low

Low pressure setting in APRV mode

P0.1

Airway occlusion pressure, a monitored parameter

Pasvlimit

Maximum pressure to be applied in ASV, a control setting

Pat. height

Patient height; a control setting used to compute the patient's ideal body weight (IBW) in calculations for ASV and startup settings

patient group

A control setting used to define initial startup settings for the patient; options are Adult/Ped (adult and pediatric patients) and Neonatal

Paw

Airway pressure

Pcontrol

Pressure control, a control setting in PCV+ and PSIMV+ modes; pressure (additional to PEEP/CPAP) to be applied during the inspiratory phase

PCV+

Pressure controlled ventilation, a ventilation mode

PEEP/CPAP

PEEP (positive end-expiratory pressure) and CPAP (continuous positive airway pressure), a control setting and monitored parameter; PEEP and CPAP are constant pressures applied during both the inspiratory and expiratory phases

PetCO2

Partial pressure of end-tidal CO₂, the measure of CO₂ present in the exhaled air

P_{insp}

Inspiratory pressure, the target pressure (additional to PEEP/CPAP) to be applied during the inspiratory phase. Set by the operator in the PSIMV +PSync and NIV-ST modes; displayed in the Vent Status panel and the ASV Graph.

P_{mean}

Mean airway pressure, a monitored parameter

P_N

Part number

P_{peak}

Peak airway pressure, a monitored parameter

P_{plateau}

Plateau or end-inspiratory pressure

P-ramp

Pressure ramp, a control setting

Press-and-turn knob

See P&T knob

pressure control

Maintenance of a consistent transrespiratory pressure waveform despite changing respiratory system mechanics

pressure trigger

The patient's inspiratory effort that causes the ventilator to deliver a breath, a control setting

PSIMV+

Pressure-controlled synchronized intermittent mandatory ventilation, a ventilation mode

P_{support}

Pressure support, a control setting valid during spontaneous breaths in SPONT, APVsimv, PSIMV+PSync, DuoPAP, and NIV modes. P_{support} is

pressure (additional to PEEP/CPAP) to be applied during the inspiratory phase.

PTP

Inspiratory pressure time product, a monitored parameter

Rate

Breath frequency or number of breaths per minute, a control setting

R_{Cexp}

Expiratory time constant, a monitored parameter

R_{insp}

Inspiratory flow resistance, a monitored parameter

R_{SB}

Rapid shallow breathing index, a monitored parameter

Sex

Sex of patient, a control setting

sigh

Breaths delivered to deliberately increase tidal volume at a regular interval. If enabled, a sigh breath with an additional 10 cmH₂O is delivered every 50 breaths. Note that in volume-controlled modes, a sigh breath delivering 150% of the set tidal volume is delivered every 50 breaths.

SIMV

Synchronized intermittent mandatory ventilation, a ventilation mode

SIMV+

See APVsimv

slopeCO₂

Slope of the alveolar plateau in the PetCO₂ curve, a monitored parameter

SPONT

Spontaneous (pressure support) mode of ventilation, a ventilation mode

spontaneous breath

A breath for which both the inspiratory and expiratory triggers are controlled by the patient; the patient both triggers and cycles the breath

Standby

The ventilator is in a waiting state; there is no breath delivery

STPD

Standard temperature and pressure, dry; defined as dry gas at 0°C (32°F) at 758 mmHg (101 kPa) pressure at sea level

T high

Set time interval for the high pressure level in the APRV and DuoPAP modes

T low

Set time interval for the low pressure level in APRV mode

TE

Expiratory time, a monitored parameter

technical fault

A type of alarm generated when the ventilator's ability to safely ventilate the patient may be at risk

TI

Inspiratory time, a control setting and monitored parameter

TI max

Maximum inspiratory time, a control setting

touch screen

The glass portion of the monitor that you touch to interact with the display elements

Trends

A special graphic type

trigger

The patient's inspiratory effort that causes the ventilator to deliver a breath, a control setting; controlled by flow or pressure

V'alv

Alveolar minute ventilation, a monitored parameter

V'CO2

Net exhaled volume of CO₂, a monitored parameter

VDaw

Airway dead space

VDaw/VTE

Airway dead space fraction at the airway opening, a monitored parameter

VeCO2

Expiratory CO₂ volume, a monitored parameter

Vent Status panel

An Intelligent Panel that illustrates six parameters related to the patient's ventilator dependence, including oxygenation and patient activity

ventilator breathing system (VBS)

A breathing system bounded by the low-pressure gas input port(s), the gas intake port(s), and the patient connection port, together with the fresh-gas inlet and exhaust port(s), if fresh-gas inlet or exhaust ports are provided, as described in ISO 4135

ViCO2

Inspiratory CO₂ volume, a monitored parameter

VLeak

Leakage percent, a monitored parameter

Vt

Tidal volume; a control setting, alarm setting, and monitored parameter

Vt/IBW

Tidal volume calculated according to ideal body weight, used for adult/pediatric patients; a monitored parameter

Vt/Weight

Tidal volume calculated according to actual body weight, used for neonatal patients; a monitored parameter

Vtalv

Alveolar tidal ventilation, a monitored parameter

VTE

Expiratory tidal volume, a monitored parameter; it is the integral of all negative flow measurements during exhalation

VTESpont

Spontaneous expiratory tidal volume, a monitored parameter

VTI

Inspiratory tidal volume, a monitored parameter

Waveforms

A special graphic type

Icons

- %MinVol parameter 86, 241
- (S)CMV ventilation mode 102, 104
- (S)CMV+ / APVcmv ventilation mode 107

A

- accessories, list of 228
- air/dust filters, replacing 215
- alarm test, about 77
- alarms
 - about 164
 - active, viewing 168
 - Audio pause, enabling 167
 - buffer, about 168
 - i-icon (alarm buffer) 168
 - inactive, viewing 168
 - indicators, about 164, 165
 - limits, setting 83
 - limits, where shown 166
 - list of 170
 - loudness, setting 169
 - on-screen help, accessing 169
 - responding to 167
 - silencing (Audio pause) 167
 - troubleshooting 170
- alarms, adjustable
 - about 83
 - Apnea time 84
 - ExpMinVol 84
 - fTotal 84
 - limits, setting 83
 - Oxygen 84
 - PetCO2 84
 - Pressure 84
 - Vt 85
- Ambient state 123
- Apnea backup 80, 86, 241
- Apnea time alarm 84, 254
- APRV ventilation mode 102, 114
- APVcmv / (S)CMV+ ventilation mode 102, 107
- APVsimv / SIMV+ ventilation mode 102, 108

- ASV Graph
 - about 154
 - displaying 154
- ASV ventilation mode 102, 116
 - functional overview 132
 - maintaining adequate ventilation 129
 - monitoring ventilation 130
 - weaning, overview 131
 - working with 127
- Audio pause (alarm silence)
 - alarms not affected 167
 - enabling/canceling 167
- AutoPEEP parameter 155, 247

B

- batteries
 - about 52
 - power states, about 53
 - status indicator on ventilator 53
 - storage 216
- breath timing options 100
 - selecting 221
- breath types 100
- breathing circuit diagrams (Adult/Ped)
 - high flow oxygen 45
- breathing circuit diagrams (adult/pediatric)
 - coaxial with HMEF 44
 - dual limb with humidifier 44
- breathing circuit diagrams (Neo)
 - high flow oxygen 47
 - nCPAP-PS 48
 - with HMEF 46
 - with humidifier 46
- breathing circuits
 - connection diagrams 44
 - connection overview 54
 - expiratory valve, installing 55
 - filters, using in 56
 - flow sensor, connecting 57
 - key connection ports on ventilator 55
 - positioning 58, 94
 - selecting components for (Adult/Ped) 56
 - selecting components for (Neo) 93
- buffer, alarm 168

C

- calibration
 - CO2 sensor/adaptor 75
 - flow sensor 73, 95
 - O2 cell 74
 - Tests & calibs window, accessing 70
- cleaning components and ventilator
 - agents for touch screen 212
 - cleaning agents 212
 - general guidelines 210
- CO2 alarms 84, 254
- CO2 measurement
 - activating option 224
 - CO2-related parameters 160, 250
 - enabling 64
 - mainstream monitoring, about 61
 - overview 60
 - sidestream monitoring, about 62
 - zero calibration, performing 75
- communication (COM) interface, selecting 220
- configuration
 - alarm loudness, setting minimum 221
 - breath timing options, selecting 221
 - CO2, activating option 224
 - communication (COM interface, selecting 220
 - Configuration mode, accessing 220
 - copying configuration settings to other devices 223
 - hardware options, activating/deactivating 224, 225
 - language, selecting 220
 - MMPs, selecting what to show 222
 - mode naming, selecting 221
 - options, reviewing installed 224
 - Quick setups, defining 222
 - software options, activating 224
 - software options, removing 225
 - SpO2, activating option 224
 - units of measure, selecting 220
- Control Flow parameter 156, 248
- control parameters
 - adjusting 49
 - defined 86
 - settings, changing 50, 189
- Controls window
 - opening 78
 - settings for ventilation, adjusting 78

- Cstat parameter 158, 249
 - in Dynamic Lung 151

D

- data transfer, copying configuration settings 223
- date/time, setting 196
- device information, viewing 162
- disinfecting components, guidelines for 210
- display
 - brightness, setting 197
 - navigating 49
- documentation
 - conventions used in manual 16
 - manuals for ventilator, list of 15
- DuoPAP ventilation mode 102, 113
- Dynamic Lung
 - about 150
 - airway resistance (Rinsp) 151
 - compliance (Cstat) 151
 - displaying 152
 - patient trigger 151
 - SpO2 data 151

E

- EMC-related safety information 20
- EndPEEP parameter (P/V Tool) 241
- etCO2. see PetCO2 160
- ETS parameter 86, 241
- Event log
 - about 197
 - copying 198
 - viewing 197
- Exp flow parameter 156, 248
- expiratory hold, performing 194
- expiratory valve, installing 55
- ExpMinVol parameter 156, 248
 - alarms 254

F

- fControl parameter 157, 249
- FetCO₂ parameter 160, 250
- filters, using in breathing circuit 56
- Flow parameter 86, 241
- Flow pattern parameter 86, 241
- flow sensor
 - calibration 73, 95
 - connecting (adult/pediatric) 57
 - connecting (Neo) 94
- flow-related parameters 156, 247
- fSpont parameter 157, 249
- fTotal parameter 157, 249
 - alarms 254
- function keys on front of ventilator, about 189

G

- gas source
 - selecting HPO/LPO 54
- gas source. See gas supply. 54
- gas supply
 - connecting 53
 - functional description of 267
 - LPO, connecting 54
 - LPO, overview 54
 - selecting HPO/LPO 54
- graphics on display
 - contents of, changing 142
 - Intelligent panels, about 149
 - layout, changing 142
 - loops 148
 - trends 147
 - types of 142
 - waveform view options 144

H

- Hamilton Medical College website 15
- hardware options, reviewing installed 224
- HEPA filter
 - replacing 215

- HiFlowO₂
 - about 192
 - working with 193
- high flow oxygen
 - breathing circuit diagrams (Adult/Ped) 45
 - breathing circuit diagrams (Neo) 47
- hold
 - inspiratory, performing 194
- humidifier
 - connecting 60

I

- I:E parameter 86, 157, 241, 249
- IBW parameter 86, 241
- i-icon (alarm buffer), about 168
- Insp Flow parameter 156, 247
- inspiratory hold, performing 194
- Intelligent panels
 - about 149
 - ASV Graph 154
 - Dynamic Lung 150
 - types of 142
 - Vent Status 152

K

- keys on front of ventilator, about 189

L

- language, setting 220
- leak alarms 84, 254
- Leak parameter 156
- list items, selecting 50
- loops
 - about 148
 - displaying 149
 - storing 149
 - types of 142
- loudness, setting for alarms 169
- LPO (low-pressure oxygen)
 - connecting 54
 - overview 54
 - selecting gas source 54

M

- main display, overview of 43
- main monitoring parameters (MMPs)
 - selecting what to show 222
 - viewing 140
- mainstream CO2 measurement
 - about 61
 - setting up 61
- maintenance
 - air/dust filters, replacing 215
 - battery, storage 216
 - HEPA filter, replacing 215
 - O2 cell (galvanic), replacing 216
 - preventive 214
- manual breath, delivering 193
- MinVol NIV parameter 156, 248
- modes
 - naming convention, selecting 221
- monitored parameters 155, 247
 - specifications for 247
- monitoring ventilation
 - about 140
 - main monitoring parameters (MMPs) 140
 - parameter values, viewing graphically 142
 - parameter values, viewing numeric 140
- MVLeak parameter 156, 249
- MVSpont NIV parameter 156, 248
- MVSpont parameter 156, 248
- MyHamilton website 15

N

- navigating the display 49
- nCPAP-PS ventilation mode 102, 121
- nebulizer
 - pneumatic, about 195
 - pneumatic, setting up 64
 - setting up 64
 - starting/stopping 195

- neonatal ventilation
 - breathing circuit diagrams 46, 47, 48
 - breathing circuit, setting up 93
 - flow sensor, connecting 94
 - patient data, entering 92
 - preoperational check, overview 95
 - setting up for 92

- NIV ventilation mode 102, 119
- NIV-ST ventilation mode 102, 120
- noninvasive (NIV) ventilation
 - alarms during 125
 - conditions for use 123
 - contraindications for use 124
 - notes for use 126
 - working with 123

O

- O2 cell
 - calibrating 74
 - enabling 64
 - replacing 216
- O2 enrichment, delivering 191
- options
 - hardware, activating/deactivating 224, 225
 - removing software 225
- oxygen alarms 84, 254
- Oxygen parameter 87, 158, 242, 249
 - alarm 85
 - alarms 255
- oxygen supply, connecting 53

P

- P high parameter 87, 242
- P low parameter 87, 242
- P/V Tool Pro
 - about 200
 - accessing 202
 - contraindications for use 201
 - control specifications 251
 - maneuver data, reviewing 207
 - maneuver data, views of 204
 - maneuver, performing 204
 - parameter specifications 251

- recruitment maneuver, performing 208
 - reference curves, about 207
 - settings, adjusting 203
 - using 201
 - when to use 200
 - P0.1 parameter 158, 249
 - parts, list of 228
 - Pasvlimit parameter 87, 242
 - Pat. height parameter 87, 242
 - patient data
 - changing 188
 - entering 69
 - main monitoring parameters (MMPs) 140
 - viewing graphically 142
 - viewing numeric data 140
 - patient setup
 - entering patient data 68, 92
 - overview of 68
 - Quick setups, about 69
 - Pause parameter 87, 242, 249
 - Paw (pressure/time) waveform, about 145
 - Pcontrol parameter 87, 242
 - PCV+ ventilation mode 102, 110
 - Peak flow parameter 87, 242
 - PEEP/CPAP parameter 87, 155, 243, 247
 - PetCO2 parameter 160, 250
 - alarms 255
 - Pinsp parameter 87, 155, 243, 247
 - Pmean parameter 155, 247
 - power supply
 - batteries, about 52
 - power states, about 53
 - primary power, connecting to 52
 - Ppeak parameter 156, 247
 - Pplateau parameter 156, 247
 - P-ramp parameter 88, 243
 - preconfigured settings (Quick setups), about 69
 - preoperational check
 - flow sensor calibration, performing 73, 95
 - overview 70, 71
 - overview of 95
 - performing 71, 95
 - test breathing circuit setup (adult/pediatric) 71
 - test breathing circuit setup (Neo) 95
 - testing alarms 77
 - Tests & calibs window, accessing 70
 - Tightness test, performing 72
 - preparing for ventilation, overview 52
 - pressure alarms 84, 254
 - Pressure parameter
 - alarms 255
 - pressure-related parameters 155, 247
 - PSIMV + PSync ventilation mode 102, 112
 - PSIMV+ ventilation mode 102, 111
 - Pstart parameter (P/V Tool) 243
 - Psupport parameter 88, 243
 - Ptop parameter (P/V Tool) 243
 - PTP parameter 159, 249
 - Pulse oximetry, about 63
- Q**
- Quick setups
 - about 69
 - defining new or editing existing 222
- R**
- Ramp speed parameter (P/V Tool) 243
 - rate alarms 84, 254
 - Rate parameter 88, 244
 - RCexp parameter 159, 249
 - regulatory standards, compliance with 20, 273
 - Rinsp parameter 160, 249
 - in Dynamic Lung 151
 - RSB parameter 160, 249

S

- safety information 20
 - alarms 31
 - apnea backup 30
 - breathing circuits and accessories 25
 - CO2 sensors 26
 - electrical 23
 - EMC 20
 - fire/hazards 21
 - gas supply 23
 - general operation and setup 21
 - humidifiers 26
 - maintenance and cleaning/disinfection 32
 - maintenance, cleaning/disinfection 32
 - monitoring 31
 - nebulization 28
 - neonatal ventilation 29
 - noninvasive ventilation 30
 - O2 cell 33
 - P/V Tool Pro 30
 - patient settings 29
 - power and batteries 23
 - preoperational checks 25
 - preventive maintenance 33
 - service and testing 34
 - TRC 30
 - trolley 31
 - USB port 24
- Safety ventilation, about 122
- screenshot of display, capturing 196
- sensors, enabling 64
- setting up for ventilation, overview 52
- Setups button, Configuration 222
- sex 244
- Sex parameter 88
- sidestream CO2 measurement
 - about 62
 - setting up 63
- Sigh parameter 88, 244
- SIMV ventilation mode 102, 105
- SIMV+ / APVsimv ventilation mode 108
- slopeCO2 parameter 160, 250
- software options
 - activating on ventilator 224
 - removing 225
 - reviewing installed 224
- software version, viewing 162

specifications

- accuracy testing 266
- adjustable alarms 254
- ASV technical data 259
- breathing system 261
- configuration 257
- dimensions 236
- disposal 274
- electrical 239
- environmental 237
- essential performance 266
- functional description of system 267
- gas monitoring description 269
- gas supply/delivery description 267
- monitored parameters 247
- pneumatic 238
- pneumatic diagram 270
- standards/approvals 273
- symbols used on labels 273
- technical performance data 262
- year of disposal 274
- SpO2 measurement
 - about 63
 - activating option 224
 - data displayed in Dynamic Lung 151
 - enabling 64
- SPONT ventilation mode 102, 115
- Standby
 - entering 85
 - entering/exiting 190
- starting/stopping ventilation 85
- suctioning, performing 191
- System Info window, viewing device info 162

T

- T high parameter 89, 244
- T low parameter 89, 244
- TE parameter 158, 249
- TI max parameter 89, 244
- TI parameter 89, 158, 244, 249
- Tightness test, performing 72
- time scale of waveforms, changing 146
- time/date, setting 196
- time-related parameters 157, 249
- Tip parameter 89, 244

- touch screen
 - cleaning agents for 212
- touch screen, locking/unlocking 195
- Tpause parameter (P/V Tool) 244
- transfer configuration settings 223, 224
- transport, preparing trolley for 49
- TRC (tube resistance compensation), about 81
- TRC-related parameters 89, 245
- trends
 - about 147
 - displaying 148
 - freezing 146
- trigger
 - about 79
 - selecting type of 79
- trigger parameter 90, 245
- Trigger parameter, flow 86
- Trigger parameter, pressure 88
- trolley, preparing for intrahospital transport 49
- troubleshooting
 - alarms 170
 - CO2 sensor zero calibration failure 76
 - flow sensor calibration failure 74
 - O2 cell calibration 75
 - tightness test failure 73
- turning the ventilator on/off 58

V

- V'alv parameter 161, 250
- V'CO2 parameter 161, 250
- VDaw parameter 161, 250
- VDaw/VTE parameter 161, 250
- VeCO2 parameter 161, 250
- Vent Status panel
 - about 152
 - displaying 154
 - weaning zone, configuring 223
- ventilation
 - alarms, working with 164
 - changing patient data during 188
 - control parameters, defined 86
 - monitored parameters, list of 154
 - monitoring, overview 140
 - neonatal, setting up for 92
 - preparing for, overview 52
 - settings, changing 189
 - Standby, entering/exiting 190
 - starting/stopping 85
- Ventilation counter 250
- ventilation modes
 - ASV, working with 127
 - changing 77
 - control settings overview 102
 - control settings, adjusting 78
 - modes, list of 101
 - noninvasive ventilation, working with 123
 - overview 100
 - selecting 77
- ventilation modes, list of (S)CMV 104
 - Ambient state 123
 - APRV 114
 - APVcmv 107
 - APVsimv (SIMV+) 108
 - ASV 116
 - DuoPAP 113
 - nCPAP-PS 121
 - NIV 119
 - NIV-ST 120
 - PCV+ 110
 - PSIMV+ 111
 - PSIMV+PSync 112
 - Safety ventilation 122
 - SIMV 105
 - SPONT 115
- ventilation parameters
 - control settings 86
 - monitored 155, 247
- ventilation settings
 - entering patient data 68, 92
 - how to adjust 50
 - preconfigured settings (Quick setup), about 69
- ventilation time 160
- ventilation timer
 - about 162
 - resetting 162
- ventilator
 - cleaning agents for 212
 - controls, how to use 50
 - features/options, overview of 36, 37
 - front view 40
 - hardware options, overview of 38
 - intended use 17

- main display, overview of 43
- navigating the display 49
- patient setup, overview 68
- physical characteristics 40
- rear view 41
- turning on/off 58
- ViCO2 parameter 161, 250
- VLeak parameter 156, 249
- volume alarms 84, 254
- volume-related parameters 156, 248
- Vt parameter 90, 246
 - alarms 256
- Vt/IBW parameter 157, 248
- Vt/kg parameter 90, 245
- Vt/Weight parameter 157, 245, 248
- Vtalv parameter 161, 250
- VTE NIV parameter 157, 248
- VTE parameter 157, 248
- VTEspont parameter 157, 248
- VTI parameter 157, 248

W

- warranty 275
- waveforms
 - changing selection 145
 - display options 144
 - displaying 144
 - freezing 146
 - Pressure/time (Paw), about 145
 - time scale, changing 146
 - types of 142
- Weight parameter 90, 246

Z

- zero calibration
 - performing for CO2 sensor/adapter 75



More information and free software simulation:

www.hamilton-c3.com



HAMILTON
MEDICAL

Intelligent Ventilation since 1983



Hamilton Medical AG

Via Crusch 8, 7402 Bonaduz, Switzerland

☎ +41 (0)58 610 10 20

info@hamilton-medical.com

www.hamilton-medical.com

Distributor in USA:

Hamilton Medical, Inc.

4665 Aircenter Circle Reno, NV 89502

☎ (800) 426-6331 (Toll free): (775) 858-3200

info@hamiltonmedical.com

www.hamilton-medical.com